



Bricsys®

Odniesienie do zmiennej systemowej (V23)

Dokumentacja produktu



Bricsys®



Spis treści

| | | |
|--------|---|----|
| 1. | System variable reference | 58 |
| 1.1 | System variable data types | 58 |
| 1.2 | System variables save location | 58 |
| 1.3 | Editing system variables | 59 |
| 1.4 | Searching for variables | 59 |
| 2. | | 60 |
| 2.1 | _QUADTABFLAGS system variable | 60 |
| 2.1.1 | Quad tab flags | 60 |
| 2.2 | _VERNUM system variable | 60 |
| 2.2.1 | Version number | 60 |
| 3. | 3 | 61 |
| 3.1 | 3DCOMPAREMODE system variable | 61 |
| 3.1.1 | Compare visualization mode | 61 |
| 3.2 | 3DOSMODE system variable | 61 |
| 3.2.1 | 3D entity snap mode | 61 |
| 3.3 | 3DSNAPMARKERCOLOR system variable | 62 |
| 3.3.1 | 3d snap marker color | 62 |
| 4. | A | 63 |
| 4.1 | ACADLSPASDOC system variable | 63 |
| 4.1.1 | on_start.lsp for each doc | 63 |
| 4.2 | ACADPREFIX system variable | 63 |
| 4.2.1 | Program folder path | 63 |
| 4.3 | ACADVER system variable | 63 |
| 4.3.1 | AutoCAD version | 63 |
| 4.4 | ACISHLRRESOLUTION system variable | 64 |
| 4.4.1 | Hidden line removal resolution | 64 |
| 4.5 | ACISOUTVER system variable | 64 |
| 4.5.1 | Acisout version | 64 |
| 4.6 | ADAPTIVEGRIDSTEPSize system variable | 64 |
| 4.6.1 | Adaptive grid step size | 64 |
| 4.7 | AFLAGS system variable | 65 |
| 4.7.1 | Attribute options | 65 |
| 4.8 | ALLOWBREAKLINECROSSINGS system variable | 65 |
| 4.8.1 | Allow breakline crossings | 65 |
| 4.9 | ALLOWEDBENDANGLES system variable | 65 |
| 4.9.1 | Allowed bend angles | 65 |
| 4.10 | ALLOWTABEXTERNALMOVE system variable | 66 |
| 4.10.1 | Move tabs externally (Mac & Linux) | 66 |
| 4.11 | ALLOWTABMOVE system variable | 66 |
| 4.11.1 | Move tabs (Mac & Linux) | 66 |
| 4.12 | ALLOWTABSPLIT system variable | 67 |
| 4.12.1 | Split tabs (Mac & Linux) | 67 |
| 4.13 | ANGBASE system variable | 67 |
| 4.13.1 | Angle base | 67 |
| 4.14 | ANGDIR system variable | 67 |
| 4.14.1 | Angle direction | 67 |
| 4.15 | ANGLESAMPLINGINTERVAL system variable | 68 |



Spis treści

| | | |
|--------|--|----|
| 4.15.1 | Angle sampling interval | 68 |
| 4.16 | ANNOALLVISIBLE system variable | 68 |
| 4.16.1 | Annotation visibility | 68 |
| 4.17 | ANNOAUTOSCALE system variable | 68 |
| 4.17.1 | Annotation scaling | 68 |
| 4.18 | ANNOTATIVEDWG system variable | 69 |
| 4.18.1 | Annotative drawing | 69 |
| 4.19 | ANTIALIASRENDER system variable | 69 |
| 4.19.1 | Anti-alias amount for render | 69 |
| 4.20 | ANTIALIASSCREEN system variable | 70 |
| 4.20.1 | Anti-alias amount for screen | 70 |
| 4.21 | APBOX system variable | 70 |
| 4.21.1 | Entity snap aperture box | 70 |
| 4.22 | APERTURE system variable | 71 |
| 4.22.1 | Entity snap aperture | 71 |
| 4.23 | ARCTESSELLATION system variable | 71 |
| 4.23.1 | Arc approximation mid-ordinate distance | 71 |
| 4.24 | ARCTESSELLATIONGRADING system variable | 72 |
| 4.24.1 | Arc approximation mid-ordinate distance | 72 |
| 4.25 | ARCTESSELLATIONTEMPLATEELEMENT system variable | 72 |
| 4.25.1 | Template Element arc approximation mid-ordinate distance | 72 |
| 4.26 | AREA system variable | 72 |
| 4.26.1 | Calculated area | 72 |
| 4.27 | AREAPREC system variable | 73 |
| 4.27.1 | Area precision | 73 |
| 4.28 | AREAUNITS system variable | 73 |
| 4.28.1 | Area units | 73 |
| 4.29 | ARRAYASSOCIATIVITY system variable | 74 |
| 4.29.1 | Associative arrays | 74 |
| 4.30 | ARRAYEDITSTATE system variable | 74 |
| 4.30.1 | Array editing state | 74 |
| 4.31 | ARRAYTYPE system variable | 74 |
| 4.31.1 | Array type | 74 |
| 4.32 | CIVILASSOCIATIVITY system variable | 75 |
| 4.32.1 | Associativity | 75 |
| 4.33 | ATTDIA system variable | 75 |
| 4.33.1 | Attribute dialog | 75 |
| 4.34 | ATTMODE system variable | 75 |
| 4.34.1 | Attribute display mode | 75 |
| 4.35 | ATTRACTIONDISTANCE system variable | 76 |
| 4.35.1 | Grips attraction distance | 76 |
| 4.36 | ATTREQ system variable | 76 |
| 4.36.1 | Insertion default settings | 76 |
| 4.37 | AUDITCTL system variable | 76 |
| 4.37.1 | Audit control | 76 |
| 4.38 | AUDITERORRCOUNT system variable | 77 |
| 4.38.1 | Audit Error Count | 77 |
| 4.39 | AUNITS system variable | 77 |



Spis treści

| | | |
|--------|--|----|
| 4.39.1 | Angular unit type | 77 |
| 4.40 | AUPREC system variable | 77 |
| 4.40.1 | Angular unit precision | 77 |
| 4.41 | AUTOCOMPLETEDelay system variable | 78 |
| 4.41.1 | Auto complete delay | 78 |
| 4.42 | AUTOCOMPLETEMODE system variable | 78 |
| 4.42.1 | Auto complete mode | 78 |
| 4.43 | AUTOMATICCONNECTION system variable | 79 |
| 4.43.1 | Automatic connection | 79 |
| 4.44 | AUTOMATICSTAIRSECTIONBEHAVIOR system variable | 79 |
| 4.44.1 | Automatic stair section behavior | 79 |
| 4.45 | AUTOMATICTEES system variable | 80 |
| 4.45.1 | Automatic tees | 80 |
| 4.46 | AUTOMENULOAD system variable | 80 |
| 4.46.1 | Auto menu load | 80 |
| 4.47 | AUTORESETSCALES system variable | 80 |
| 4.47.1 | Purge unused scales | 80 |
| 4.48 | AUTOSAVECHECKONLYFIRSTBITDBMOD system variable | 81 |
| 4.48.1 | Ignore all but first bit of DBMOD for autosave | 81 |
| 4.49 | AUTOSNAP system variable | 81 |
| 4.49.1 | AutoSnap | 81 |
| 4.50 | AUTOTRACKINGVECCOLOR system variable | 82 |
| 4.50.1 | Auto tracking vector color | 82 |
| 4.51 | AUTOVPFITTING system variable | 82 |
| 4.51.1 | Automatically fit viewport borders | 82 |
| 5. | B | 83 |
| 5.1 | BACKGROUNDPLOT system variable | 83 |
| 5.1.1 | Background plotting | 83 |
| 5.2 | BACKZ system variable | 83 |
| 5.2.1 | Back clipping plane offset | 83 |
| 5.3 | BASEFILE system variable | 83 |
| 5.3.1 | Template | 83 |
| 5.4 | BCFSOURCEURL system variable | 84 |
| 5.4.1 | BCF source url | 84 |
| 5.5 | BILLOFMATERIALSSETTINGS system variable | 84 |
| 5.5.1 | Bill of materials defaults | 84 |
| 5.6 | BIMACTIVATEPYTHON system variable | 84 |
| 5.6.1 | Activate Python | 84 |
| 5.7 | BIMDEFAULTPROPERTIESPATH system variable | 85 |
| 5.7.1 | Default properties path | 85 |
| 5.8 | BIMMATCHPROP system variable | 85 |
| 5.8.1 | Match BIM Properties | 85 |
| 5.9 | BIMOSMODE system variable | 85 |
| 5.9.1 | BIM snap mode | 85 |
| 5.10 | BIMPROFILESTANDARDS system variable | 86 |
| 5.10.1 | Profile's standards | 86 |
| 5.11 | BINDTYPE system variable | 86 |
| 5.11.1 | Xref bind type | 86 |



Spis treści

| | | |
|--------|--------------------------------------|----|
| 5.12 | BKGCOLOR system variable | 87 |
| 5.12.1 | Background color | 87 |
| 5.13 | BKGCOLORPS system variable | 87 |
| 5.13.1 | Paper space background color | 87 |
| 5.14 | BLIPMODE system variable | 87 |
| 5.14.1 | Blip mode | 87 |
| 5.15 | BLOCKEDITLOCK system variable | 88 |
| 5.15.1 | Block editor lock | 88 |
| 5.16 | BLOCKEDITOR system variable | 88 |
| 5.16.1 | Block editor | 88 |
| 5.17 | BLOCKIFYMODE system variable | 88 |
| 5.17.1 | Blockify settings | 88 |
| 5.18 | BLOCKIFYTOLERANCE system variable | 89 |
| 5.18.1 | Blockify tolerance | 89 |
| 5.19 | BLOCKLEVELOFDETAIL system variable | 89 |
| 5.19.1 | Block Level of detail | 89 |
| 5.20 | BLOCKSPATH system variable | 90 |
| 5.20.1 | Blocks path | 90 |
| 5.21 | BMAUTOUPDATE system variable | 90 |
| 5.21.1 | Update external components | 90 |
| 5.22 | BMFORMTEMPLATEPATH system variable | 90 |
| 5.22.1 | BMFORM template path | 90 |
| 5.23 | BMUPDATEMODE system variable | 91 |
| 5.23.1 | Assembly components updating mode | 91 |
| 5.24 | BOMFILTERSETTINGS system variable | 91 |
| 5.24.1 | Default BOM filter settings | 91 |
| 5.25 | BOMPROPERTYSET system variable | 92 |
| 5.25.1 | Default BOM property set | 92 |
| 5.26 | BOMTEMPLATE system variable | 92 |
| 5.26.1 | Default template | 92 |
| 5.27 | BOMTHUMBNAILHEIGHT system variable | 92 |
| 5.27.1 | Default thumbnail height, px | 92 |
| 5.28 | BOMTHUMBNAILWIDTH system variable | 93 |
| 5.28.1 | Default thumbnail width, px | 93 |
| 5.29 | BOUNDARYCOLOR system variable | 93 |
| 5.29.1 | Detected Boundary Color | 93 |
| 5.30 | BSYSLIBCOPYOVERWRITE system variable | 93 |
| 5.30.1 | Bsyslib copy overwrite | 93 |
| 5.31 | BVMODE system variable | 94 |
| 5.31.1 | Block Visibility Mode | 94 |
| 6. | C | 95 |
| 6.1 | CACHELAYOUT system variable | 95 |
| 6.1.1 | Cache layout | 95 |
| 6.2 | CAMERADISPLAY system variable | 95 |
| 6.2.1 | Camera display | 95 |
| 6.3 | CAMERAHEIGHT system variable | 95 |
| 6.3.1 | Camera height | 95 |
| 6.4 | CANNOSCALE system variable | 96 |



Spis treści

| | | |
|--------|---|-----|
| 6.4.1 | Annotation scale name | 96 |
| 6.5 | CANNOSCALEVALUE system variable | 96 |
| 6.5.1 | Annotation scale value | 96 |
| 6.6 | CDATE system variable | 96 |
| 6.6.1 | Calendar date | 96 |
| 6.7 | CECOLOR system variable | 96 |
| 6.7.1 | Entity color | 96 |
| 6.8 | CELTSCALE system variable | 97 |
| 6.8.1 | Entity linetype scale | 97 |
| 6.9 | CELTYPE system variable | 97 |
| 6.9.1 | Entity linetype | 97 |
| 6.10 | CELWEIGHT system variable | 97 |
| 6.10.1 | Entity lineweight | 97 |
| 6.11 | CENTERCROSSGAP system variable | 98 |
| 6.11.1 | Center mark cross gap | 98 |
| 6.12 | CENTERCROSSSIZE system variable | 98 |
| 6.12.1 | Center mark cross size | 98 |
| 6.13 | CENTEREXE system variable | 99 |
| 6.13.1 | Centerline extensions length | 99 |
| 6.14 | CENTERLAYER system variable | 99 |
| 6.14.1 | Default layer for center mark or centerline | 99 |
| 6.15 | CENTERLTSCALE system variable | 100 |
| 6.15.1 | Linetype scale for center mark or centerline | 100 |
| 6.16 | CENTERLTYPE system variable | 100 |
| 6.16.1 | Linetype for center mark or centerline | 100 |
| 6.17 | CENTERLTYPEFILE system variable | 100 |
| 6.17.1 | Linetype file for center mark or centerline | 100 |
| 6.18 | CENTERMARKEXE system variable | 100 |
| 6.18.1 | Automatic extension for center mark or centerline | 100 |
| 6.19 | CETRANSPARENCY system variable | 101 |
| 6.19.1 | Transparency for new entities | 101 |
| 6.20 | CHAMFERA system variable | 102 |
| 6.20.1 | Chamfer first distance | 102 |
| 6.21 | CHAMFERB system variable | 102 |
| 6.21.1 | Chamfer second distance | 102 |
| 6.22 | CHAMFERC system variable | 102 |
| 6.22.1 | Chamfer length | 102 |
| 6.23 | CHAMFERD system variable | 102 |
| 6.23.1 | Chamfer angle | 102 |
| 6.24 | CHAMMODE system variable | 103 |
| 6.24.1 | Chamfer mode | 103 |
| 6.25 | CHECKDWLPRESENCE system variable | 103 |
| 6.25.1 | Check Dwl file existence before open | 103 |
| 6.26 | CIRCLERAD system variable | 104 |
| 6.26.1 | Circle radius | 104 |
| 6.27 | CLAYER system variable | 104 |
| 6.27.1 | Current layer | 104 |
| 6.28 | CLEANSCREENOPTIONS system variable | 104 |



Spis treści

| | | |
|--------|--|-----|
| 6.28.1 | Clean screen options | 104 |
| 6.29 | CLEANSCREENSTATE system variable | 105 |
| 6.29.1 | Clean screen state | 105 |
| 6.30 | CLIPBOARDFORMAT system variable | 105 |
| 6.30.1 | Clipboard DWG format | 105 |
| 6.31 | CLIPBOARDFORMATS system variable | 106 |
| 6.31.1 | Clipboard Formats | 106 |
| 6.32 | CLIPROMPTLINES system variable | 106 |
| 6.32.1 | Prompt Lines | 106 |
| 6.33 | CLISTATE system variable | 107 |
| 6.33.1 | Command line state | 107 |
| 6.34 | CLOSECHECKSONLYFIRSTBITDBMOD system variable | 107 |
| 6.34.1 | Ignore all but first bit of DBMOD for close | 107 |
| 6.35 | CLOUDDOWNLOADPATH system variable | 108 |
| 6.35.1 | Cloud download path | 108 |
| 6.36 | CLOUDLOG system variable | 108 |
| 6.36.1 | Cloud log | 108 |
| 6.37 | CLOUDLOGVERBOSE system variable | 108 |
| 6.37.1 | Cloud log verbose | 108 |
| 6.38 | CLOUDONMODIFIED system variable | 109 |
| 6.38.1 | Cloud on modified | 109 |
| 6.39 | CLOUDSERVER system variable | 109 |
| 6.39.1 | Cloud server | 109 |
| 6.40 | CLOUDTEMPFOLDER system variable | 109 |
| 6.40.1 | Cloud temporary folder | 109 |
| 6.41 | CLOUDUPLOADDEPENDENCIES system variable | 110 |
| 6.41.1 | Cloud upload dependencies | 110 |
| 6.42 | CMATERIAL system variable | 110 |
| 6.42.1 | Current material | 110 |
| 6.43 | CMDACTIVE system variable | 111 |
| 6.43.1 | Active command | 111 |
| 6.44 | CMDDIA system variable | 111 |
| 6.44.1 | Command dialogs | 111 |
| 6.45 | CMDECHO system variable | 111 |
| 6.45.1 | Command echo | 111 |
| 6.46 | CMDLINEEDITBGCOLOR system variable | 112 |
| 6.46.1 | Command line edit background color | 112 |
| 6.47 | CMDLINEEDITFGCOLOR system variable | 112 |
| 6.47.1 | Command line edit foreground color | 112 |
| 6.48 | CMDLINEFADINGLOGBGCOLOR system variable | 113 |
| 6.48.1 | Command line fading log background color | 113 |
| 6.49 | CMDLINEFADINGLOGFADEDELAY system variable | 113 |
| 6.49.1 | Command line fading log fade delay | 113 |
| 6.50 | CMDLINEFADINGLOGFGCOLOR system variable | 113 |
| 6.50.1 | Command line fading log foreground color | 113 |
| 6.51 | CMDLINEFADINGLOGTRANSPARENCY system variable | 114 |
| 6.51.1 | Command line fading log transparency | 114 |
| 6.52 | CMDLINEFONTNAME system variable | 114 |



Spis treści

| | | |
|--------|---|-----|
| 6.52.1 | Command line font name_____ | 114 |
| 6.53 | CMDLINEFONTSIZE system variable_____ | 114 |
| 6.53.1 | Command line font size_____ | 114 |
| 6.54 | CMDLINEFRAMEACTIVETRANSARENCY system variable_____ | 115 |
| 6.54.1 | Command line frame transparency when active (Windows)_____ | 115 |
| 6.55 | CMDLINEFRAMEINACTIVETRANSARENCY system variable_____ | 115 |
| 6.55.1 | Command line frame transparency when inactive (Windows)_____ | 115 |
| 6.56 | CMDLINEFRAMEUSETEXTSCR system variable_____ | 115 |
| 6.56.1 | Command line frame TEXTSCR_____ | 115 |
| 6.57 | CMDLINELISTBGCOLOR system variable_____ | 116 |
| 6.57.1 | Command line list background color_____ | 116 |
| 6.58 | CMDLINELISTFGCOLOR system variable_____ | 116 |
| 6.58.1 | Command line list foreground color_____ | 116 |
| 6.59 | CMDLINEOPTIONBGCOLOR system variable_____ | 116 |
| 6.59.1 | Command line option background color_____ | 116 |
| 6.60 | CMDLINEOPTIONSHORTCUTCOLOR system variable_____ | 117 |
| 6.60.1 | Command line option shortcut color_____ | 117 |
| 6.61 | CMDLINEUSEMINIFRAME system variable_____ | 117 |
| 6.61.1 | Command line mini floating frame_____ | 117 |
| 6.62 | CMDLNTEXT system variable_____ | 117 |
| 6.62.1 | Prompt prefix_____ | 117 |
| 6.63 | CMDNAMES system variable_____ | 118 |
| 6.63.1 | Active Command Name_____ | 118 |
| 6.64 | CMLEADERSTYLE system variable_____ | 118 |
| 6.64.1 | Multileader style_____ | 118 |
| 6.65 | CMLJUST system variable_____ | 118 |
| 6.65.1 | Multiline justification_____ | 118 |
| 6.66 | CMLSCALE system variable_____ | 119 |
| 6.66.1 | Multiline scale_____ | 119 |
| 6.67 | CMLSTYLE system variable_____ | 119 |
| 6.67.1 | Multiline style_____ | 119 |
| 6.68 | CMPCLRMISS system variable_____ | 119 |
| 6.68.1 | Color for displaying of missing entities in DWGCOMPARE mode_____ | 119 |
| 6.69 | CMPCLRMOD1 system variable_____ | 120 |
| 6.69.1 | Color for displaying of modified entities in this drawing in DWGCOMPARE mode_____ | 120 |
| 6.70 | CMPCLRMOD2 system variable_____ | 120 |
| 6.70.1 | Color for displaying of modified entities in the second drawing in DWGCOMPARE mode_____ | 120 |
| 6.71 | CMPCLRNEW system variable_____ | 120 |
| 6.71.1 | Color for displaying of new entities in DWGCOMPARE mode_____ | 120 |
| 6.72 | CMPDIFFLIMIT system variable_____ | 121 |
| 6.72.1 | Maximal number of entities in the output of DWGCOMPARE command_____ | 121 |
| 6.73 | CMPFADECTL system variable_____ | 121 |
| 6.73.1 | DWGCOMPARE fade control_____ | 121 |
| 6.74 | CMPLOG system variable_____ | 121 |
| 6.74.1 | DWGCOMPARE log control_____ | 121 |
| 6.75 | COLORBOOKPATH system variable_____ | 122 |
| 6.75.1 | Color book file search path_____ | 122 |
| 6.76 | COLORTHEME system variable_____ | 122 |



Spis treści

| | | |
|--------|--|-----|
| 6.76.1 | UI color theme | 122 |
| 6.77 | COLORX system variable | 122 |
| 6.77.1 | X axis color | 122 |
| 6.78 | COLORY system variable | 123 |
| 6.78.1 | Y axis color | 123 |
| 6.79 | COLORZ system variable | 123 |
| 6.79.1 | Z axis color | 123 |
| 6.80 | COMACADCOMPATIBILITY system variable | 123 |
| 6.80.1 | COM Acad compatibility | 123 |
| 6.81 | COMBINETEXTMODE system variable | 124 |
| 6.81.1 | Options for COMBINETEXTMODE | 124 |
| 6.82 | COMMUNICATORBACKGROUNDMODE system variable | 124 |
| 6.82.1 | Perform import and export in background | 124 |
| 6.83 | COMPASS system variable | 125 |
| 6.83.1 | Compass | 125 |
| 6.84 | COMPONENTSCONFIG system variable | 125 |
| 6.84.1 | Library panel configuration | 125 |
| 6.85 | COMPONENTSPATH system variable | 125 |
| 6.85.1 | Library directory path | 125 |
| 6.86 | CONSTRAINTBARDISPLAY system variable | 125 |
| 6.86.1 | Constraint Bar Display | 125 |
| 6.87 | CONTINUOUSMOTION system variable | 126 |
| 6.87.1 | Continuous motion | 126 |
| 6.88 | CONVERTODMAX system variable | 126 |
| 6.88.1 | Maximal multiplier for outer diameter | 126 |
| 6.89 | CONVERTODMIN system variable | 126 |
| 6.89.1 | Minimal multiplier for outer diameter | 126 |
| 6.90 | CONVERTTHMAX system variable | 127 |
| 6.90.1 | Maximal multiplier for thickness | 127 |
| 6.91 | CONVERTTHMIN system variable | 127 |
| 6.91.1 | Minimal multiplier for thickness | 127 |
| 6.92 | COORDS system variable | 127 |
| 6.92.1 | Coordinates | 127 |
| 6.93 | COPYMODE system variable | 128 |
| 6.93.1 | Copy mode | 128 |
| 6.94 | CPLOTSTYLE system variable | 128 |
| 6.94.1 | Current plot style | 128 |
| 6.95 | CPROFILE system variable | 128 |
| 6.95.1 | Current profile | 128 |
| 6.96 | CREATETHUMBNAILONTHEFLY system variable | 129 |
| 6.96.1 | Create preview thumbnail on the fly | 129 |
| 6.97 | CREATESKETCHFEATURE system variable | 129 |
| 6.97.1 | Sketch based feature (experimental) | 129 |
| 6.98 | CREATEVIEWPORTS system variable | 130 |
| 6.98.1 | Automatic viewport creation | 130 |
| 6.99 | CROSSHAIRDRAWMODE system variable | 130 |
| 6.99.1 | Crosshair rendering mode | 130 |
| 6.100 | CROSSINGAREACOLOR system variable | 131 |



Spis treści

| | | |
|---------|---|-----|
| 6.100.1 | Crossing area color | 131 |
| 6.101 | CTAB system variable | 131 |
| 6.101.1 | Current tab | 131 |
| 6.102 | CTABLESTYLE system variable | 131 |
| 6.102.1 | Current table style | 131 |
| 6.103 | CTRL3DMOUSE system variable | 132 |
| 6.103.1 | 3D mouse mode | 132 |
| 6.104 | CTRLMOUSE system variable | 132 |
| 6.104.1 | Mouse shortcuts | 132 |
| 6.105 | CURSORSIZE system variable | 133 |
| 6.105.1 | Crosshairs size | 133 |
| 6.106 | CVPORT system variable | 133 |
| 6.106.1 | Current viewport | 133 |
| 6.107 | CVERSIONCONTROLPATH system variable | 133 |
| 6.107.1 | Current version control path | 133 |
| 6.108 | CLOUDSSOSCOPE system variable | 134 |
| 6.108.1 | Cloud SSO Scope | 134 |
| 6.109 | CLOUDSSOCLIENTID system variable | 134 |
| 6.109.1 | Cloud SSO Client ID | 134 |
| 6.110 | CTRLMBUTTON system variable | 134 |
| 6.110.1 | Middle Button Click | 134 |
| 7. | D | 135 |
| 7.1 | DATACOLLECTION system variable | 135 |
| 7.1.1 | Diagnostics and usage data collection | 135 |
| 7.2 | DATACOLLECTIONENABLED system variable | 135 |
| 7.2.1 | Current state of data collection | 135 |
| 7.3 | DATACOLLECTIONLOGINTYPE system variable | 136 |
| 7.3.1 | Current type of login for data collection | 136 |
| 7.4 | DATALINKNOTIFY system variable | 136 |
| 7.4.1 | Notification of data links | 136 |
| 7.5 | DATE system variable | 137 |
| 7.5.1 | Current date | 137 |
| 7.6 | DBCSTATE system variable | 137 |
| 7.6.1 | DbConnect state | 137 |
| 7.7 | DBLCLKEDIT system variable | 137 |
| 7.7.1 | Double click editing | 137 |
| 7.8 | DBMOD system variable | 138 |
| 7.8.1 | Modification status | 138 |
| 7.9 | DCTCUST system variable | 138 |
| 7.9.1 | Custom spelling dictionary | 138 |
| 7.10 | DCTMAIN system variable | 138 |
| 7.10.1 | Main spelling dictionary | 138 |
| 7.11 | DEFAULTBSYSLIBIMPERIAL system variable | 139 |
| 7.11.1 | Default Bsyslib imperial | 139 |
| 7.12 | DEFAULTBSYSLIBMETRIC system variable | 139 |
| 7.12.1 | Default Bsyslib metric | 139 |
| 7.13 | DEFAULTCURVETYPEHA system variable | 139 |
| 7.13.1 | Default curve for horizontal alignments | 139 |



Spis treści

| | | |
|--------|--|-----|
| 7.14 | DEFAULTCURVETYPEVA system variable | 140 |
| 7.14.1 | Default curve for vertical alignments | 140 |
| 7.15 | DEFAULTLIGHTING system variable | 140 |
| 7.15.1 | Default lighting | 140 |
| 7.16 | DEFAULTLIGHTSHADOWBLUR system variable | 140 |
| 7.16.1 | Default light shadow blur | 140 |
| 7.17 | DEFAULTNEWSHEETTEMPLATE system variable | 141 |
| 7.17.1 | Default new sheet template | 141 |
| 7.18 | DEFAULTPLOTSTYLETABLE system variable | 141 |
| 7.18.1 | Default plot style table | 141 |
| 7.19 | DEFAULTSPACEHEIGHT system variable | 141 |
| 7.19.1 | Default Space Height | 141 |
| 7.20 | DEFAULTSTYLEPIPECROSS system variable | 142 |
| 7.20.1 | Default style for pipe cross | 142 |
| 7.21 | DEFAULTSTYLEPIPEECCENTRICREDUCER system variable | 142 |
| 7.21.1 | Default style for pipe reducer | 142 |
| 7.22 | DEFAULTSTYLEPIPEELBOW45 system variable | 142 |
| 7.22.1 | Default style for pipe elbow (45 deg) | 142 |
| 7.23 | DEFAULTSTYLEPIPEELBOW90 system variable | 143 |
| 7.23.1 | Default style for pipe elbow (90 deg) | 143 |
| 7.24 | DEFAULTSTYLEPIPEREDUCER system variable | 143 |
| 7.24.1 | Default style for pipe reducer | 143 |
| 7.25 | DEFAULTSTYLEPIPESEGMENT system variable | 143 |
| 7.25.1 | Default style for pipe segment | 143 |
| 7.26 | DEFAULTSTYLEPIPETEE system variable | 143 |
| 7.26.1 | Default style for pipe tee | 143 |
| 7.27 | DEFLPLSTYLE system variable | 144 |
| 7.27.1 | Default layer plot style | 144 |
| 7.28 | DEFPLSTYLE system variable | 144 |
| 7.28.1 | Default entity plot style | 144 |
| 7.29 | DELETEINTERFERENCE system variable | 144 |
| 7.29.1 | Delete interference | 144 |
| 7.30 | DELETETOOL system variable | 145 |
| 7.30.1 | Delete tool | 145 |
| 7.31 | DELOBJ system variable | 145 |
| 7.31.1 | Delete entity | 145 |
| 7.32 | DEMANDLOAD system variable | 146 |
| 7.32.1 | Demand load | 146 |
| 7.33 | DETAILSPATH system variable | 146 |
| 7.33.1 | Details directory path | 146 |
| 7.34 | DGNEXPXREFMODE system variable | 147 |
| 7.34.1 | Export Conversion of Xrefs | 147 |
| 7.35 | DGNFRAME system variable | 147 |
| 7.35.1 | DGN frame | 147 |
| 7.36 | DGNIMP2DCLOSEDBSPLINECURVEIMPORTMODE system variable | 147 |
| 7.36.1 | 2D closed B-spline curve import mode | 147 |
| 7.37 | DGNIMP2DELLIPSEIMPORTMODE system variable | 148 |
| 7.37.1 | 2D ellipse import mode | 148 |



Spis treści

| | | |
|--------|--|-----|
| 7.38 | DGNIMP2DSHAPEIMPORTMODE system variable | 148 |
| 7.38.1 | 2D shape import mode | 148 |
| 7.39 | DGNIMP3DCLOSEDBSPLINECURVEIMPORTMODE system variable | 149 |
| 7.39.1 | 3D closed B-spline curve import mode | 149 |
| 7.40 | DGNIMP3DELLIPSEIMPORTMODE system variable | 149 |
| 7.40.1 | 3D ellipse import mode | 149 |
| 7.41 | DGNIMP3DOBJECTIMPORTMODE system variable | 150 |
| 7.41.1 | 3D object import mode | 150 |
| 7.42 | DGNIMP3DSHAPEIMPORTMODE system variable | 150 |
| 7.42.1 | 3D shape import mode | 150 |
| 7.43 | DGNIMPBREAKDIMENSIONASSOCIATION system variable | 150 |
| 7.43.1 | Break dimension association | 150 |
| 7.44 | DGNIMPCONVERTDGNCOLORINDICESTOTRUECOLORS system variable | 151 |
| 7.44.1 | Convert DGN color indices to true colors | 151 |
| 7.45 | DGNIMPCONVERTEMPTYDATAFIELDSTOSPACES system variable | 151 |
| 7.45.1 | Convert empty data fields to spaces | 151 |
| 7.46 | DGNIMPERASEUNUSEDRESOURCES system variable | 152 |
| 7.46.1 | Erase unused resources | 152 |
| 7.47 | DGNIMPEXPLODETEXTNODES system variable | 152 |
| 7.47.1 | Explode text nodes | 152 |
| 7.48 | DGNIMPIMPORTACTIVEMODELTOMODELSPACE system variable | 153 |
| 7.48.1 | Import active model to Model Space | 153 |
| 7.49 | DGNIMPIMPORTDGTXTSASDBMTEXTS system variable | 153 |
| 7.49.1 | Import Texts as MTexts | 153 |
| 7.50 | DGNIMPIMPORTINVISIBLEELEMENTS system variable | 153 |
| 7.50.1 | Import invisible elements | 153 |
| 7.51 | DGNIMPIMPORTPAPERSPACEMODELS system variable | 154 |
| 7.51.1 | Import Paper Space models | 154 |
| 7.52 | DGNIMPIMPORTVIEWINDEX system variable | 154 |
| 7.52.1 | Import view index | 154 |
| 7.53 | DGNIMPRECOMPUTEDIMENSIONSATERIMPORT system variable | 155 |
| 7.53.1 | Recompute dimensions after import | 155 |
| 7.54 | DGNIMPSYMBOLRESOURCEFILES system variable | 155 |
| 7.54.1 | Symbol resource files | 155 |
| 7.55 | DGNIMPXREFIMPORTMODE system variable | 155 |
| 7.55.1 | External references import mode | 155 |
| 7.56 | DGNOSNAP system variable | 156 |
| 7.56.1 | Dgn entity snap | 156 |
| 7.57 | DIASAT system variable | 156 |
| 7.57.1 | Dialog state | 156 |
| 7.58 | DIMADEC system variable | 157 |
| 7.58.1 | Dim angle precision | 157 |
| 7.59 | DIMALT system variable | 157 |
| 7.59.1 | Alt units | 157 |
| 7.60 | DIMALTD system variable | 157 |
| 7.60.1 | Alt precision | 157 |
| 7.61 | DIMALTF system variable | 158 |
| 7.61.1 | Alt multiplier | 158 |



Spis treści

| | | |
|--------|------------------------------|-----|
| 7.62 | DIMALTRND system variable | 158 |
| 7.62.1 | Alt roundoff | 158 |
| 7.63 | DIMALTTD system variable | 158 |
| 7.63.1 | Alt tolerance precision | 158 |
| 7.64 | DIMALTTZ system variable | 159 |
| 7.64.1 | Alt tolerance suppress zeros | 159 |
| 7.65 | DIMALTU system variable | 159 |
| 7.65.1 | Alt unit type | 159 |
| 7.66 | DIMALTZ system variable | 160 |
| 7.66.1 | Alt suppress zeros | 160 |
| 7.67 | DIMANNO system variable | 160 |
| 7.67.1 | Style is annotative | 160 |
| 7.68 | DIMAPOST system variable | 160 |
| 7.68.1 | Alt units prefix/suffix | 160 |
| 7.69 | DIMARCSYM system variable | 161 |
| 7.69.1 | Arc symbol | 161 |
| 7.70 | DIMASO system variable | 161 |
| 7.70.1 | Associativity (Obsolete) | 161 |
| 7.71 | DIMASSOC system variable | 161 |
| 7.71.1 | Associativity | 161 |
| 7.72 | DIMASZ system variable | 162 |
| 7.72.1 | Arrow size | 162 |
| 7.73 | DIMATFIT system variable | 162 |
| 7.73.1 | Arrow and text fit | 162 |
| 7.74 | DIMAUNIT system variable | 162 |
| 7.74.1 | Dim angle units | 162 |
| 7.75 | DIMAZIN system variable | 163 |
| 7.75.1 | Suppress angle zeros | 163 |
| 7.76 | DIMBLK system variable | 163 |
| 7.76.1 | Arrow | 163 |
| 7.77 | DIMBLK1 system variable | 164 |
| 7.77.1 | Arrow 1 | 164 |
| 7.78 | DIMBLK2 system variable | 164 |
| 7.78.1 | Arrow 2 | 164 |
| 7.79 | DIMCEN system variable | 164 |
| 7.79.1 | Center mark | 164 |
| 7.80 | DIMCLRD system variable | 165 |
| 7.80.1 | Dim line color | 165 |
| 7.81 | DIMCLRE system variable | 165 |
| 7.81.1 | Ext line color | 165 |
| 7.82 | DIMCLRT system variable | 165 |
| 7.82.1 | Text color | 165 |
| 7.83 | DIMDEC system variable | 166 |
| 7.83.1 | Dim precision | 166 |
| 7.84 | DIMDLE system variable | 166 |
| 7.84.1 | Dim line ext | 166 |
| 7.85 | DIMDLI system variable | 166 |
| 7.85.1 | Dim baseline spacing | 166 |



Spis treści

| | | |
|---------|----------------------------------|-----|
| 7.86 | DIMDSEP system variable | 167 |
| 7.86.1 | Decimal separator | 167 |
| 7.87 | DIMEXE system variable | 167 |
| 7.87.1 | Ext line ext | 167 |
| 7.88 | DIMEXO system variable | 167 |
| 7.88.1 | Ext line offset | 167 |
| 7.89 | DIMFIT system variable | 168 |
| 7.89.1 | Dimension text fit (Obsolete) | 168 |
| 7.90 | DIMFRAC system variable | 168 |
| 7.90.1 | Fractional type | 168 |
| 7.91 | DIMFXL system variable | 168 |
| 7.91.1 | Ext line fixed length | 168 |
| 7.92 | DIMFXLON system variable | 169 |
| 7.92.1 | Ext line fixed | 169 |
| 7.93 | DIMGAP system variable | 169 |
| 7.93.1 | Text offset | 169 |
| 7.94 | DIMJOGANG system variable | 169 |
| 7.94.1 | Jogged angle | 169 |
| 7.95 | DIMJUST system variable | 170 |
| 7.95.1 | Horizontal text position | 170 |
| 7.96 | DIMLAYER system variable | 170 |
| 7.96.1 | Default layer for new dimensions | 170 |
| 7.97 | DIMLDRBLK system variable | 171 |
| 7.97.1 | Leader arrow | 171 |
| 7.98 | DIMLFAC system variable | 171 |
| 7.98.1 | Dim scale linear | 171 |
| 7.99 | DIMLIM system variable | 171 |
| 7.99.1 | Tolerance method | 171 |
| 7.100 | DIMLTEX1 system variable | 171 |
| 7.100.1 | Ext line 1 linetype | 171 |
| 7.101 | DIMLTEX2 system variable | 172 |
| 7.101.1 | Ext line 2 linetype | 172 |
| 7.102 | DIMLTYPE system variable | 172 |
| 7.102.1 | Dim line linetype | 172 |
| 7.103 | DIMLUNIT system variable | 172 |
| 7.103.1 | Dim units | 172 |
| 7.104 | DIMLWD system variable | 173 |
| 7.104.1 | Dim line lineweight | 173 |
| 7.105 | DIMLWE system variable | 173 |
| 7.105.1 | Ext line LW | 173 |
| 7.106 | DIMMARKTYPE system variable | 174 |
| 7.106.1 | Dimension override marking | 174 |
| 7.107 | DIMPOST system variable | 174 |
| 7.107.1 | Dim prefix/suffix | 174 |
| 7.108 | DIMRND system variable | 174 |
| 7.108.1 | Dim round | 174 |
| 7.109 | DIMSAH system variable | 175 |
| 7.109.1 | Arrowheads | 175 |



Spis treści

| | | |
|---------|-----------------------------|-----|
| 7.110 | DIMSCALE system variable | 175 |
| 7.110.1 | Dim scale overall | 175 |
| 7.111 | DIMSD1 system variable | 176 |
| 7.111.1 | Dim line 1 | 176 |
| 7.112 | DIMSD2 system variable | 176 |
| 7.112.1 | Dim line 2 | 176 |
| 7.113 | DIMSE1 system variable | 176 |
| 7.113.1 | Ext line 1 | 176 |
| 7.114 | DIMSE2 system variable | 177 |
| 7.114.1 | Ext line 2 | 177 |
| 7.115 | DIMSHO system variable | 177 |
| 7.115.1 | Dimension show (Obsolete) | 177 |
| 7.116 | DIMSOXD system variable | 177 |
| 7.116.1 | Dim line inside | 177 |
| 7.117 | DIMSTYLE system variable | 178 |
| 7.117.1 | Dimension style | 178 |
| 7.118 | DIMTAD system variable | 178 |
| 7.118.1 | Vertical text position | 178 |
| 7.119 | DIMTDEC system variable | 178 |
| 7.119.1 | Tolerance precision | 178 |
| 7.120 | DIMTFAC system variable | 179 |
| 7.120.1 | Tolerance text height | 179 |
| 7.121 | DIMTFILL system variable | 179 |
| 7.121.1 | Text fill | 179 |
| 7.122 | DIMTFILLCLR system variable | 179 |
| 7.122.1 | Text fill color | 179 |
| 7.123 | DIMTIH system variable | 180 |
| 7.123.1 | Text inside align | 180 |
| 7.124 | DIMTIX system variable | 180 |
| 7.124.1 | Text inside | 180 |
| 7.125 | DIMTM system variable | 181 |
| 7.125.1 | Tolerance limit lower | 181 |
| 7.126 | DIMTMOVE system variable | 181 |
| 7.126.1 | Text movement | 181 |
| 7.127 | DIMTOFL system variable | 181 |
| 7.127.1 | Dim line forced | 181 |
| 7.128 | DIMTOH system variable | 182 |
| 7.128.1 | Text outside align | 182 |
| 7.129 | DIMTOL system variable | 182 |
| 7.129.1 | Tolerance display | 182 |
| 7.130 | DIMTOLJ system variable | 182 |
| 7.130.1 | Tolerance pos vert | 182 |
| 7.131 | DIMTP system variable | 183 |
| 7.131.1 | Tolerance limit upper | 183 |
| 7.132 | DIMTSZ system variable | 183 |
| 7.132.1 | Dim tick size | 183 |
| 7.133 | DIMTVP system variable | 184 |
| 7.133.1 | Text offset vert | 184 |



Spis treści

| | | |
|---------|---|-----|
| 7.134 | DIMTXSTY system variable | 184 |
| 7.134.1 | Text style | 184 |
| 7.135 | DIMTXT system variable | 184 |
| 7.135.1 | Text height | 184 |
| 7.136 | DIMTXTDIRECTION system variable | 184 |
| 7.136.1 | Text direction | 184 |
| 7.137 | DIMTZIN system variable | 185 |
| 7.137.1 | Tolerance suppress zeros | 185 |
| 7.138 | DIMUNIT system variable | 185 |
| 7.138.1 | Dim unit type (Obsolete) | 185 |
| 7.139 | DIMUPT system variable | 186 |
| 7.139.1 | Place text manually | 186 |
| 7.140 | DIMZIN system variable | 186 |
| 7.140.1 | Suppress dim zeros | 186 |
| 7.141 | DISPLAYAXES system variable | 187 |
| 7.141.1 | Display Axes | 187 |
| 7.142 | DISPLAYAXESFORMEP system variable | 187 |
| 7.142.1 | Display axes | 187 |
| 7.143 | DISPLAYSCALING system variable | 187 |
| 7.143.1 | Automatic display scaling | 187 |
| 7.144 | DISPLAYSIDESANDENDS system variable | 188 |
| 7.144.1 | Display sides and ends | 188 |
| 7.145 | DISPLAYSNAPMARKERINALLVIEWS system variable | 188 |
| 7.145.1 | Snap marker in all views | 188 |
| 7.146 | DISPLAYTOOLTIPS system variable | 189 |
| 7.146.1 | Snap tooltips | 189 |
| 7.147 | DISPPAPERBKG system variable | 189 |
| 7.147.1 | Paper background | 189 |
| 7.148 | DISPPAPERMARGINS system variable | 189 |
| 7.148.1 | Printable area | 189 |
| 7.149 | DISPSILH system variable | 190 |
| 7.149.1 | Display silhouette curves | 190 |
| 7.150 | DISTANCE system variable | 190 |
| 7.150.1 | Distance | 190 |
| 7.151 | DMAUDITLEVEL system variable | 190 |
| 7.151.1 | DMAUDIT command, level of details | 190 |
| 7.152 | DMAUTOUPDATE system variable | 191 |
| 7.152.1 | 3D constraints recalculation mode | 191 |
| 7.153 | DMCONNECTIONCUTTYPE system variable | 191 |
| 7.153.1 | Connection type | 191 |
| 7.154 | DMPUSHPULLSUBTRACT system variable | 192 |
| 7.154.1 | DMPUSHPULL subtract | 192 |
| 7.155 | DMRECOGNIZE system variable | 192 |
| 7.155.1 | Automatic 3D geometry constraints recognition | 192 |
| 7.156 | DOCKPRIORITY system variable | 193 |
| 7.156.1 | Docking Priority | 193 |
| 7.157 | DOCTABPOSITION system variable | 194 |
| 7.157.1 | Tabs position | 194 |



Spis treści

| | | |
|---------|---|-----|
| 7.158 | DONUTID system variable | 194 |
| 7.158.1 | Donut inside diameter | 194 |
| 7.159 | DONUTOD system variable | 194 |
| 7.159.1 | Donut outside diameter | 194 |
| 7.160 | DRAGMODE system variable | 195 |
| 7.160.1 | Entity dragging | 195 |
| 7.161 | DRAGMODEHIDE system variable | 195 |
| 7.161.1 | Hide original entity when dragging | 195 |
| 7.162 | DRAGMODEINTERRUPT system variable | 195 |
| 7.162.1 | Dragging interruption mode | 195 |
| 7.163 | DRAGOPEN system variable | 196 |
| 7.163.1 | Drag open | 196 |
| 7.164 | DRAGP1 system variable | 196 |
| 7.164.1 | Regen-drag rate | 196 |
| 7.165 | DRAGP2 system variable | 197 |
| 7.165.1 | Fast-drag rate | 197 |
| 7.166 | DRAGSNAP system variable | 197 |
| 7.166.1 | Snap dragged entities | 197 |
| 7.167 | DRAWINGPATH system variable | 197 |
| 7.167.1 | Drawings path | 197 |
| 7.168 | DRAWINGVIEWASM system variable | 198 |
| 7.168.1 | Assemblies optimization | 198 |
| 7.169 | DRAWINGVIEWFLAGS system variable | 198 |
| 7.169.1 | Drawing View Flags | 198 |
| 7.170 | DRAWINGVIEWPRESET system variable | 198 |
| 7.170.1 | Drawing view preset | 198 |
| 7.171 | DRAWINGVIEWPRESETHIDDEN system variable | 199 |
| 7.171.1 | Drawing view hidden lines preset | 199 |
| 7.172 | DRAWINGVIEWPRESETSCALE system variable | 199 |
| 7.172.1 | Scale for drawing view preset | 199 |
| 7.173 | DRAWINGVIEWPRESETTANGENT system variable | 199 |
| 7.173.1 | Drawing view tangent lines preset | 199 |
| 7.174 | DRAWINGVIEWPRESETTRAILING system variable | 200 |
| 7.174.1 | Drawing view trailing lines preset | 200 |
| 7.175 | DRAWINGVIEWQUALITY system variable | 200 |
| 7.175.1 | Quality of drawing views | 200 |
| 7.176 | DRAWORDERCTL system variable | 201 |
| 7.176.1 | Draworder control | 201 |
| 7.177 | DWFFORMAT system variable | 201 |
| 7.177.1 | Default DWF format | 201 |
| 7.178 | DWFFRAME system variable | 202 |
| 7.178.1 | DWF frame | 202 |
| 7.179 | DWFOSNAP system variable | 202 |
| 7.179.1 | Dwf entity snap | 202 |
| 7.180 | DWFVERSION system variable | 202 |
| 7.180.1 | DWF version | 202 |
| 7.181 | DWGCHECK system variable | 203 |
| 7.181.1 | Drawing check | 203 |



Spis treści

| | | |
|---------|---|-----|
| 7.182 | DWGCODEPAGE system variable | 203 |
| 7.182.1 | Drawing codepage | 203 |
| 7.183 | DWGGUIDCLOUDAI system variable | 204 |
| 7.183.1 | Drawing Guid | 204 |
| 7.184 | DWGNAME system variable | 204 |
| 7.184.1 | Drawing name | 204 |
| 7.185 | DWGPREFIX system variable | 204 |
| 7.185.1 | Drawing prefix | 204 |
| 7.186 | DWGTITLED system variable | 204 |
| 7.186.1 | Drawing titled | 204 |
| 7.187 | DXEVAL system variable | 205 |
| 7.187.1 | Data extraction update mode | 205 |
| 7.188 | DXFTEXTADJUSTALIGNMENT system variable | 205 |
| 7.188.1 | Dxf text adjust alignment | 205 |
| 7.189 | DYNCONSTRAINTMODE system variable | 206 |
| 7.189.1 | Dynamic Constraint Mode | 206 |
| 7.190 | DYNDIGRIP system variable | 206 |
| 7.190.1 | Show dynamic dimensions | 206 |
| 7.191 | DYNDIMAPERTURE system variable | 207 |
| 7.191.1 | Dynamic dimension aperture | 207 |
| 7.192 | DYNDIMCOLORHOT system variable | 207 |
| 7.192.1 | Dynamic dimension hot color | 207 |
| 7.193 | DYNDIMCOLORHOVER system variable | 208 |
| 7.193.1 | Dynamic dimension hover color | 208 |
| 7.194 | DYNDIMDISTANCE system variable | 208 |
| 7.194.1 | Dynamic dimension distance | 208 |
| 7.195 | DYNDIMLINETYPE system variable | 208 |
| 7.195.1 | Dynamic dimension linetype | 208 |
| 7.196 | DYNDIVIS system variable | 209 |
| 7.196.1 | Dynamic dimension visibility | 209 |
| 7.197 | DYNINPUTTRANSPARENCY system variable | 209 |
| 7.197.1 | Transparency of dynamic input fields | 209 |
| 7.198 | DYNMODE system variable | 210 |
| 7.198.1 | Dynamic input mode | 210 |
| 7.199 | DYNPICOORDS system variable | 210 |
| 7.199.1 | Default mode for dynamic coordinates input | 210 |
| 8. | E | 211 |
| 8.1 | EDGEMODE system variable | 211 |
| 8.1.1 | Edge mode | 211 |
| 8.2 | ELEVATION system variable | 211 |
| 8.2.1 | Elevation | 211 |
| 8.3 | ELEVATIONATBREAKLINECROSSINGS system variable | 212 |
| 8.3.1 | Elevation at breakline crossings | 212 |
| 8.4 | ENABLEATTRACTION system variable | 212 |
| 8.4.1 | Grips attraction | 212 |
| 8.5 | ENABLEBIMBKUPDATE system variable | 212 |
| 8.5.1 | Enable sections update in background | 212 |
| 8.6 | ENABLEHYPERLINKMENU system variable | 213 |



Spis treści

| | | |
|--------|--|-----|
| 8.6.1 | Hyperlink menu | 213 |
| 8.7 | ENABLEHYPERLINKTOOLTIP system variable | 213 |
| 8.7.1 | Hyperlink tooltip | 213 |
| 8.8 | ERRNO system variable | 213 |
| 8.8.1 | Error number | 213 |
| 8.9 | EXPERT system variable | 214 |
| 8.9.1 | Expert | 214 |
| 8.10 | EXPINSALIGN system variable | 214 |
| 8.10.1 | Explorer Insert Aligned | 214 |
| 8.11 | EXPINSANGLE system variable | 215 |
| 8.11.1 | Explorer Insert Angle | 215 |
| 8.12 | EXPINSFIXANGLE system variable | 215 |
| 8.12.1 | Explorer Insert Fix Angle | 215 |
| 8.13 | EXPINSFIXSCALE system variable | 215 |
| 8.13.1 | Explorer Insert Fix Scale | 215 |
| 8.14 | EXPINSSCALE system variable | 216 |
| 8.14.1 | Explorer Insert Scale | 216 |
| 8.15 | EXPLMODE system variable | 216 |
| 8.15.1 | Explode mode | 216 |
| 8.16 | EXPORT3DPDFWRITER system variable | 216 |
| 8.16.1 | 3D PDF writer | 216 |
| 8.17 | EXPORTACISASSEMBLYWRITER system variable | 217 |
| 8.17.1 | ASAT/ASAB writer | 217 |
| 8.18 | EXPORTACISFORMATVERSION system variable | 217 |
| 8.18.1 | ACIS export format version | 217 |
| 8.19 | EXPORTCATIAV4FORMATVERSION system variable | 218 |
| 8.19.1 | CATIA V4 export format version | 218 |
| 8.20 | EXPORTCATIAV5FORMATVERSION system variable | 218 |
| 8.20.1 | CATIA V5 export format version | 218 |
| 8.21 | EXPORTGEOMETRYFLAGS system variable | 219 |
| 8.21.1 | Export Geometry Flags | 219 |
| 8.22 | EXPORTHIDDENPARTS system variable | 220 |
| 8.22.1 | Hidden parts | 220 |
| 8.23 | EXPORTMODELSPACE system variable | 220 |
| 8.23.1 | Export model space | 220 |
| 8.24 | EXPORTPAGESETUP system variable | 221 |
| 8.24.1 | Export page setup | 221 |
| 8.25 | EXPORTPAPERSPACE system variable | 221 |
| 8.25.1 | Export paper space | 221 |
| 8.26 | EXPORTPARASOLIDFORMATVERSION system variable | 221 |
| 8.26.1 | Parasolid export format version | 221 |
| 8.27 | EXPORTPRODUCTSTRUCTURE system variable | 222 |
| 8.27.1 | Product structure | 222 |
| 8.28 | EXPORTSTEPFORMATVERSION system variable | 223 |
| 8.28.1 | STEP export format version | 223 |
| 8.29 | EXPORTXCGMFORMATVERSION system variable | 223 |
| 8.29.1 | XCGM export format version | 223 |
| 8.30 | EXTMAX system variable | 224 |



Spis treści

| | | |
|--------|--|-----|
| 8.30.1 | Extents maximum | 224 |
| 8.31 | EXTMIN system variable | 224 |
| 8.31.1 | Extents minimum | 224 |
| 8.32 | EXTNAMES system variable | 225 |
| 8.32.1 | Extend names | 225 |
| 8.33 | EXTRUDEINSIDE system variable | 225 |
| 8.34 | EXTRUDEOUTSIDE system variable | 225 |
| 9. | F | 227 |
| 9.1 | FACETRATIO system variable | 227 |
| 9.1.1 | Faceting aspect ratio | 227 |
| 9.2 | FACETRES system variable | 227 |
| 9.2.1 | Facet resolution | 227 |
| 9.3 | FBXEXPORTCAMERAS system variable | 227 |
| 9.3.1 | Fbx Export Cameras | 227 |
| 9.4 | FBXEXPORTENTITIES system variable | 228 |
| 9.4.1 | Fbx Export Entities | 228 |
| 9.5 | FBXEXPORTENTITIESSELTYPE system variable | 228 |
| 9.5.1 | Fbx entities to export | 228 |
| 9.6 | FBXEXPORTLIGHTS system variable | 229 |
| 9.6.1 | Fbx Export Lights | 229 |
| 9.7 | FBXEXPORTMATERIALS system variable | 229 |
| 9.7.1 | Fbx Export Materials | 229 |
| 9.8 | FBXEXPORTTEXTURES system variable | 229 |
| 9.8.1 | Fbx Export Textures | 229 |
| 9.9 | FBXEXPORTTEXTURESPATH system variable | 230 |
| 9.9.1 | FBX Export Textures path | 230 |
| 9.10 | FEATURECOLORS system variable | 230 |
| 9.10.1 | Feature colors | 230 |
| 9.11 | FIELDDISPLAY system variable | 230 |
| 9.11.1 | Field display | 230 |
| 9.12 | FIELDEVAL system variable | 231 |
| 9.12.1 | Field update mode | 231 |
| 9.13 | FILEDIA system variable | 231 |
| 9.13.1 | File dialog | 231 |
| 9.14 | FILLETRAD system variable | 232 |
| 9.14.1 | Fillet radius | 232 |
| 9.15 | FILLETWELDINGCOMBINEADJACENT system variable | 232 |
| 9.15.1 | Combine adjacent fillet welds | 232 |
| 9.16 | FILLETWELDINGMAXGAPRATIO system variable | 232 |
| 9.16.1 | Maximal ratio of a gap to a weld size | 232 |
| 9.17 | FILLETWELDINGZSIZE system variable | 233 |
| 9.17.1 | Default fillet weld Z size | 233 |
| 9.18 | FILLMODE system variable | 233 |
| 9.18.1 | Fill mode | 233 |
| 9.19 | FITLINEFITARCMODE system variable | 233 |
| 9.19.1 | FitLine FitArc mode | 233 |
| 9.20 | FITTINGRADIUSTYPE system variable | 234 |
| 9.20.1 | Fitting Radius Type | 234 |



Spis treści

| | | |
|---------|--------------------------------------|-----|
| 9.21 | FITTINGRADIUSVALUE system variable | 234 |
| 9.21.1 | Fitting Radius Value | 234 |
| 9.22 | FONTALT system variable | 235 |
| 9.22.1 | Alternate font | 235 |
| 9.23 | FONTMAP system variable | 235 |
| 9.23.1 | Font mapping file | 235 |
| 9.24 | FRAME system variable | 235 |
| 9.24.1 | Frame | 235 |
| 9.25 | FRAMESELECTION system variable | 236 |
| 9.25.1 | Frame selection | 236 |
| 9.26 | FRONTZ system variable | 236 |
| 9.26.1 | Front clipping plane offset | 236 |
| 9.27 | FULLOPEN system variable | 236 |
| 9.27.1 | Full open | 236 |
| 10. | G | 237 |
| 10.1 | GEARTEETHNUMBER system variable | 237 |
| 10.1.1 | Maximum number of sprocket teeth | 237 |
| 10.2 | GENERATEASSOCATTRS system variable | 237 |
| 10.2.1 | Generate associative attributes | 237 |
| 10.3 | GENERATEASSOCVIEWS system variable | 237 |
| 10.3.1 | Generate associative drawings | 237 |
| 10.4 | GEOLATLONGFORMAT system variable | 238 |
| 10.4.1 | Geographic latitude/longitude format | 238 |
| 10.5 | GEOMARKERVISIBILITY system variable | 238 |
| 10.5.1 | Geographic marker visibility | 238 |
| 10.6 | GEOMRELATIONS system variable | 239 |
| 10.6.1 | Geometric relationship indication | 239 |
| 10.7 | GETSTARTED system variable | 239 |
| 10.7.1 | Get Started | 239 |
| 10.8 | GFANG system variable | 239 |
| 10.8.1 | Gradient fill angle | 239 |
| 10.9 | GFCLR1 system variable | 240 |
| 10.9.1 | Gradient fill primary color | 240 |
| 10.10 | GFCLR2 system variable | 240 |
| 10.10.1 | Gradient fill secondary color | 240 |
| 10.11 | GFCLRLUM system variable | 240 |
| 10.11.1 | Gradient fill tint level | 240 |
| 10.12 | GFCLRSTATE system variable | 241 |
| 10.12.1 | Number of colors for a gradient fill | 241 |
| 10.13 | GFNAME system variable | 241 |
| 10.13.1 | Gradient fill name | 241 |
| 10.14 | GFSHIFT system variable | 241 |
| 10.14.1 | Gradient fill shift | 241 |
| 10.15 | GLSWAPMODE system variable | 242 |
| 10.15.1 | GL Swap Mode | 242 |
| 10.16 | GRADIENTCOLORBOTTOM system variable | 242 |
| 10.16.1 | Background gradient color bottom | 242 |
| 10.17 | GRADIENTCOLORMIDDLE system variable | 243 |



Spis treści

| | | |
|---------|----------------------------------|-----|
| 10.17.1 | Background gradient color middle | 243 |
| 10.18 | GRADIENTCOLORTOP system variable | 243 |
| 10.18.1 | Background gradient color top | 243 |
| 10.19 | GRADIENTMODE system variable | 243 |
| 10.19.1 | Background gradient mode | 243 |
| 10.20 | GRIDAXISCOLOR system variable | 244 |
| 10.20.1 | Grid axis color | 244 |
| 10.21 | GRIDDISPLAY system variable | 244 |
| 10.21.1 | Grid display | 244 |
| 10.22 | GRIDMAJOR system variable | 245 |
| 10.22.1 | Grid major | 245 |
| 10.23 | GRIDMAJORCOLOR system variable | 245 |
| 10.23.1 | Grid major color | 245 |
| 10.24 | GRIDMINORCOLOR system variable | 245 |
| 10.24.1 | Grid minor color | 245 |
| 10.25 | GRIDMODE system variable | 246 |
| 10.25.1 | Grid mode | 246 |
| 10.26 | GRIDSTYLE system variable | 246 |
| 10.26.1 | Grid style | 246 |
| 10.27 | GRIDUNIT system variable | 246 |
| 10.27.1 | Grid unit | 246 |
| 10.28 | GRIDXYZTINT system variable | 247 |
| 10.28.1 | Grid XYZ tint | 247 |
| 10.29 | GRIPBLOCK system variable | 247 |
| 10.29.1 | Grips in blocks | 247 |
| 10.30 | GRIPCOLOR system variable | 248 |
| 10.30.1 | Grip color | 248 |
| 10.31 | GRIPDYNCOLOR system variable | 248 |
| 10.31.1 | Dynamic grip color | 248 |
| 10.32 | GRIPHOT system variable | 248 |
| 10.32.1 | Selected grip color | 248 |
| 10.33 | GRIPHOVER system variable | 249 |
| 10.33.1 | Hover grip color | 249 |
| 10.34 | GRIPOBJLIMIT system variable | 249 |
| 10.34.1 | Grip object limit | 249 |
| 10.35 | GRIPS system variable | 249 |
| 10.35.1 | Grips | 249 |
| 10.36 | GRIPSIZE system variable | 250 |
| 10.36.1 | Grip size | 250 |
| 10.37 | GRIPTIPS system variable | 250 |
| 10.37.1 | Grip tips | 250 |
| 10.38 | GSDEVICETYPE2D system variable | 250 |
| 10.38.1 | 2D graphic system device | 250 |
| 10.39 | GSDEVICETYPE3D system variable | 251 |
| 10.39.1 | 3D graphic system device | 251 |
| 11. | H | 252 |
| 11.1 | HALOGAP system variable | 252 |
| 11.1.1 | Halo gap | 252 |



Spis treści

| | | |
|---------|--|-----|
| 11.2 | HANDLES system variable | 252 |
| 11.2.1 | Publish Handles | 252 |
| 11.3 | HANDSEED system variable | 252 |
| 11.3.1 | Handle seed | 252 |
| 11.4 | HIDEPRECISION system variable | 253 |
| 11.4.1 | Hide and shade precision | 253 |
| 11.5 | HIDESYSTEMPRINTERS system variable | 253 |
| 11.5.1 | Hide system printers | 253 |
| 11.6 | HIDETEXT system variable | 253 |
| 11.6.1 | Hide text on HIDE | 253 |
| 11.7 | HIDEXREFSCALES system variable | 254 |
| 11.7.1 | Hide xref scales | 254 |
| 11.8 | HIGHLIGHT system variable | 254 |
| 11.8.1 | Highlight | 254 |
| 11.9 | HIGHLIGHTCOLOR system variable | 254 |
| 11.9.1 | Selection Highlight Color | 254 |
| 11.10 | HIGHLIGHTEFFECT system variable | 255 |
| 11.10.1 | Selection Highlight Style | 255 |
| 11.11 | HORIZONBKG_ENABLE system variable | 255 |
| 11.11.1 | Horizon background | 255 |
| 11.12 | HORIZONBKG_GROUNDHORIZON system variable | 256 |
| 11.12.1 | Ground horizon | 256 |
| 11.13 | HORIZONBKG_GROUNDORIGIN system variable | 256 |
| 11.13.1 | Ground origin | 256 |
| 11.14 | HORIZONBKG_SKYHIGH system variable | 256 |
| 11.14.1 | Sky high | 256 |
| 11.15 | HORIZONBKG_SKYHORIZON system variable | 256 |
| 11.15.1 | Sky horizon | 256 |
| 11.16 | HORIZONBKG_SKYLOW system variable | 257 |
| 11.16.1 | Sky low | 257 |
| 11.17 | HOTKEYASSISTANT system variable | 257 |
| 11.17.1 | Hotkey Assistant | 257 |
| 11.18 | HPANG system variable | 257 |
| 11.18.1 | Hatch pattern angle | 257 |
| 11.19 | HPANNOTATIVE system variable | 258 |
| 11.19.1 | Hatch pattern annotative | 258 |
| 11.20 | HPASSOC system variable | 258 |
| 11.20.1 | Hatch pattern associativity | 258 |
| 11.21 | HPBACKGROUNDCOLOR system variable | 258 |
| 11.21.1 | Hatch background default color | 258 |
| 11.22 | HPBOUND system variable | 259 |
| 11.22.1 | Hatch pattern boundary | 259 |
| 11.23 | HPBOUNDRETAIN system variable | 259 |
| 11.23.1 | Hatch pattern boundary retain | 259 |
| 11.24 | HPCOLOR system variable | 259 |
| 11.24.1 | Hatch default color | 259 |
| 11.25 | HPDOUBLE system variable | 260 |
| 11.25.1 | Hatch pattern doubling | 260 |



Spis treści

| | | |
|---------|---|-----|
| 11.26 | HPDRAWORDER system variable | 260 |
| 11.26.1 | Hatch pattern draw order | 260 |
| 11.27 | HPGAPTOL system variable | 260 |
| 11.27.1 | Hatch pattern gap tolerance | 260 |
| 11.28 | HPISLANDDETECTION system variable | 261 |
| 11.28.1 | Hatch pattern island detection | 261 |
| 11.29 | HPLAYER system variable | 261 |
| 11.29.1 | Default layer for new hatches | 261 |
| 11.30 | HPLINETYPE system variable | 262 |
| 11.30.1 | Hatch pattern linetype | 262 |
| 11.31 | HPMAXAREAS system variable | 262 |
| 11.31.1 | Fill mode for sparse hatches | 262 |
| 11.32 | HPMAXCONTOURPOINTS system variable | 262 |
| 11.32.1 | Maximum number of points on a hatch contour | 262 |
| 11.33 | HPNAME system variable | 263 |
| 11.33.1 | Hatch pattern name | 263 |
| 11.34 | HPOBJWARNING system variable | 263 |
| 11.34.1 | Hatch pattern object warning | 263 |
| 11.35 | HPORIGIN system variable | 263 |
| 11.35.1 | Hatch pattern origin | 263 |
| 11.36 | HPSCALE system variable | 264 |
| 11.36.1 | Hatch pattern scale | 264 |
| 11.37 | HPSEPARATE system variable | 264 |
| 11.37.1 | Hatch pattern separate | 264 |
| 11.38 | HPSPACE system variable | 264 |
| 11.38.1 | Hatch pattern spacing | 264 |
| 11.39 | HPTRANSPARENCY system variable | 265 |
| 11.39.1 | Default transparency for new hatches | 265 |
| 11.40 | HYPERLINKBASE system variable | 265 |
| 11.40.1 | Hyperlink base | 265 |
| 12. | I | 266 |
| 12.1 | IFCCREATEUNIQUEGUID system variable | 266 |
| 12.1.1 | Export with unique guides | 266 |
| 12.2 | IFCEXPLODEEXTERNALREFERENCES system variable | 266 |
| 12.2.1 | Explode external references in IFC spatial structure | 266 |
| 12.3 | IFCEXPORTBASEQUANTITIES system variable | 266 |
| 12.3.1 | Export base quantities | 266 |
| 12.4 | IFCEXPORTELEMENTSONOFFANDFROZENLAYER system variable | 267 |
| 12.4.1 | Export elements on OFF and FROZEN layers | 267 |
| 12.5 | IFCEXPORTMAPPINGPATH system variable | 267 |
| 12.5.1 | Export mapping file path | 267 |
| 12.6 | IFCEXPORTMULTIPLYELEMENTSASAGGREGATED system variable | 267 |
| 12.6.1 | Export multi-ply elements as aggregated elements | 267 |
| 12.7 | IFCEXPORTPROFILECENTEROFGRAVITY system variable | 268 |
| 12.7.1 | Export profile center of gravity | 268 |
| 12.8 | IFCEXPORTSWEPTSOLIDSASBREP system variable | 268 |
| 12.8.1 | Always export swept solids as BRep | 268 |
| 12.9 | IFCEXPORTTESSELATION system variable | 268 |



Spis treści

| | | |
|---------|---|-----|
| 12.9.1 | Level of tessellation | 268 |
| 12.10 | IFCEXPORTVERIFYMODEL system variable | 269 |
| 12.10.1 | Apply IFC model verification | 269 |
| 12.11 | IFCIMPORTBIMDATA system variable | 269 |
| 12.11.1 | Import BIM Data | 269 |
| 12.12 | IFCIMPORTBREPGEOMETRYASMESHES system variable | 269 |
| 12.12.1 | Import BREP geometry as meshes | 269 |
| 12.13 | IFCIMPORTMAPPINGPATH system variable | 270 |
| 12.13.1 | Import mapping file path | 270 |
| 12.14 | IFCIMPORTMODELORIGIN system variable | 270 |
| 12.14.1 | Import model position | 270 |
| 12.15 | IFCIMPORTPARAMETRICCOMPONENTS system variable | 270 |
| 12.15.1 | Import Parametric Components | 270 |
| 12.16 | IFCIMPORTPROJECTSTRUCTUREASXREFS system variable | 271 |
| 12.16.1 | Import IFC project structure as xrefs | 271 |
| 12.17 | IFCIMPORTSPACES system variable | 271 |
| 12.17.1 | Import Spaces | 271 |
| 12.18 | IFCIMPORTUSESUBDMESH system variable | 272 |
| 12.18.1 | Import IFC meshes as subdivision meshes | 272 |
| 12.19 | IFCMATCHIMPORTEDPROFILESGEOMETRICALLY system variable | 272 |
| 12.19.1 | Import: use profiles from databases with corresponding geometry | 272 |
| 12.20 | IFCTESSELATEBSPLINECURVESANDSURFACES system variable | 272 |
| 12.20.1 | Tesselate complex curves and surfaces | 272 |
| 12.21 | IMAGECACHEFOLDER system variable | 273 |
| 12.21.1 | Image disk cache folder | 273 |
| 12.22 | IMAGECACHEMAXMEMORY system variable | 273 |
| 12.22.1 | Maximum used memory | 273 |
| 12.23 | IMAGEDISKCACHE system variable | 273 |
| 12.23.1 | Image disk cache | 273 |
| 12.24 | IMAGEFRAME system variable | 274 |
| 12.24.1 | Image frame | 274 |
| 12.25 | IMAGEHLT system variable | 274 |
| 12.25.1 | Image highlight | 274 |
| 12.26 | IMAGENOTIFY system variable | 274 |
| 12.26.1 | Image notify | 274 |
| 12.27 | IMPORTACISWITHBRICSCAD system variable | 275 |
| 12.27.1 | Import ACIS using built-in importer | 275 |
| 12.28 | IMPORTCATIAV5REPRESENTATION system variable | 275 |
| 12.28.1 | Import representation | 275 |
| 12.29 | IMPORTCATIAV5EDGEATTRIBUTES system variable | 275 |
| 12.29.1 | Import edge attributes mode | 275 |
| 12.30 | IMPORTCATIAV5SEARCHPATHSPREFERENCE system variable | 276 |
| 12.30.1 | Search paths preference | 276 |
| 12.31 | IMPORTCREOCONFIGURATION system variable | 276 |
| 12.31.1 | Import Creo configuration | 276 |
| 12.32 | IMPORTCREOALTERNATESEARCHPATHS system variable | 277 |
| 12.32.1 | Alternate search paths | 277 |
| 12.33 | IMPORTIGESSTITCH system variable | 277 |



Spis treści

| | | |
|---------|---|-----|
| 12.33.1 | Perform stitching | 277 |
| 12.34 | IMPORTINVENTORSEARCHPATHSPREFERENCE system variable | 277 |
| 12.34.1 | Search paths preference | 277 |
| 12.35 | IMPORTNXCONFIGURATION system variable | 278 |
| 12.35.1 | Import NX configuration | 278 |
| 12.36 | IMPORTNXSEARCHPATHSPREFERENCE system variable | 278 |
| 12.36.1 | Search paths preference | 278 |
| 12.37 | IMPORTJTREPRESENTATION system variable | 279 |
| 12.37.1 | Import representation | 279 |
| 12.38 | IMPORTCOLORS system variable | 279 |
| 12.38.1 | Translate colors | 279 |
| 12.39 | IMPORTCUIFILEEXISTS system variable | 279 |
| 12.39.1 | Import cui file exists | 279 |
| 12.40 | IMPORTHIDDENPARTS system variable | 280 |
| 12.40.1 | Hidden parts | 280 |
| 12.41 | IMPORTIGESSIMPLIFY system variable | 280 |
| 12.41.1 | Perform simplification | 280 |
| 12.42 | IMPORTINVENTORALTERNATESEARCHPATHS system variable | 281 |
| 12.42.1 | Alternate search paths | 281 |
| 12.43 | IMPORTNXALTERNATESEARCHPATHS system variable | 281 |
| 12.43.1 | Alternate search paths | 281 |
| 12.44 | IMPORTPMI system variable | 281 |
| 12.44.1 | Product and manufacturing information | 281 |
| 12.45 | IMPORTPRODUCTSTRUCTURE system variable | 282 |
| 12.45.1 | Product structure | 282 |
| 12.46 | IMPORTREPAIR system variable | 282 |
| 12.46.1 | Repair model on import | 282 |
| 12.47 | IMPORTSIMPLIFY system variable | 283 |
| 12.47.1 | Perform simplification | 283 |
| 12.48 | IMPORTSOLIDEDGEALTERNATESEARCHPATHS system variable | 283 |
| 12.48.1 | Alternate search paths | 283 |
| 12.49 | IMPORTSOLIDEDGESEARCHPATHSPREFERENCE system variable | 283 |
| 12.49.1 | Search paths preference | 283 |
| 12.50 | IMPORTSOLIDWORKSALTERNATESEARCHPATHS system variable | 284 |
| 12.50.1 | Alternate search paths | 284 |
| 12.51 | IMPORTSOLIDWORKSCONFIGURATION system variable | 284 |
| 12.51.1 | Import SolidWorks configuration | 284 |
| 12.52 | IMPORTSOLIDWORKSREPRESENTATION system variable | 284 |
| 12.52.1 | Import representation | 284 |
| 12.53 | IMPORTSOLIDWORKSROTATEYZ system variable | 285 |
| 12.53.1 | Map SolidWorks Y to current Z axis | 285 |
| 12.54 | IMPORTSOLIDWORKSSEARCHPATHSPREFERENCE system variable | 285 |
| 12.54.1 | Search paths preference | 285 |
| 12.55 | IMPORTSTEPROTATEYZ system variable | 286 |
| 12.55.1 | Map Y to current Z axis | 286 |
| 12.56 | IMPORTSTITCH system variable | 286 |
| 12.56.1 | Perform stitching | 286 |
| 12.57 | INCLUDEPLOTSTAMP system variable | 287 |



Spis treści

| | | |
|---------|--|-----|
| 12.57.1 | Include Plot Stamp | 287 |
| 12.58 | INDEXCTL system variable | 287 |
| 12.58.1 | Index control | 287 |
| 12.59 | INETLOCATION system variable | 287 |
| 12.59.1 | Internet location | 287 |
| 12.60 | INSBASE system variable | 288 |
| 12.60.1 | Insertion base point | 288 |
| 12.61 | INSMODEAUTO system variable | 288 |
| 12.61.1 | Insertion mode Auto | 288 |
| 12.62 | INSNAME system variable | 288 |
| 12.62.1 | Insertion name | 288 |
| 12.63 | INSUNITS system variable | 289 |
| 12.63.1 | Insertion units | 289 |
| 12.64 | INSUNITSDEFSOURCE system variable | 290 |
| 12.64.1 | Insertion units default source | 290 |
| 12.65 | INSUNITSDEFTARGET system variable | 290 |
| 12.65.1 | Insertion units default target | 290 |
| 12.66 | INSUNITSSCALING system variable | 291 |
| 12.66.1 | Insertion units scaling | 291 |
| 12.67 | INTERFERECOLOR system variable | 292 |
| 12.67.1 | Interference color | 292 |
| 12.68 | INTERFERELAYER system variable | 292 |
| 12.68.1 | Interference layer | 292 |
| 12.69 | INTERFERENCELEVEL system variable | 292 |
| 12.69.1 | Interference Check Level | 292 |
| 12.70 | INTERFEREOBJVS system variable | 293 |
| 12.70.1 | Interference object visual style | 293 |
| 12.71 | INTERFEREVPVS system variable | 293 |
| 12.71.1 | Interference viewport visual style | 293 |
| 12.72 | INTERIORELEVATIONMINLENGTH system variable | 294 |
| 12.72.1 | Interior Elevation Minimum Length | 294 |
| 12.73 | INTERIORELEVATIONOFFSET system variable | 294 |
| 12.73.1 | Interior Elevation Offset Distance | 294 |
| 12.74 | INTERSECTEDENTITIES system variable | 294 |
| 12.75 | INTERSECTIONCOLOR system variable | 295 |
| 12.75.1 | Intersection color | 295 |
| 12.76 | INTERSECTIONDISPLAY system variable | 295 |
| 12.76.1 | Intersection display | 295 |
| 12.77 | ISAVEBAK system variable | 296 |
| 12.77.1 | Incremental save backup | 296 |
| 12.78 | ISAVEPERCENT system variable | 296 |
| 12.78.1 | Save percent | 296 |
| 12.79 | ISOLINES system variable | 296 |
| 12.79.1 | Isolines | 296 |
| 13. | J | 298 |
| 14. | K | 299 |
| 15. | L | 300 |
| 15.1 | LASTANGLE system variable | 300 |



Spis treści

| | | |
|---------|---|-----|
| 15.1.1 | Last angle | 300 |
| 15.2 | LASTPOINT system variable | 300 |
| 15.2.1 | Last point | 300 |
| 15.3 | LASTPROMPT system variable | 300 |
| 15.3.1 | Last prompt | 300 |
| 15.4 | LATITUDE system variable | 300 |
| 15.4.1 | Latitude | 300 |
| 15.5 | LAYERFILTEREXCESS system variable | 301 |
| 15.5.1 | Layer Filter Excess | 301 |
| 15.6 | LAYERPMODE system variable | 301 |
| 15.6.1 | Layer previous mode | 301 |
| 15.7 | LAYLOCKFADECTL system variable | 302 |
| 15.7.1 | Locked layer fade control | 302 |
| 15.8 | LAYOUTREGENCTL system variable | 302 |
| 15.8.1 | Layout regeneration control | 302 |
| 15.9 | LAYOUTTAB system variable | 302 |
| 15.9.1 | Layout and model tabs | 302 |
| 15.10 | LEGACYCODESEARCH system variable | 303 |
| 15.10.1 | Legacy code search mode | 303 |
| 15.11 | LENGTHSAMPLINGINTERVAL system variable | 303 |
| 15.11.1 | Sampling interval for straight segments | 303 |
| 15.12 | LENGTHUNITS system variable | 303 |
| 15.12.1 | Length units | 303 |
| 15.13 | LENSELENGTH system variable | 304 |
| 15.13.1 | Lens length | 304 |
| 15.14 | LEVELOFDETAIL system variable | 304 |
| 15.14.1 | Length units | 304 |
| 15.15 | LICFLAGS system variable | 305 |
| 15.15.1 | Licensed components | 305 |
| 15.16 | LIGHTGLYPHCOLOR system variable | 305 |
| 15.16.1 | Color for light glyph | 305 |
| 15.17 | LIGHTGLYPHDISPLAY system variable | 305 |
| 15.17.1 | Light glyph display | 305 |
| 15.18 | LIGHTINGUNITS system variable | 306 |
| 15.18.1 | Lighting units | 306 |
| 15.19 | LIGHTWEBGLYPHCOLOR system variable | 306 |
| 15.19.1 | Color for web light glyph | 306 |
| 15.20 | LIMCHECK system variable | 307 |
| 15.20.1 | Limits check | 307 |
| 15.21 | LIMMAX system variable | 307 |
| 15.21.1 | Limits maximum | 307 |
| 15.22 | LIMMIN system variable | 307 |
| 15.22.1 | Limits minimum | 307 |
| 15.23 | LINEARBRIGHTNESS system variable | 308 |
| 15.23.1 | Linear brightness | 308 |
| 15.24 | LINEARCONTRAST system variable | 308 |
| 15.24.1 | Linear contrast | 308 |
| 15.25 | LISPINIT system variable | 308 |



Spis treści

| | | |
|---------|---------------------------------------|-----|
| 15.25.1 | LISP init | 308 |
| 15.26 | LOADMECHANICAL2D system variable | 309 |
| 15.26.1 | Mechanical 2D enablers | 309 |
| 15.27 | LOCALE system variable | 309 |
| 15.27.1 | Locale | 309 |
| 15.28 | LOCALROOTPREFIX system variable | 309 |
| 15.28.1 | Local root prefix | 309 |
| 15.29 | LOCKUI system variable | 310 |
| 15.29.1 | Lock user interface elements | 310 |
| 15.30 | LOFTANG1 system variable | 310 |
| 15.30.1 | Loft angle 1 | 310 |
| 15.31 | LOFTANG2 system variable | 311 |
| 15.31.1 | Loft angle 2 | 311 |
| 15.32 | LOFTMAG1 system variable | 312 |
| 15.32.1 | Loft magnitude 1 | 312 |
| 15.33 | LOFTMAG2 system variable | 313 |
| 15.33.1 | Loft magnitude 2 | 313 |
| 15.34 | LOFTNORMALS system variable | 313 |
| 15.34.1 | Loft normals | 313 |
| 15.35 | LOFTPARAM system variable | 314 |
| 15.35.1 | Loft param | 314 |
| 15.36 | LOGFILEMODE system variable | 314 |
| 15.36.1 | Log file mode | 314 |
| 15.37 | LOGFILENAME system variable | 314 |
| 15.37.1 | Log file name | 314 |
| 15.38 | LOGFILEPATH system variable | 315 |
| 15.38.1 | Log file path | 315 |
| 15.39 | LOGGEDIN system variable | 315 |
| 15.39.1 | Logged in | 315 |
| 15.40 | LOGINNAME system variable | 315 |
| 15.40.1 | Login name | 315 |
| 15.41 | LONGITUDE system variable | 315 |
| 15.41.1 | Longitude | 315 |
| 15.42 | LOOKFROMDIRECTIONMODE system variable | 316 |
| 15.42.1 | LookFrom direction mode | 316 |
| 15.43 | LOOKFROMFEEDBACK system variable | 316 |
| 15.43.1 | LookFrom feedback | 316 |
| 15.44 | LOOKFROMZOOMEXTENTS system variable | 317 |
| 15.44.1 | LookFrom zoom extents | 317 |
| 15.45 | LTGAPSELECTION system variable | 317 |
| 15.45.1 | Linetype gap selection | 317 |
| 15.46 | LTSCALE system variable | 318 |
| 15.46.1 | Linetype scale | 318 |
| 15.47 | LUNITS system variable | 318 |
| 15.47.1 | Linear unit type | 318 |
| 15.48 | LUPREC system variable | 318 |
| 15.48.1 | Linear unit precision | 318 |
| 15.49 | LWDEFAULT system variable | 319 |



Spis treści

| | | |
|---------|---|-----|
| 15.49.1 | Default lineweight | 319 |
| 15.50 | LWDISPLAY system variable | 319 |
| 15.50.1 | Lineweight display | 319 |
| 15.51 | LWDISPSCALE system variable | 320 |
| 15.51.1 | Lineweight display scale | 320 |
| 15.52 | LWUNITS system variable | 320 |
| 15.52.1 | Lineweight units | 320 |
| 16. | M | 321 |
| 16.1 | MACROREC system variable | 321 |
| 16.1.1 | Macro recording | 321 |
| 16.2 | MAKEBAK system variable | 321 |
| 16.2.1 | Make backup (Obsolete) | 321 |
| 16.3 | MANIPULATOR system variable | 321 |
| 16.3.1 | Manipulator | 321 |
| 16.4 | MANIPULATORCOLORTHEME system variable | 322 |
| 16.4.1 | Color theme of Manipulator | 322 |
| 16.5 | MANIPULATORDURATION system variable | 323 |
| 16.5.1 | Manipulator duration | 323 |
| 16.6 | MANIPULATORHANDLE system variable | 323 |
| 16.6.1 | Manipulator handle | 323 |
| 16.7 | MANIPULATORSIZE system variable | 323 |
| 16.7.1 | Size of Manipulator | 323 |
| 16.8 | MASSPREC system variable | 324 |
| 16.8.1 | Mass precision | 324 |
| 16.9 | MASSPROPACCURACY system variable | 324 |
| 16.9.1 | Mass properties calculation relative accuracy | 324 |
| 16.10 | MASSUNITS system variable | 325 |
| 16.10.1 | Mass units | 325 |
| 16.11 | MAXACTVP system variable | 325 |
| 16.11.1 | Maximum active viewports | 325 |
| 16.12 | MAXHATCH system variable | 326 |
| 16.12.1 | Maximum hatch dashes | 326 |
| 16.13 | MAXSORT system variable | 326 |
| 16.13.1 | Maximum sort | 326 |
| 16.14 | MAXTHREADS system variable | 326 |
| 16.14.1 | Maximum number of threads | 326 |
| 16.15 | MBSTATE system variable | 327 |
| 16.15.1 | Mechanical browser state | 327 |
| 16.16 | MBUTTONPAN system variable | 327 |
| 16.16.1 | Middle button pan | 327 |
| 16.17 | MEASUREINIT system variable | 328 |
| 16.17.1 | Measurement initial | 328 |
| 16.18 | MEASUREMENT system variable | 328 |
| 16.18.1 | Measurement | 328 |
| 16.19 | MECH2DSAVEFORMAT system variable | 328 |
| 16.19.1 | Mechanical 2D save format | 328 |
| 16.20 | MECHANICALBLOCKS system variable | 329 |
| 16.20.1 | Mechanical blocks (experimental) | 329 |



Spis treści

| | | |
|---------|--|-----|
| 16.21 | MECHANICALBROWSERSETTINGS system variable | 329 |
| 16.21.1 | Mechanical browser options | 329 |
| 16.22 | MENUBAR (EXCEPT OS X) system variable | 330 |
| 16.22.1 | Menu bar | 330 |
| 16.23 | MENUCTL system variable | 330 |
| 16.23.1 | Menu control | 330 |
| 16.24 | MENUECHO system variable | 331 |
| 16.24.1 | Menu echo | 331 |
| 16.25 | MENUNAME system variable | 331 |
| 16.25.1 | Menu name | 331 |
| 16.26 | MESHTYPE system variable | 331 |
| 16.26.1 | Mesh type | 331 |
| 16.27 | MIDDLECLICKCLOSE system variable | 332 |
| 16.27.1 | Middle click close (Mac & Linux) | 332 |
| 16.28 | MILLISECS system variable | 332 |
| 16.28.1 | Milliseconds | 332 |
| 16.29 | MIRR Hatch system variable | 332 |
| 16.29.1 | Hatch pattern mirroring | 332 |
| 16.30 | MIRRTEXT system variable | 333 |
| 16.30.1 | Mirror text | 333 |
| 16.31 | MLEADERSCALE system variable | 333 |
| 16.31.1 | Multileader scale | 333 |
| 16.32 | MODEMACRO system variable | 334 |
| 16.32.1 | Mode macro | 334 |
| 16.33 | MSLTSCALE system variable | 334 |
| 16.33.1 | Model space linetype scale | 334 |
| 16.34 | MSOLESCALE system variable | 334 |
| 16.34.1 | Model space OLE scale | 334 |
| 16.35 | MTEXTCOLUMN system variable | 335 |
| 16.35.1 | Multiline text column setting | 335 |
| 16.36 | MTEXTDETECTSPACE system variable | 335 |
| 16.36.1 | Space detection for creating lists in mtext editor | 335 |
| 16.37 | MTEXTED system variable | 335 |
| 16.37.1 | Multiline text editor | 335 |
| 16.38 | MTEXTFIXED system variable | 336 |
| 16.38.1 | Multiline text fixed | 336 |
| 16.39 | MTEXTTOOLBAR system variable | 336 |
| 16.39.1 | MText Formatting toolbar | 336 |
| 16.40 | MTFLAGS system variable | 336 |
| 16.40.1 | Multi-Threading Flags | 336 |
| 16.41 | MULTISELECTANGULARTOLERANCE system variable | 337 |
| 16.41.1 | BimMultiSelect angular tolerance | 337 |
| 16.42 | MYDOCUMENTSPREFIX system variable | 337 |
| 16.42.1 | MyDocuments root prefix | 337 |
| 17. | N | 339 |
| 17.1 | NAVVCUBEDISPLAY system variable | 339 |
| 17.1.1 | LookFrom display | 339 |
| 17.2 | NAVVCUBELOCATION system variable | 339 |



Spis treści

| | | |
|---------|-------------------------------------|-----|
| 17.2.1 | LookFrom location | 339 |
| 17.3 | NAVVCUBEOPACITY system variable | 340 |
| 17.3.1 | LookFrom opacity | 340 |
| 17.4 | NAVVCUBEORIENT system variable | 340 |
| 17.4.1 | LookFrom orientation | 340 |
| 17.5 | NEARESTDISTANCE system variable | 340 |
| 17.5.1 | Nearest Distance | 340 |
| 17.6 | NOMUTT system variable | 341 |
| 17.6.1 | No muttering | 341 |
| 17.7 | NORTHDIRECTION system variable | 342 |
| 17.7.1 | North direction | 342 |
| 18. | O | 343 |
| 18.1 | OBJECTISOLATIONMODE system variable | 343 |
| 18.1.1 | Object Isolation Mode | 343 |
| 18.2 | OBSCUREDColor system variable | 343 |
| 18.2.1 | Obscured color | 343 |
| 18.3 | OBSCUREDLTtype system variable | 344 |
| 18.3.1 | Obscured linetype | 344 |
| 18.4 | OFFSETDIST system variable | 344 |
| 18.4.1 | Offset distance | 344 |
| 18.5 | OFFSETERASE system variable | 345 |
| 18.5.1 | Offset erase | 345 |
| 18.6 | OFFSETGAPtype system variable | 345 |
| 18.6.1 | Offset gap type | 345 |
| 18.7 | OLEFRAME system variable | 345 |
| 18.7.1 | OLE frame | 345 |
| 18.8 | OLEHIDE system variable | 346 |
| 18.8.1 | OLE hide | 346 |
| 18.9 | OLEQUALITY system variable | 346 |
| 18.9.1 | OLE quality | 346 |
| 18.10 | OLESTARTUP system variable | 347 |
| 18.10.1 | OLE startup | 347 |
| 18.11 | OPMSTATE system variable | 347 |
| 18.11.1 | Properties bar state | 347 |
| 18.12 | ORBITAUTOTARGET system variable | 348 |
| 18.12.1 | Orbit Auto Target | 348 |
| 18.13 | ORTHOMODE system variable | 348 |
| 18.13.1 | Orthogonal mode | 348 |
| 18.14 | OSMODE system variable | 348 |
| 18.14.1 | Entity snap mode | 348 |
| 18.15 | OSNAPCOORD system variable | 349 |
| 18.15.1 | Entity snap coordinates | 349 |
| 18.16 | OSNAPZ system variable | 350 |
| 18.16.1 | Ignore entity snap elevation | 350 |
| 18.17 | OSOPTIONS system variable | 350 |
| 18.17.1 | Entity snap options | 350 |
| 18.18 | OVERKILLLAYER system variable | 350 |
| 18.18.1 | Duplicate Entities Layer | 350 |



Spis treści

| | | |
|---------|---|-----|
| 19. | P | 352 |
| 19.1 | PANBUFFER system variable | 352 |
| 19.1.1 | Pan buffer | 352 |
| 19.2 | PANELBUTTONSIZE system variable | 352 |
| 19.2.1 | Panelset icon button size | 352 |
| 19.3 | PAPERUPDATE system variable | 352 |
| 19.3.1 | Paper update | 352 |
| 19.4 | PARAMETERCOPYMODE system variable | 353 |
| 19.4.1 | Parameter copy mode | 353 |
| 19.5 | PARAMETRICBLOCKS2DPATH system variable | 353 |
| 19.5.1 | Parametric blocks 2D directory path | 353 |
| 19.6 | PDFCACHE system variable | 354 |
| 19.6.1 | PDF cache | 354 |
| 19.7 | PDFEMBEDDEDTTF system variable | 354 |
| 19.7.1 | Pdf embedded fonts | 354 |
| 19.8 | PDFEXPORTHYPERLINKS system variable | 355 |
| 19.8.1 | Export hyperlinks | 355 |
| 19.9 | PDFFRAME system variable | 355 |
| 19.9.1 | PDF frame | 355 |
| 19.10 | PDFIMAGEANTIALIAS system variable | 355 |
| 19.10.1 | Image anti-aliasing | 355 |
| 19.11 | PDFIMAGECOMPRESSION system variable | 356 |
| 19.11.1 | Image compression | 356 |
| 19.12 | PDFIMAGEDPI system variable | 356 |
| 19.12.1 | Image DPI | 356 |
| 19.13 | PDFIMPORTAPPLYLINEWEIGHT system variable | 356 |
| 19.13.1 | Apply lineweight properties | 356 |
| 19.14 | PDFIMPORTASBLOCK system variable | 357 |
| 19.14.1 | Import as block | 357 |
| 19.15 | PDFIMPORTCHARSPACEFACTOR system variable | 357 |
| 19.15.1 | Inter-character space factor | 357 |
| 19.16 | PDFIMPORTCOMBINETEXTOBJECTS system variable | 358 |
| 19.16.1 | Combine text objects | 358 |
| 19.17 | PDFIMPORTCONVERTSOLIDSTOHATCHES system variable | 358 |
| 19.17.1 | Convert solid fills to hatches | 358 |
| 19.18 | PDFIMPORTIMAGEPATH system variable | 358 |
| 19.18.1 | Raster Images Folder | 358 |
| 19.19 | PDFIMPORTJOINLINEANDARCSEGMENTS system variable | 359 |
| 19.19.1 | Join line and arc segments | 359 |
| 19.20 | PDFIMPORTLAYERSUSETYPE system variable | 359 |
| 19.20.1 | Layers | 359 |
| 19.21 | PDFIMPORTRASTERIMAGES system variable | 360 |
| 19.21.1 | Raster Images | 360 |
| 19.22 | PDFIMPORTSOLIDFILLS system variable | 360 |
| 19.22.1 | Solid fills | 360 |
| 19.23 | PDFIMPORTSPACEFACTOR system variable | 360 |
| 19.23.1 | Inter-word space factor | 360 |
| 19.24 | PDFIMPORTTRUETYPETEXT system variable | 361 |



Spis treści

| | | |
|---------|--|-----|
| 19.24.1 | TrueType text | 361 |
| 19.25 | PDFIMPORTTRUETYPETEXTASGEOMETRY system variable | 361 |
| 19.25.1 | Import True Type text as geometry | 361 |
| 19.26 | PDFIMPORTUSECLIPPING system variable | 362 |
| 19.26.1 | Apply clipping | 362 |
| 19.27 | PDFIMPORTUSEGEOMETRYOPTIMIZATION system variable | 362 |
| 19.27.1 | Import geometry with optimization | 362 |
| 19.28 | PDFIMPORTUSEIMAGECLIPPING system variable | 362 |
| 19.28.1 | Clip images | 362 |
| 19.29 | PDFIMPORTUSEPAGEBORDERCLIPPING system variable | 363 |
| 19.29.1 | Apply clipping at page border | 363 |
| 19.30 | PDFIMPORTVECTERGEOMETRY system variable | 363 |
| 19.30.1 | Vector geometry | 363 |
| 19.31 | PDFLAYERSSETTING system variable | 364 |
| 19.31.1 | Pdf layer support | 364 |
| 19.32 | PDFLAYOUTSTOEXPORT system variable | 364 |
| 19.32.1 | Pdf layouts to export | 364 |
| 19.33 | PDFMERGECONTROL system variable | 364 |
| 19.33.1 | Pdf Merge Control | 364 |
| 19.34 | PDFNOTIFY system variable | 365 |
| 19.34.1 | PDF notify | 365 |
| 19.35 | PDFOSNAP system variable | 365 |
| 19.35.1 | PDF entity snap | 365 |
| 19.36 | PDFPAPERHEIGHT system variable | 366 |
| 19.36.1 | Pdf overridden paper height | 366 |
| 19.37 | PDFPAPERSIZEOVERRIDE system variable | 366 |
| 19.37.1 | Pdf papersize override | 366 |
| 19.38 | PDFPAPERWIDTH system variable | 366 |
| 19.38.1 | Pdf overridden paper width | 366 |
| 19.39 | PDFPRCCOMPRESSION system variable | 367 |
| 19.39.1 | PRC Compression | 367 |
| 19.40 | PDFPRCEXPORT system variable | 367 |
| 19.40.1 | PRC Export Mode | 367 |
| 19.41 | PDFPRCPROJECTION system variable | 367 |
| 19.41.1 | PRC Projection | 367 |
| 19.42 | PDFPRCVIEWMODE system variable | 368 |
| 19.42.1 | PRC View mode | 368 |
| 19.43 | PDFSHXTEXTASGEOMETRY system variable | 368 |
| 19.43.1 | Pdf SHX text as geometry | 368 |
| 19.44 | PDFSIMPLEGEOMOPTIMIZATION system variable | 369 |
| 19.44.1 | Pdf simple geometry optimization | 369 |
| 19.45 | PDFTTFTTEXTASGEOMETRY system variable | 369 |
| 19.45.1 | Pdf TTF text as geometry | 369 |
| 19.46 | PDFUSEPLOTSTYLES system variable | 370 |
| 19.46.1 | Pdf use plotstyles | 370 |
| 19.47 | PDFVECTORRESOLUTIONDPI system variable | 370 |
| 19.47.1 | Vector Resolution DPI | 370 |
| 19.48 | PDFZOOMTOEXTENTSMODE system variable | 370 |



Spis treści

| | | |
|---------|---|-----|
| 19.48.1 | Pdf zoom to extents mode | 370 |
| 19.49 | PDMODE system variable | 371 |
| 19.49.1 | Point display mode | 371 |
| 19.50 | PDSIZE system variable | 372 |
| 19.50.1 | Point display size | 372 |
| 19.51 | PEDITACCEPT system variable | 372 |
| 19.51.1 | Polyline edit accept | 372 |
| 19.52 | PELLIPSE system variable | 373 |
| 19.52.1 | Polyline ellipse | 373 |
| 19.53 | PERIMETER system variable | 373 |
| 19.53.1 | Last perimeter | 373 |
| 19.54 | PERSPECTIVE system variable | 373 |
| 19.54.1 | Perspective | 373 |
| 19.55 | PFACEVMAX system variable | 374 |
| 19.55.1 | Polyface mesh maximum vertices | 374 |
| 19.56 | PICKADD system variable | 374 |
| 19.56.1 | Pick add | 374 |
| 19.57 | PICKAUTO system variable | 375 |
| 19.57.1 | Pick automatic | 375 |
| 19.58 | PICKBOX system variable | 375 |
| 19.58.1 | Pick box | 375 |
| 19.59 | PICKDRAG system variable | 376 |
| 19.59.1 | Pick drag | 376 |
| 19.60 | PICKFIRST system variable | 376 |
| 19.60.1 | Pick first | 376 |
| 19.61 | PICKSTYLE (EXCEPT OS X) system variable | 376 |
| 19.61.1 | Pick style | 376 |
| 19.62 | PICTUREEXPORTSCALE system variable | 377 |
| 19.62.1 | Picture format export scale factor | 377 |
| 19.63 | PLACESBARFOLDER1 system variable | 377 |
| 19.63.1 | First folder (Windows) | 377 |
| 19.64 | PLACESBARFOLDER2 system variable | 378 |
| 19.64.1 | Second folder (Windows) | 378 |
| 19.65 | PLACESBARFOLDER3 system variable | 378 |
| 19.65.1 | Third folder (Windows) | 378 |
| 19.66 | PLACESBARFOLDER4 system variable | 379 |
| 19.66.1 | Fourth folder (Windows) | 379 |
| 19.67 | PLATFORM system variable | 379 |
| 19.67.1 | Platform | 379 |
| 19.68 | PLINECACHE system variable | 380 |
| 19.68.1 | Polyline cache | 380 |
| 19.69 | PLINECONVERTMODE system variable | 380 |
| 19.69.1 | Polyline convert mode | 380 |
| 19.70 | PLINEGEN system variable | 380 |
| 19.70.1 | Polyline generation | 380 |
| 19.71 | PLINETYPE system variable | 381 |
| 19.71.1 | Polyline type | 381 |
| 19.72 | PLINEWID system variable | 382 |



Spis treści

| | | |
|---------|--|-----|
| 19.72.1 | Polyline width | 382 |
| 19.73 | PLOTFCGPATH system variable | 382 |
| 19.73.1 | Plotter configuration path | 382 |
| 19.74 | PLOTID system variable | 382 |
| 19.74.1 | Plot id (Obsolete) | 382 |
| 19.75 | PLOTOUTPUTPATH system variable | 382 |
| 19.75.1 | Plot output path | 382 |
| 19.76 | PLOTSTYLEPATH system variable | 383 |
| 19.76.1 | Plot styles path | 383 |
| 19.77 | PLOTTER system variable | 383 |
| 19.77.1 | Plotter (Obsolete) | 383 |
| 19.78 | PLOTTRANSPARENCYOVERRIDE system variable | 383 |
| 19.78.1 | Plot transparency override | 383 |
| 19.79 | PLQUIET system variable | 384 |
| 19.79.1 | Plot quiet | 384 |
| 19.80 | POINTCLOUD2DVSDISPLAY system variable | 384 |
| 19.80.1 | Point cloud toggle show/hide bounding box in 2D wireframe mode | 384 |
| 19.81 | POINTCLOUDADAPTIVEDISPLAY system variable | 384 |
| 19.81.1 | Point cloud toggle adaptive vs. fixed point sizes | 384 |
| 19.82 | POINTCLOUDBOUNDARY system variable | 385 |
| 19.82.1 | Point cloud point boundary | 385 |
| 19.83 | POINTCLOUDCACHEFOLDER system variable | 385 |
| 19.83.1 | Point Cloud disk cache folder | 385 |
| 19.84 | POINTCLOUDHSPC system variable | 386 |
| 19.84.1 | Point Cloud format (hspc/bcad) | 386 |
| 19.85 | POINTCLOUDIGNOREGEOTAGS system variable | 386 |
| 19.85.1 | Point Cloud ignore geo tags in source data | 386 |
| 19.86 | POINTCLOUDPOINTMAX system variable | 386 |
| 19.86.1 | Point cloud max points | 386 |
| 19.87 | POINTCLOUDPOINTSIZ system variable | 387 |
| 19.87.1 | Point cloud point size | 387 |
| 19.88 | POLARADDANG system variable | 387 |
| 19.88.1 | Polar add angles | 387 |
| 19.89 | POLARANG system variable | 388 |
| 19.89.1 | Polar angle | 388 |
| 19.90 | POLARDIST system variable | 388 |
| 19.90.1 | Polar distance | 388 |
| 19.91 | POLARMODE system variable | 388 |
| 19.91.1 | Polar mode | 388 |
| 19.92 | POLYSIDES system variable | 389 |
| 19.92.1 | Polygon sides | 389 |
| 19.93 | POPUPS system variable | 389 |
| 19.93.1 | Popups | 389 |
| 19.94 | PREVIEWDELAY system variable | 390 |
| 19.94.1 | Delay to preview selection | 390 |
| 19.95 | PREVIEWEFFECT system variable | 390 |
| 19.95.1 | Selection preview effect | 390 |
| 19.96 | PREVIEWFILTER system variable | 390 |



Spis treści

| | | |
|----------|---|-----|
| 19.96.1 | Selection preview filter | 390 |
| 19.97 | PREVIEWTYPE system variable | 391 |
| 19.97.1 | Preview type | 391 |
| 19.98 | PREVIEWWNDINOPENDLG system variable | 391 |
| 19.98.1 | Preview window in open dialog | 391 |
| 19.99 | PRINTFILE system variable | 392 |
| 19.99.1 | Print file | 392 |
| 19.100 | PRINTPDFPREVIEW system variable | 392 |
| 19.100.1 | Print As PDF Preview | 392 |
| 19.101 | PRODUCT system variable | 392 |
| 19.101.1 | Product | 392 |
| 19.102 | PROFILEOFFSETBEHAVIOR system variable | 393 |
| 19.102.1 | Profile offset behavior | 393 |
| 19.103 | PROGBAR system variable | 393 |
| 19.103.1 | Progress bar | 393 |
| 19.104 | PROGRAM system variable | 393 |
| 19.104.1 | Program | 393 |
| 19.105 | PROJECTIONTYPE system variable | 394 |
| 19.105.1 | Drawing views position scheme | 394 |
| 19.106 | PROJECTNAME system variable | 396 |
| 19.106.1 | Project name | 396 |
| 19.107 | PROJECTSEARCHPATHS system variable | 396 |
| 19.107.1 | Project search paths | 396 |
| 19.108 | PROJMODE system variable | 396 |
| 19.108.1 | Projection mode | 396 |
| 19.109 | PROMPTMENU system variable | 397 |
| 19.109.1 | Prompt menu | 397 |
| 19.110 | PROMPTMENUFLAGS system variable | 397 |
| 19.110.1 | Prompt menu flags | 397 |
| 19.111 | PROMPTOPTIONFORMAT system variable | 398 |
| 19.111.1 | Prompt option format | 398 |
| 19.112 | PROMPTOPTIONTRANSLATEKEYWORDS system variable | 399 |
| 19.112.1 | Prompt option translate keywords | 399 |
| 19.113 | PROPAGATESEARCHSPACE system variable | 399 |
| 19.113.1 | Search space | 399 |
| 19.114 | PROPAGATETOLERANCE system variable | 400 |
| 19.114.1 | Position tolerance | 400 |
| 19.115 | PROPERTYPREVIEW system variable | 400 |
| 19.115.1 | Property preview | 400 |
| 19.116 | PROPERTYPREVIEWDELAY system variable | 400 |
| 19.116.1 | Property Preview Delay | 400 |
| 19.117 | PROPERTYPREVIEWOBJLIMIT system variable | 401 |
| 19.117.1 | Property Preview Object Limit | 401 |
| 19.118 | PROPPREVTIMEOUT system variable | 401 |
| 19.118.1 | Property Preview Timeout | 401 |
| 19.119 | PROPUNITS system variable | 402 |
| 19.119.1 | Property units | 402 |
| 19.120 | PROXYGRAPHICS system variable | 402 |



Spis treści

| | | |
|----------|------------------------------------|-----|
| 19.120.1 | Proxy graphics | 402 |
| 19.121 | PROXYNOTICE system variable | 402 |
| 19.121.1 | Proxy notice | 402 |
| 19.122 | PROXYSHOW system variable | 403 |
| 19.122.1 | Proxy show | 403 |
| 19.123 | PROXYWEBSEARCH system variable | 403 |
| 19.123.1 | Proxy web search | 403 |
| 19.124 | PSLTSCALE system variable | 404 |
| 19.124.1 | Paper space linetype scale | 404 |
| 19.125 | PSOLHEIGHT system variable | 404 |
| 19.125.1 | Polysolid height | 404 |
| 19.126 | PSOLWIDTH system variable | 404 |
| 19.126.1 | Polysolid width | 404 |
| 19.127 | PSTYLEMODE system variable | 405 |
| 19.127.1 | Plot style mode | 405 |
| 19.128 | PSTYLEPOLICY system variable | 405 |
| 19.128.1 | Plot style policy | 405 |
| 19.129 | PSVPSCALE system variable | 405 |
| 19.129.1 | Paper space viewport scale | 405 |
| 19.130 | PUBLISHALLSHEETS system variable | 406 |
| 19.130.1 | Publish all sheets | 406 |
| 19.131 | PUBLISHCOLLATE system variable | 406 |
| 19.131.1 | Collate published sheets | 406 |
| 19.132 | PUCSBASE system variable | 406 |
| 19.132.1 | Paper space UCS base | 406 |
| 19.133 | PDFANIMATIONFPS system variable | 407 |
| 19.133.1 | Frames per second | 407 |
| 20. | Q | 408 |
| 20.1 | QAFLAGS system variable | 408 |
| 20.1.1 | Quality Assurance flags | 408 |
| 20.2 | QTEXTMODE system variable | 408 |
| 20.2.1 | Quick text mode | 408 |
| 20.3 | QUADCOMMANDLAUNCH system variable | 411 |
| 20.3.1 | Quad default command launch | 411 |
| 20.4 | QUADDISPLAY system variable | 411 |
| 20.4.1 | Quad display | 411 |
| 20.5 | QUADEXPANDDELAY system variable | 412 |
| 20.5.1 | Quad expand delay | 412 |
| 20.6 | QUADEXPANDTABDELAY system variable | 412 |
| 20.6.1 | Quad expand tab delay | 412 |
| 20.7 | QUADGOTRANSSPARENT system variable | 412 |
| 20.7.1 | Quad go transparent | 412 |
| 20.8 | QUADHIDEDELAY system variable | 413 |
| 20.8.1 | Quad hide delay | 413 |
| 20.9 | QUADHIDEMARGIN system variable | 413 |
| 20.9.1 | Quad hide margin | 413 |
| 20.10 | QUADICONSIZE system variable | 413 |
| 20.10.1 | Quad icon size | 413 |



Spis treści

| | | |
|---------|---|-----|
| 20.11 | QUADICONSPACE system variable | 414 |
| 20.11.1 | Quad icon space | 414 |
| 20.12 | QUADMOSTRECENTITEMS system variable | 415 |
| 20.12.1 | Quad most recent items | 415 |
| 20.13 | QUADPOPUPCORNER system variable | 415 |
| 20.13.1 | Quad popup corner | 415 |
| 20.14 | QUADROLLOVERDELAY system variable | 416 |
| 20.14.1 | Quad rollover delay | 416 |
| 20.15 | QUADSHOWDELAY system variable | 416 |
| 20.15.1 | Quad show delay | 416 |
| 20.16 | QUADWIDTH system variable | 417 |
| 20.16.1 | Quad width | 417 |
| 21. | R | 418 |
| 21.1 | R12SAVEACCURACY system variable | 418 |
| 21.1.1 | R12 Save accuracy | 418 |
| 21.2 | R12SAVEDEVIATION system variable | 418 |
| 21.2.1 | R12 Save deviation | 418 |
| 21.3 | RASTERPREVIEW system variable | 418 |
| 21.3.1 | Raster preview | 418 |
| 21.4 | RE_INIT system variable | 419 |
| 21.4.1 | Reinitialize Aliases | 419 |
| 21.5 | REALTIMESPEEDUP system variable | 419 |
| 21.5.1 | Realtime speedup | 419 |
| 21.6 | REALWORLDSCALE system variable | 419 |
| 21.6.1 | Real world scale | 419 |
| 21.7 | RECENTFILES system variable | 420 |
| 21.7.1 | Recent file list max count | 420 |
| 21.8 | RECENTPATH system variable | 420 |
| 21.8.1 | Recent path | 420 |
| 21.9 | REDHILITE_DUCSLOCKED_FACE_ALPHA system variable | 420 |
| 21.9.1 | Face opacity | 420 |
| 21.10 | REDHILITE_DUCSLOCKED_FACE_COLOR system variable | 421 |
| 21.10.1 | Face color | 421 |
| 21.11 | REDHILITE_HIDDENEDGE_ALPHA system variable | 421 |
| 21.11.1 | Edge opacity | 421 |
| 21.12 | REDHILITE_HIDDENEDGE_COLOR system variable | 421 |
| 21.12.1 | Edge color | 421 |
| 21.13 | REDHILITEFULL_EDGE_ALPHA system variable | 422 |
| 21.13.1 | Edge opacity | 422 |
| 21.14 | REDHILITEFULL_EDGE_COLOR system variable | 422 |
| 21.14.1 | Edge color | 422 |
| 21.15 | REDHILITEFULL_EDGE_SHOWHIDDEN system variable | 422 |
| 21.15.1 | Hidden edges | 422 |
| 21.16 | REDHILITEFULL_EDGE_SMOOTHING system variable | 423 |
| 21.16.1 | Edge smoothing | 423 |
| 21.17 | REDHILITEFULL_EDGE_THICKNESS system variable | 423 |
| 21.17.1 | Edge thickness | 423 |
| 21.18 | REDHILITEFULL_FACE_ALPHA system variable | 424 |



Spis treści

| | | |
|---------|---|-----|
| 21.18.1 | Face opacity_____ | 424 |
| 21.19 | REDHILITEFULL_FACE_COLOR system variable_____ | 424 |
| 21.19.1 | Face color_____ | 424 |
| 21.20 | REDHILITEPARTIAL_SELECTEDEDGE_ALPHA system variable_____ | 424 |
| 21.20.1 | Edge opacity_____ | 424 |
| 21.21 | REDHILITEPARTIAL_SELECTEDEDGE_COLOR system variable_____ | 425 |
| 21.21.1 | Edge color_____ | 425 |
| 21.22 | REDHILITEPARTIAL_SELECTEDEDGE_SHOWGLOW system variable_____ | 425 |
| 21.22.1 | Glow_____ | 425 |
| 21.23 | REDHILITEPARTIAL_SELECTEDEDGE_SMOOTHING system variable_____ | 425 |
| 21.23.1 | Edge smoothing_____ | 425 |
| 21.24 | REDHILITEPARTIAL_SELECTEDEDGE_THICKNESS system variable_____ | 426 |
| 21.24.1 | Edge thickness_____ | 426 |
| 21.25 | REDHILITEPARTIAL_SELECTEDEDGE_GLOW_ALPHA system variable_____ | 426 |
| 21.25.1 | Glow opacity_____ | 426 |
| 21.26 | REDHILITEPARTIAL_SELECTEDEDGE_GLOW_COLOR system variable_____ | 426 |
| 21.26.1 | Glow color_____ | 426 |
| 21.27 | REDHILITEPARTIAL_SELECTEDEDGE_GLOW_SMOOTHING system variable_____ | 427 |
| 21.27.1 | Glow smoothing_____ | 427 |
| 21.28 | REDHILITEPARTIAL_SELECTEDEDGE_GLOW_THICKNESS system variable_____ | 427 |
| 21.28.1 | Glow thickness_____ | 427 |
| 21.29 | REDHILITEPARTIAL_SELECTEDFACE_ALPHA system variable_____ | 428 |
| 21.29.1 | Face opacity_____ | 428 |
| 21.30 | REDHILITEPARTIAL_SELECTEDFACE_COLOR system variable_____ | 428 |
| 21.30.1 | Face color_____ | 428 |
| 21.31 | REDHILITEPARTIAL_UNSELECTEDEGE_SHOWHIDDEN system variable_____ | 429 |
| 21.31.1 | Hidden edges_____ | 429 |
| 21.32 | REDSDKLINESMOOTHING system variable_____ | 429 |
| 21.32.1 | Line smoothing_____ | 429 |
| 21.33 | REDUCELENGTHTYPE system variable_____ | 429 |
| 21.33.1 | Reduce Length Type_____ | 429 |
| 21.34 | REDUCELENGTHVALUE system variable_____ | 430 |
| 21.34.1 | Reduce Length Value_____ | 430 |
| 21.35 | REFEDITLOCKNOTINWORKSET system variable_____ | 430 |
| 21.35.1 | Refedit lock_____ | 430 |
| 21.36 | REFEDITNAME system variable_____ | 431 |
| 21.36.1 | Refedit name_____ | 431 |
| 21.37 | REFPATHTYPE system variable_____ | 431 |
| 21.37.1 | Default path type of reference files_____ | 431 |
| 21.38 | REGENMODE system variable_____ | 431 |
| 21.38.1 | Regeneration mode_____ | 431 |
| 21.39 | REGEXPAND system variable_____ | 432 |
| 21.39.1 | Registry paths expanding type_____ | 432 |
| 21.40 | REMEMBERFOLDERS system variable_____ | 432 |
| 21.40.1 | Remember folders_____ | 432 |
| 21.41 | RENDERCOMPOSITIONMATERIAL system variable_____ | 433 |
| 21.41.1 | Render composition material_____ | 433 |
| 21.42 | RENDERMATERIALDOWNLOAD system variable_____ | 433 |



Spis treści

| | | |
|---------|---|-----|
| 21.42.1 | Download missing resources for render materials | 433 |
| 21.43 | RENDERMATERIALSPATH system variable | 433 |
| 21.43.1 | Render materials directory path | 433 |
| 21.44 | RENDERUSINGHARDWARE system variable | 434 |
| 21.44.1 | Render using hardware | 434 |
| 21.45 | REPORTPANELMODE system variable | 434 |
| 21.45.1 | Report panel mode | 434 |
| 21.46 | REPOSITORYFOLDER system variable | 435 |
| 21.46.1 | Repository folder | 435 |
| 21.47 | RESTORECONNECTIONS system variable | 435 |
| 21.47.1 | Restore Connections | 435 |
| 21.48 | RESTORELOSTFOCUS system variable | 435 |
| 21.48.1 | Restore lost focus (Linux) | 435 |
| 21.49 | RETAINEDGRAPHICS system variable | 436 |
| 21.49.1 | Retained Graphics | 436 |
| 21.50 | REVCLOUDARCSTYLE system variable | 436 |
| 21.50.1 | Revision cloud default arc style | 436 |
| 21.51 | REVCLOUDCREATEMODE system variable | 437 |
| 21.51.1 | Revision cloud creation mode | 437 |
| 21.52 | REVCLOUDGRIPS system variable | 437 |
| 21.52.1 | Revision cloud grips | 437 |
| 21.53 | REVCLOUDMAXARCLength system variable | 438 |
| 21.53.1 | Revision cloud default maximum arc length | 438 |
| 21.54 | REVCLOUDMINARCLength system variable | 438 |
| 21.54.1 | Revision cloud default minimum arc length | 438 |
| 21.55 | RHINOVERSION system variable | 438 |
| 21.55.1 | Rhino version | 438 |
| 21.56 | RIBBONDOCKEDHEIGHT system variable | 439 |
| 21.56.1 | Ribbon docked height | 439 |
| 21.57 | RIBBONPANELMARGIN system variable | 439 |
| 21.57.1 | Panel margin | 439 |
| 21.58 | RIBBONSTATE system variable | 439 |
| 21.58.1 | Ribbon state | 439 |
| 21.59 | RIBBONTOOLSIZE system variable | 440 |
| 21.59.1 | Ribbon tool size | 440 |
| 21.60 | ROAMABLEROOTPREFIX system variable | 440 |
| 21.60.1 | Roamable root prefix | 440 |
| 21.61 | ROLLOVEROPACITY system variable | 441 |
| 21.61.1 | Rollover opacity | 441 |
| 21.62 | ROLLOVERSELECTIONSET system variable | 441 |
| 21.62.1 | Rollover selection set | 441 |
| 21.63 | ROLLOVERTIPS system variable | 441 |
| 21.63.1 | Rollover tips | 441 |
| 21.64 | RTDISPLAY system variable | 442 |
| 21.64.1 | Realtime display | 442 |
| 21.65 | RTROTATIONSPEEDFACTOR system variable | 442 |
| 21.65.1 | Realtime Rotation Speed Factor | 442 |
| 21.66 | RUBBERBANDCOLOR system variable | 442 |



Spis treści

| | | |
|---------|---|-----|
| 21.66.1 | Rubberband color | 442 |
| 21.67 | RUBBERBANDSTYLE system variable | 443 |
| 21.67.1 | Rubberband dashed style | 443 |
| 21.68 | RUBBERSHEET (for OS X) system variable | 443 |
| 21.68.1 | Rubbersheet Touchpad | 443 |
| 21.69 | RUBBERSHEETSENSIBILITY (FOR OS X) system variable | 444 |
| 21.69.1 | Rubbersheet gesture activation sensibility | 444 |
| 21.70 | RULERDISPLAY system variable | 444 |
| 21.70.1 | Ruler Display | 444 |
| 21.71 | RULERTEXTCOLOR system variable | 444 |
| 21.71.1 | Ruler Text Color | 444 |
| 21.72 | RUNASLEVEL system variable | 445 |
| 21.72.1 | Run as license level | 445 |
| 21.73 | RVTRFALEVELOFDDETAIL system variable | 445 |
| 21.73.1 | Level of detail | 445 |
| 21.74 | RVTVALIDATEBREP system variable | 446 |
| 21.74.1 | Validate BREP geometry | 446 |
| 22. | S | 447 |
| 22.1 | SAFEMODE system variable | 447 |
| 22.1.1 | Safe mode | 447 |
| 22.2 | SAVECHANGETOLAYOUT system variable | 447 |
| 22.2.1 | Save changes to layout | 447 |
| 22.3 | SAVEFIDELITY system variable | 447 |
| 22.3.1 | Save fidelity | 447 |
| 22.4 | SAVEFILE system variable | 448 |
| 22.4.1 | Save file name | 448 |
| 22.5 | SAVEFILEPATH system variable | 448 |
| 22.5.1 | Save file path | 448 |
| 22.6 | SAVEFORMAT system variable | 448 |
| 22.6.1 | Save format | 448 |
| 22.7 | SAVELAYERSNAPSHOT system variable | 449 |
| 22.7.1 | Save Layer Snapshot with view | 449 |
| 22.8 | SAVENAME system variable | 450 |
| 22.8.1 | Saved drawing name | 450 |
| 22.9 | SAVEONDOCSWITCH system variable | 450 |
| 22.9.1 | Save on document switch | 450 |
| 22.10 | SAVEROUNDTRIP system variable | 450 |
| 22.10.1 | Save roundtrip | 450 |
| 22.11 | SAVETIME system variable | 451 |
| 22.11.1 | Save time interval | 451 |
| 22.12 | SCREENBOXES system variable | 451 |
| 22.12.1 | Screen menu boxes | 451 |
| 22.13 | SCREENMODE system variable | 451 |
| 22.13.1 | Screen mode | 451 |
| 22.14 | SCREENSIZE system variable | 452 |
| 22.14.1 | Screen size | 452 |
| 22.15 | SCRLHIST system variable | 452 |
| 22.15.1 | Scroll history | 452 |



Spis treści

| | | |
|---------|---|-----|
| 22.16 | SDI system variable | 452 |
| 22.16.1 | Single-document interface (Windows) | 452 |
| 22.17 | SECTIONRESULTINTERVAL system variable | 453 |
| 22.17.1 | Section result interval | 453 |
| 22.18 | SECTIONSCALE system variable | 453 |
| 22.18.1 | Section scale | 453 |
| 22.19 | SECTIONSETTINGSSEARCHPATH system variable | 454 |
| 22.19.1 | Section settings search path | 454 |
| 22.20 | SECTIONSHEETSETTEMPLATEIMPERIAL system variable | 454 |
| 22.20.1 | Section sheet set template imperial | 454 |
| 22.21 | SECTIONSHEETSETTEMPLATEMETRIC system variable | 454 |
| 22.21.1 | Section sheet set template metric | 454 |
| 22.22 | SECURELOAD system variable | 455 |
| 22.22.1 | Executable file security policy | 455 |
| 22.23 | SELECTIONANNODISPLAY system variable | 455 |
| 22.23.1 | Show all annotation scales on selection | 455 |
| 22.24 | SELECTIONAREA system variable | 456 |
| 22.24.1 | Selection area | 456 |
| 22.25 | SELECTIONAREAOPACITY system variable | 456 |
| 22.25.1 | Selection area opacity | 456 |
| 22.26 | SELECTIONMODES system variable | 456 |
| 22.26.1 | Selection modes | 456 |
| 22.27 | SELECTIONPREVIEW system variable | 457 |
| 22.27.1 | Selection preview display | 457 |
| 22.28 | SELECTSIMILARMODE system variable | 457 |
| 22.28.1 | Match options for SELECTSIMILAR | 457 |
| 22.29 | SETBYLAYERMODE system variable | 458 |
| 22.29.1 | Options for SETBYLAYERMODE | 458 |
| 22.30 | SHADEDGE system variable | 458 |
| 22.30.1 | Shading edges | 458 |
| 22.31 | SHADEDIF system variable | 459 |
| 22.31.1 | Shading diffusion | 459 |
| 22.32 | SHEETNUMBERLEADINGZEROES system variable | 459 |
| 22.32.1 | Sheet number leading zeroes | 459 |
| 22.33 | SHEETSETAUTOBACKUP system variable | 460 |
| 22.33.1 | Sheet set automatic backup | 460 |
| 22.34 | SHEETSETTEMPLATEPATH system variable | 460 |
| 22.34.1 | Sheet Set template path | 460 |
| 22.35 | SHORTCUTMENU system variable | 460 |
| 22.35.1 | Shortcut menus | 460 |
| 22.36 | SHORTCUTMENUDURATION system variable | 461 |
| 22.36.1 | Shortcut menu duration | 461 |
| 22.37 | SHOWDOCTABS system variable | 461 |
| 22.37.1 | Tabs visibility | 461 |
| 22.38 | SHOWFULLPATHINTITLE system variable | 462 |
| 22.38.1 | Display full path in title | 462 |
| 22.39 | SHOWLAYERUSAGE system variable | 462 |
| 22.39.1 | Layer Usage | 462 |



Spis treści

| | | |
|---------|--|-----|
| 22.40 | SHOWSCROLLBUTTONS system variable | 462 |
| 22.40.1 | Scroll buttons (Mac & Linux) | 462 |
| 22.41 | SHOWTABCLOSEBUTTON system variable | 463 |
| 22.41.1 | Close button on tabs (Mac & Linux) | 463 |
| 22.42 | SHOWTABCLOSEBUTTONACTIVE system variable | 463 |
| 22.42.1 | Close button on active tab (Mac & Linux) | 463 |
| 22.43 | SHOWTABCLOSEBUTTONALL system variable | 464 |
| 22.43.1 | Close button on all tabs (Mac & Linux) | 464 |
| 22.44 | SHOWWINDOWLISTBUTTON system variable | 464 |
| 22.44.1 | Window list button (Mac & Linux) | 464 |
| 22.45 | SHPNAME system variable | 464 |
| 22.45.1 | Shape name | 464 |
| 22.46 | SIGWARN system variable | 465 |
| 22.46.1 | Signature warning | 465 |
| 22.47 | SINGLETONMODE system variable | 465 |
| 22.47.1 | Singleton mode | 465 |
| 22.48 | SKETCHINC system variable | 465 |
| 22.48.1 | Sketch increment | 465 |
| 22.49 | SKPOLY system variable | 466 |
| 22.49.1 | Sketch poly | 466 |
| 22.50 | SKYSTATUS system variable | 466 |
| 22.50.1 | Sky status | 466 |
| 22.51 | SMASSEMBLYEXPORTMODE system variable | 467 |
| 22.51.1 | Modification of exported assemblies | 467 |
| 22.52 | SMASSEMBLYEXPORTREPORTPATHTYPE system variable | 467 |
| 22.52.1 | Report file path type | 467 |
| 22.53 | SMASSEMBLYEXPORTSOLIDTYPESINREPORTS system variable | 467 |
| 22.53.1 | Solid types in reports | 467 |
| 22.54 | SMATTRIBUTESLAYERCOLOR system variable | 468 |
| 22.54.1 | Color of the attributes layer | 468 |
| 22.55 | SMATTRIBUTESLAYERTEXTHEIGHT system variable | 468 |
| 22.55.1 | Height of the text | 468 |
| 22.56 | SMATTRIBUTESLAYERTEXTHEIGHTTYPE system variable | 468 |
| 22.56.1 | Type of the text height | 468 |
| 22.57 | SMBENDANNOTATIONSLAYERCOLOR system variable | 469 |
| 22.57.1 | Color of the bend annotations text layer | 469 |
| 22.58 | SMBENDANNOTATIONSLAYERTEXTHEIGHT system variable | 469 |
| 22.58.1 | Height of the text | 469 |
| 22.59 | SMBENDANNOTATIONSLAYERTEXTHEIGHTTYPE system variable | 470 |
| 22.59.1 | Type of the text height | 470 |
| 22.60 | SMBENDLINESDOWNLAYERCOLOR system variable | 470 |
| 22.60.1 | Color of the bend down lines layer | 470 |
| 22.61 | SMBENDLINESDOWNLAYERLINETYPE system variable | 470 |
| 22.61.1 | Linetype of the bend down lines layer | 470 |
| 22.62 | SMBENDLINESDOWNLAYERLINEWEIGHT system variable | 471 |
| 22.62.1 | Lineweight of the bend down layer | 471 |
| 22.63 | SMBENDLINESUPPLAYERCOLOR system variable | 471 |
| 22.63.1 | Color of the bend up lines layer | 471 |



Spis treści

| | | |
|---------|--|-----|
| 22.64 | SMBENDLINESUPLAYERLINETYPE system variable | 471 |
| 22.64.1 | Linetype of the bend up lines layer | 471 |
| 22.65 | SMBENDLINESUPLAYERLINEWEIGHT system variable | 472 |
| 22.65.1 | Lineweight of the bend up layer | 472 |
| 22.66 | SMBEVELFEATURECOLOR system variable | 472 |
| 22.66.1 | Color of the bevel features layer | 472 |
| 22.67 | SMCOLORBEND system variable | 472 |
| 22.67.1 | Bend relief feature color | 472 |
| 22.68 | SMCOLORBENDRELIEF system variable | 473 |
| 22.68.1 | Bend relief feature color | 473 |
| 22.69 | SMCOLORBEVEL system variable | 473 |
| 22.69.1 | Bevel feature color | 473 |
| 22.70 | SMCOLORCORNERRELIEF system variable | 473 |
| 22.70.1 | Corner relief feature color | 473 |
| 22.71 | SMCOLORFLANGE system variable | 474 |
| 22.71.1 | Flange feature color | 474 |
| 22.72 | SMCOLORFLANGEREFERENCESIDE system variable | 474 |
| 22.72.1 | Flange feature reference side color | 474 |
| 22.73 | SMCOLORFORM system variable | 474 |
| 22.73.1 | Form feature color | 474 |
| 22.74 | SMCOLORHEM system variable | 475 |
| 22.74.1 | Hem feature color | 475 |
| 22.75 | SMCOLORJOG system variable | 475 |
| 22.75.1 | Jog feature color | 475 |
| 22.76 | SMCOLORJUNCTION system variable | 475 |
| 22.76.1 | Junction feature color | 475 |
| 22.77 | SMCOLORLOFTEDBEND system variable | 475 |
| 22.77.1 | Lofted bend feature color | 475 |
| 22.78 | SMCOLORMITER system variable | 476 |
| 22.78.1 | Miter feature color | 476 |
| 22.79 | SMCOLORROLLEDEGE system variable | 476 |
| 22.79.1 | Rolled edge feature color | 476 |
| 22.80 | SMCOLORTAB system variable | 476 |
| 22.80.1 | Tab feature color | 476 |
| 22.81 | SMCOLORWRONGBEND system variable | 477 |
| 22.81.1 | Wrong bend feature color | 477 |
| 22.82 | SMCOLORWRONGFLANGE system variable | 477 |
| 22.82.1 | Wrong flange feature color | 477 |
| 22.83 | SMCONTOURSLAYERCOLOR system variable | 477 |
| 22.83.1 | Color of the contour layer | 477 |
| 22.84 | SMCONTOURSLAYERLINETYPE system variable | 478 |
| 22.84.1 | Linetype of the contour layer | 478 |
| 22.85 | SMCONTOURSLAYERLINEWEIGHT system variable | 478 |
| 22.85.1 | Lineweight of the contour layer | 478 |
| 22.86 | SMCONVERTMAXIMALBEVELANGLE system variable | 478 |
| 22.86.1 | Maximal angle of bevel | 478 |
| 22.87 | SMCONVERTMINIMALBEVELANGLE system variable | 479 |
| 22.87.1 | Minimal angle of bevel | 479 |



Spis treści

| | | |
|----------|--|-----|
| 22.88 | SMCONVERTPREFERFORMFEATURES system variable | 479 |
| 22.88.1 | Prefer form features to flanges and bends | 479 |
| 22.89 | SMCONVERTPREFERHEMFEATURES system variable | 480 |
| 22.89.1 | Prefer hem features to flanges and bends | 480 |
| 22.90 | SMCONVERTPREFERZEROBENDFEATURES system variable | 480 |
| 22.90.1 | Prefer zero bend features to wrong bends | 480 |
| 22.91 | SMCONVERTRECOGNIZEHOLES system variable | 480 |
| 22.91.1 | Recognize holes | 480 |
| 22.92 | SMCONVERTRECOGNIZERIBCONTROLCURVES system variable | 481 |
| 22.92.1 | Recognize rib control curves | 481 |
| 22.93 | SMCONVERTWRONGFEATURETHICKNESSDEVIATIONTYPE system variable | 481 |
| 22.93.1 | Type of deviation of wrong feature thickness | 481 |
| 22.94 | SMCONVERTWRONGFEATURETHICKNESSDEVIATIONVALUE system variable | 482 |
| 22.94.1 | Deviation value of wrong feature thickness | 482 |
| 22.95 | SMDEFAULTBENDLINEEXTENTTYPE system variable | 482 |
| 22.95.1 | Bend line extent type | 482 |
| 22.96 | SMDEFAULTBENDLINEEXTENTVALUE system variable | 482 |
| 22.96.1 | Bend line extent value | 482 |
| 22.97 | SMDEFAULTBENDRADIUSTYPE system variable | 483 |
| 22.97.1 | Bend radius type | 483 |
| 22.98 | SMDEFAULTBENDRADIUSVALUE system variable | 483 |
| 22.98.1 | Bend radius value | 483 |
| 22.99 | SMDEFAULTBENDRELIEFWIDTHTYPE system variable | 484 |
| 22.99.1 | Bend relief type | 484 |
| 22.100 | SMDEFAULTBENDRELIEFWIDTHVALUE system variable | 484 |
| 22.100.1 | Bend relief width value | 484 |
| 22.101 | SMDEFAULTBEVELFEATUREUNFOLDMODE system variable | 484 |
| 22.101.1 | Bevel unfolding mode | 484 |
| 22.102 | SMDEFAULTCORNERRELIEFDIAMETERVALUE system variable | 485 |
| 22.102.1 | Corner relief diameter value | 485 |
| 22.103 | SMDEFAULTFLANGESPLITEXTENSIONTYPE system variable | 485 |
| 22.103.1 | Miter extension type | 485 |
| 22.104 | SMDEFAULTFLANGESPLITEXTENSIONVALUE system variable | 485 |
| 22.104.1 | Miter extension value | 485 |
| 22.105 | SMDEFAULTFLANGESPLITGAPTYPE system variable | 486 |
| 22.105.1 | Miter gap type | 486 |
| 22.106 | SMDEFAULTFLANGESPLITGAPVALUE system variable | 486 |
| 22.106.1 | Miter gap value | 486 |
| 22.107 | SMDEFAULTFORMFEATUREUNFOLDMODE system variable | 487 |
| 22.107.1 | Form feature unfolding mode | 487 |
| 22.108 | SMDEFAULTGUSSETDEPTHVALUE system variable | 487 |
| 22.108.1 | Gusset depth value | 487 |
| 22.109 | SMDEFAULTGUSSETDEPTHTYPE system variable | 487 |
| 22.109.1 | Gusset depth type | 487 |
| 22.110 | SMDEFAULTGUSSETFILLETRADIUSVALUE system variable | 488 |
| 22.110.1 | Gusset fillet radius value | 488 |
| 22.111 | SMDEFAULTGUSSETFILLETRADIUSTYPE system variable | 488 |
| 22.111.1 | Gusset fillet radius type | 488 |



Spis treści

| | | |
|----------|--|-----|
| 22.112 | SMDEFAULTGUSSETTYPE system variable | 489 |
| 22.112.1 | Gusset type | 489 |
| 22.113 | SMDEFAULTGUSSETWIDTHVALUE system variable | 489 |
| 22.113.1 | Gusset width value | 489 |
| 22.114 | SMDEFAULTGUSSETWIDTHTYPE system variable | 489 |
| 22.114.1 | Gusset width type | 489 |
| 22.115 | SMDEFAULTHEMGAPTYPE system variable | 490 |
| 22.115.1 | Open Hem gap type | 490 |
| 22.116 | SMDEFAULTHEMGAPVALUE system variable | 490 |
| 22.116.1 | Open Hem gap value (in addition to the thickness) | 490 |
| 22.117 | SMDEFAULTHEMRELATIVEBENDDEDUCTION system variable | 491 |
| 22.117.1 | Hem relative bend deduction value | 491 |
| 22.118 | SMDEFAULTJUNCTIONALIGNMENTTORELIEF system variable | 491 |
| 22.118.1 | Junction alignment to relief | 491 |
| 22.119 | SMDEFAULTJUNCTIONGAPTYPE system variable | 491 |
| 22.119.1 | Junction gap type | 491 |
| 22.120 | SMDEFAULTJUNCTIONGAPVALUE system variable | 492 |
| 22.120.1 | Junction gap value | 492 |
| 22.121 | SMDEFAULTKFACTOR system variable | 492 |
| 22.121.1 | K-Factor value | 492 |
| 22.122 | SMDEFAULTLOFTEDBENDNUMBERSAMPLES system variable | 493 |
| 22.122.1 | Lofted bend subdivisions | 493 |
| 22.123 | SMDEFAULTRELIEFEXTENSIONTYPE system variable | 493 |
| 22.123.1 | Relief extension type | 493 |
| 22.124 | SMDEFAULTRELIEFEXTENSIONVALUE system variable | 493 |
| 22.124.1 | Relief extension value | 493 |
| 22.125 | SMDEFAULTRIBFILLETTRIADISTYPE system variable | 494 |
| 22.125.1 | Bead fillet radius type | 494 |
| 22.126 | SMDEFAULTRIBFILLETTRIADISVALUE system variable | 494 |
| 22.126.1 | Bead fillet radius value | 494 |
| 22.127 | SMDEFAULTRIBPROFILERADIUSTYPE system variable | 494 |
| 22.127.1 | Bead profile radius type | 494 |
| 22.128 | SMDEFAULTRIBPROFILERADIUSVALUE system variable | 495 |
| 22.128.1 | Bead profile radius value | 495 |
| 22.129 | SMDEFAULTRIBROUNDRADIUSTYPE system variable | 495 |
| 22.129.1 | Bead round radius type | 495 |
| 22.130 | SMDEFAULTRIBROUNDRADIUSVALUE system variable | 495 |
| 22.130.1 | Bead round radius value | 495 |
| 22.131 | SMDEFAULTSHARPBENDRADIUSLIMITRATIO system variable | 496 |
| 22.131.1 | Sharp bend radius limit ratio | 496 |
| 22.132 | SMDEFAULTTABCHAMFERDISTANCETYPE system variable | 496 |
| 22.132.1 | Tab chamfer distance type | 496 |
| 22.133 | SMDEFAULTTABCHAMFERDISTANCEVALUE system variable | 496 |
| 22.133.1 | Tab chamfer distance value | 496 |
| 22.134 | SMDEFAULTTABCLEARANCETYPE system variable | 497 |
| 22.134.1 | Tab clearance type | 497 |
| 22.135 | SMDEFAULTTABCLEARANCEVALUE system variable | 497 |
| 22.135.1 | Tab clearance value | 497 |



Spis treści

| | | |
|----------|---|-----|
| 22.136 | SMDEFAULTTABDISTANCETYPE system variable | 497 |
| 22.136.1 | Tab distance type | 497 |
| 22.137 | SMDEFAULTTABDISTANCEVALUE system variable | 498 |
| 22.137.1 | Tab distance value | 498 |
| 22.138 | SMDEFAULTTABEDGETYPE system variable | 498 |
| 22.138.1 | Tab edge type | 498 |
| 22.139 | SMDEFAULTTABFILLETTRIADISTTYPE system variable | 499 |
| 22.139.1 | Tab fillet radius type | 499 |
| 22.140 | SMDEFAULTTABFILLETTRIADISTVALUE system variable | 499 |
| 22.140.1 | Tab fillet radius value | 499 |
| 22.141 | SMDEFAULTTABHEIGHTTYPE system variable | 499 |
| 22.141.1 | Tab height type | 499 |
| 22.142 | SMDEFAULTTABHEIGHTVALUE system variable | 500 |
| 22.142.1 | Tab height value | 500 |
| 22.143 | SMDEFAULTTABLENGTHTYPE system variable | 500 |
| 22.143.1 | Tab length type | 500 |
| 22.144 | SMDEFAULTTABLENGTHVALUE system variable | 500 |
| 22.144.1 | Tab length value | 500 |
| 22.145 | SMDEFAULTTABSLOTNUMBER system variable | 501 |
| 22.145.1 | Tab slot number | 501 |
| 22.146 | SMDEFAULTTHICKNESS system variable | 501 |
| 22.146.1 | Thickness value | 501 |
| 22.147 | SMEXPORTOSMAPPROXIMATIONACCURACY system variable | 501 |
| 22.148 | SMEXPORTOSMMINIMALEDGELENGTH system variable | 501 |
| 22.149 | SMFORMFEATURESDOWNCOLOR system variable | 501 |
| 22.149.1 | Color of the form features down layer | 501 |
| 22.150 | SMFORMFEATURESDOWNLAYERLINETYPE system variable | 502 |
| 22.150.1 | Linetype of the form features down layer | 502 |
| 22.151 | SMFORMFEATURESDOWNLAYERLINEWEIGHT system variable | 502 |
| 22.151.1 | Lineweight of the form features down layer | 502 |
| 22.152 | SMFORMFEATURESUPCOLOR system variable | 502 |
| 22.152.1 | Color of the form features up layer | 502 |
| 22.153 | SMFORMFEATURESUPLAYERLINETYPE system variable | 503 |
| 22.153.1 | Linetype of the form features up layer | 503 |
| 22.154 | SMFORMFEATURESUPLAYERLINEWEIGHT system variable | 503 |
| 22.154.1 | Lineweight of the form features up layer | 503 |
| 22.155 | SMJUNCTIONCREATEHEALCOINCIDENT system variable | 503 |
| 22.155.1 | Heal coincident junction faces | 503 |
| 22.156 | SMOOTHMESHCONVERT system variable | 504 |
| 22.156.1 | Mesh conversion mode | 504 |
| 22.157 | SMOVERALLANNOTATIONSLAYERCOLOR system variable | 504 |
| 22.157.1 | Color of the overall dimensions annotations layer | 504 |
| 22.158 | SMOVERALLANNOTATIONSLAYERLINETYPE system variable | 505 |
| 22.158.1 | Linetype of the overall annotation layer | 505 |
| 22.159 | SMOVERALLANNOTATIONSLAYERLINEWEIGHT system variable | 505 |
| 22.159.1 | Lineweight of the overall annotation layer | 505 |
| 22.160 | SMPARAMETRIZEHOLESPARAMETRIZATION system variable | 505 |
| 22.160.1 | Hole parametrization | 505 |



Spis treści

| | | |
|----------|--|-----|
| 22.161 | SMREPAIRLOFTEDBENDMERGE system variable | 506 |
| 22.161.1 | Merge lofted bends | 506 |
| 22.162 | SMSMARTFEATURES system variable | 506 |
| 22.162.1 | Automatically update sheet metal features | 506 |
| 22.163 | SMSPLITAMBIGUOUSINPUT system variable | 507 |
| 22.163.1 | Ambiguous input behavior | 507 |
| 22.164 | SMSPLITCONVERTBENDTOJUNCTION system variable | 507 |
| 22.164.1 | Convert bend to junction | 507 |
| 22.165 | SMSPLITHEALCOINCIDENT system variable | 507 |
| 22.165.1 | Heal coincident miter faces | 507 |
| 22.166 | SMSPLITORTHOGONALBENDSPLIT system variable | 508 |
| 22.166.1 | Orthogonal bend split | 508 |
| 22.167 | SMTARGETCAM system variable | 508 |
| 22.167.1 | Target CAM | 508 |
| 22.168 | SNAPANG system variable | 508 |
| 22.168.1 | Snap angle | 508 |
| 22.169 | SNAPBASE system variable | 509 |
| 22.169.1 | Snap base | 509 |
| 22.170 | SNAPCOLOR system variable | 509 |
| 22.170.1 | Snap color (Obsolete) | 509 |
| 22.171 | SNAPISOPAIR system variable | 509 |
| 22.171.1 | Snap isometric pair | 509 |
| 22.172 | SNAPMARKERCOLOR system variable | 510 |
| 22.172.1 | Snap marker color | 510 |
| 22.173 | SNAPMARKERSIZE system variable | 510 |
| 22.173.1 | Snap marker size | 510 |
| 22.174 | SNAPMARKERTHICKNESS system variable | 511 |
| 22.174.1 | Snap marker thickness | 511 |
| 22.175 | SNAPMODE system variable | 511 |
| 22.175.1 | Snap mode | 511 |
| 22.176 | SNAPSIZE system variable | 511 |
| 22.176.1 | Snap size (Obsolete) | 511 |
| 22.177 | SNAPSTYL system variable | 512 |
| 22.177.1 | Snap style | 512 |
| 22.178 | SNAPTHICKNESS system variable | 512 |
| 22.178.1 | Snap thickness (Obsolete) | 512 |
| 22.179 | SNAPTYPE system variable | 512 |
| 22.179.1 | Snap type | 512 |
| 22.180 | SNAPUNIT system variable | 513 |
| 22.180.1 | Snap unit | 513 |
| 22.181 | SOLIDCHECK system variable | 513 |
| 22.181.1 | Solid check | 513 |
| 22.182 | SORTENTS system variable | 513 |
| 22.182.1 | Sort entities | 513 |
| 22.183 | SPAADJUSTMODE system variable | 514 |
| 22.183.1 | Adjust mode | 514 |
| 22.184 | SPACHECKLEVEL system variable | 514 |
| 22.184.1 | Check level | 514 |



Spis treści

| | | |
|----------|---------------------------------------|-----|
| 22.185 | SPAGRIDASPECTRATIO system variable | 515 |
| 22.185.1 | Grid aspect ratio | 515 |
| 22.186 | SPAGRIDMODE system variable | 516 |
| 22.186.1 | Grid mode | 516 |
| 22.187 | SPAMAXFACETEDGELENGTH system variable | 516 |
| 22.187.1 | Maximum facet edge length | 516 |
| 22.188 | SPAMAXNUMGRIDLINES system variable | 516 |
| 22.188.1 | Maximum number of grid lines | 516 |
| 22.189 | SPAMINUGRIDLINES system variable | 517 |
| 22.189.1 | Minimum number of U grid lines | 517 |
| 22.190 | SPAMINVGRIDLINES system variable | 517 |
| 22.190.1 | Minimum number of V grid lines | 517 |
| 22.191 | SPANORMALTOL system variable | 517 |
| 22.191.1 | Normal tolerance | 517 |
| 22.192 | SPASURFACETOL system variable | 518 |
| 22.192.1 | Surface tolerance | 518 |
| 22.193 | SPATRIANGMODE system variable | 518 |
| 22.193.1 | Triangulation mode | 518 |
| 22.194 | SPAUSEFACETRES system variable | 519 |
| 22.194.1 | Use FACETRES system variable | 519 |
| 22.195 | SPLFRAME system variable | 519 |
| 22.195.1 | Spline frame | 519 |
| 22.196 | SPLINESEGS system variable | 519 |
| 22.196.1 | Spline segments | 519 |
| 22.197 | SPLINETYPE system variable | 520 |
| 22.197.1 | Spline type | 520 |
| 22.198 | SRCHPATH system variable | 520 |
| 22.198.1 | Support file search path | 520 |
| 22.199 | SSAUTOSAVE system variable | 521 |
| 22.199.1 | Sheet set autosave | 521 |
| 22.200 | SSFOUND system variable | 521 |
| 22.200.1 | Sheet set found | 521 |
| 22.201 | SSLOCATE system variable | 521 |
| 22.201.1 | Sheet set locate | 521 |
| 22.202 | SSMAUTOOPEN system variable | 522 |
| 22.202.1 | Sheet set manager auto open | 522 |
| 22.203 | SSMPOLLTIME system variable | 522 |
| 22.203.1 | Sheet set manager poll time | 522 |
| 22.204 | SSMSHEETSTATUS system variable | 522 |
| 22.204.1 | Sheet set manager status | 522 |
| 22.205 | SSMSTATE system variable | 523 |
| 22.205.1 | Sheet set manager state | 523 |
| 22.206 | STACKPANELTYPE system variable | 523 |
| 22.206.1 | Stack panel type | 523 |
| 22.207 | STAMPFONTSIZE system variable | 524 |
| 22.207.1 | Font Size | 524 |
| 22.208 | STAMPFONTSTYLE system variable | 524 |
| 22.208.1 | Font Style | 524 |



Spis treści

| | | |
|----------|--|-----|
| 22.209 | STAMPFOOTER system variable | 524 |
| 22.209.1 | Footer | 524 |
| 22.210 | STAMPFOOTEROFFSETX system variable | 525 |
| 22.210.1 | Stamp footer X offset | 525 |
| 22.211 | STAMPFOOTEROFFSETY system variable | 525 |
| 22.211.1 | Stamp footer Y offset | 525 |
| 22.212 | STAMPHEADER system variable | 525 |
| 22.212.1 | Header | 525 |
| 22.213 | STAMPHEADEROFFSETX system variable | 525 |
| 22.213.1 | Stamp header X offset | 525 |
| 22.214 | STAMPHEADEROFFSETY system variable | 526 |
| 22.214.1 | Stamp header Y offset | 526 |
| 22.215 | STAMPUNITS system variable | 526 |
| 22.215.1 | Units | 526 |
| 22.216 | STANDARDSOPTIONS system variable | 526 |
| 22.216.1 | Standards validation options | 526 |
| 22.217 | STANDARDSVIOLATION system variable | 527 |
| 22.217.1 | Standards Violation Notification | 527 |
| 22.218 | STARTUP system variable | 527 |
| 22.218.1 | Startup | 527 |
| 22.219 | STARTUPTODAY system variable | 528 |
| 22.219.1 | Startup today (Obsolete) | 528 |
| 22.220 | STATUSBAR system variable | 528 |
| 22.220.1 | Window status bar | 528 |
| 22.221 | STEPSIZE system variable | 528 |
| 22.221.1 | Step size | 528 |
| 22.222 | STEPSPERSEC system variable | 529 |
| 22.222.1 | Steps per second | 529 |
| 22.223 | STLPOSITIVEQUADRANT system variable | 529 |
| 22.223.1 | STL export coordinates adjustment | 529 |
| 22.224 | STORYBAR system variable | 529 |
| 22.224.1 | Display Story Bar | 529 |
| 22.225 | STRUCTURETREECONFIG system variable | 530 |
| 22.225.1 | Structure Tree Configuration | 530 |
| 22.226 | SURFTAB1 system variable | 530 |
| 22.226.1 | Surface tabulation 1 | 530 |
| 22.227 | SURFTAB2 system variable | 531 |
| 22.227.1 | Surface tabulation 2 | 531 |
| 22.228 | SURFTYPE system variable | 531 |
| 22.228.1 | Surface-fitting type | 531 |
| 22.229 | SURFU system variable | 531 |
| 22.229.1 | Surface U | 531 |
| 22.230 | SURFV system variable | 532 |
| 22.230.1 | Surface V | 532 |
| 22.231 | SVGBLENDEDGRADIENTS system variable | 532 |
| 22.231.1 | Svg Blended Gradients | 532 |
| 22.232 | SVGDEFAULTIMAGEEXTENSION system variable | 532 |
| 22.232.1 | Svg Default Image Extension | 532 |



Spis treści

| | | |
|----------|--|-----|
| 22.233 | SVGGENERICFONTFAMILY system variable | 533 |
| 22.233.1 | Svg Generic Font Family | 533 |
| 22.234 | SVGIMAGEBASE system variable | 533 |
| 22.234.1 | Svg Image base path | 533 |
| 22.235 | SVGIMAGEURL system variable | 533 |
| 22.235.1 | Svg Image Url | 533 |
| 22.236 | SVGLINEWEIGHTSCALE system variable | 534 |
| 22.236.1 | Svg Line Weight Scale | 534 |
| 22.237 | SVGOUTPUTHEIGHT system variable | 534 |
| 22.237.1 | Svg Output Height (in pixels) | 534 |
| 22.238 | SVGOUTPUTWIDTH system variable | 534 |
| 22.238.1 | Svg Output Width (in pixels) | 534 |
| 22.239 | SVGPRECISION system variable | 535 |
| 22.239.1 | Svg Floating Point Precision | 535 |
| 22.240 | SVGSCALEFACTOR system variable | 535 |
| 22.240.1 | Svg Scale Factor | 535 |
| 22.241 | SYSCODEPAGE system variable | 535 |
| 22.241.1 | System code page | 535 |
| 23. | T | 536 |
| 23.1 | TABCONTROLHEIGHT system variable | 536 |
| 23.1.1 | Tab control height in pixels (Mac & Linux) | 536 |
| 23.2 | TABMODE system variable | 536 |
| 23.2.1 | Tablet mode | 536 |
| 23.3 | TABSFIXEDWIDTH system variable | 536 |
| 23.3.1 | Tabs fixed width (Mac & Linux) | 536 |
| 23.4 | TANGENTLENGTHTYPE system variable | 537 |
| 23.4.1 | Tangent Length Type | 537 |
| 23.5 | TANGENTLENGTHVALUE system variable | 537 |
| 23.5.1 | Tangent Length Value | 537 |
| 23.6 | TARGET system variable | 537 |
| 23.6.1 | Target | 537 |
| 23.7 | TDCREATE system variable | 538 |
| 23.7.1 | Time/Date create | 538 |
| 23.8 | TDINDWG system variable | 538 |
| 23.8.1 | Time/Date in drawing | 538 |
| 23.9 | TDUCREATE system variable | 538 |
| 23.9.1 | Time/Date universal create | 538 |
| 23.10 | TDUPDATE system variable | 538 |
| 23.10.1 | Time/Date update | 538 |
| 23.11 | TDUSRTIMER system variable | 539 |
| 23.11.1 | Time/Date user timer | 539 |
| 23.12 | TDUUPDATE system variable | 539 |
| 23.12.1 | Time/Date universal update | 539 |
| 23.13 | TEETANGENTLENGTHTYPE system variable | 539 |
| 23.13.1 | Tee Length Type | 539 |
| 23.14 | TEETANGENTLENGTHVALUE system variable | 539 |
| 23.14.1 | Tee Length Value | 539 |
| 23.15 | TEMPLATEPATH system variable | 540 |



Spis treści

| | | |
|---------|---|-----|
| 23.15.1 | Template path | 540 |
| 23.16 | TEMPPREFIX system variable | 540 |
| 23.16.1 | Temporary prefix | 540 |
| 23.17 | TEXTANGLE system variable | 540 |
| 23.17.1 | Text angle | 540 |
| 23.18 | TEXTED system variable | 540 |
| 23.18.1 | Text editor for single line text entities | 540 |
| 23.19 | TEXTEDITMODE system variable | 541 |
| 23.19.1 | Text edit mode | 541 |
| 23.20 | TEXTEVAL system variable | 541 |
| 23.20.1 | Text evaluation | 541 |
| 23.21 | TEXTFILL system variable | 542 |
| 23.21.1 | Text fill | 542 |
| 23.22 | TEXTQLTY system variable | 542 |
| 23.22.1 | Text quality (Mac & Linux) | 542 |
| 23.23 | TEXTSIZE system variable | 543 |
| 23.23.1 | Text size | 543 |
| 23.24 | TEXTSTYLE system variable | 543 |
| 23.24.1 | Text style | 543 |
| 23.25 | TEXTUREMAPPATH system variable | 543 |
| 23.25.1 | Texture map path | 543 |
| 23.26 | THICKNESS system variable | 544 |
| 23.26.1 | Thickness | 544 |
| 23.27 | THREADDISPLAY system variable | 544 |
| 23.27.1 | Thread representation | 544 |
| 23.28 | THUMBSIZE system variable | 544 |
| 23.28.1 | Thumbnail preview image size | 544 |
| 23.29 | TILEMODE system variable | 545 |
| 23.29.1 | Tile mode | 545 |
| 23.30 | TILEMODELIGHTSYNCH system variable | 545 |
| 23.30.1 | Tile mode light synch | 545 |
| 23.31 | TIMEZONE system variable | 546 |
| 23.31.1 | Timezone | 546 |
| 23.32 | TOOLBARMARGIN system variable | 548 |
| 23.32.1 | Toolbar margin | 548 |
| 23.33 | TOOLBUTTONSIZE system variable | 548 |
| 23.33.1 | Tool button size | 548 |
| 23.34 | TOOLICONPADDING system variable | 549 |
| 23.34.1 | Tool icon padding | 549 |
| 23.35 | TOOLPALETTEPATH system variable | 549 |
| 23.35.1 | Tool palettes path | 549 |
| 23.36 | TOOLTIPDELAY system variable | 549 |
| 23.36.1 | Tooltip delay | 549 |
| 23.37 | TOOLTIPS system variable | 550 |
| 23.37.1 | Tooltips | 550 |
| 23.38 | TPSTATE system variable | 550 |
| 23.38.1 | Tool Palettes bar state | 550 |
| 23.39 | TRACEWID system variable | 550 |



Spis treści

| | | |
|---------|-------------------------------------|-----|
| 23.39.1 | Trace width | 550 |
| 23.40 | TRACKPATH system variable | 551 |
| 23.40.1 | Track path | 551 |
| 23.41 | TRANSPARENCYDISPLAY system variable | 551 |
| 23.41.1 | Transparency display | 551 |
| 23.42 | TRAYICONS system variable | 551 |
| 23.42.1 | Tray icons | 551 |
| 23.43 | TRAYNOTIFY system variable | 552 |
| 23.43.1 | Tray notify | 552 |
| 23.44 | TRAYTIMEOUT system variable | 552 |
| 23.44.1 | Tray timeout | 552 |
| 23.45 | TREEDEPTH system variable | 552 |
| 23.45.1 | Tree depth | 552 |
| 23.46 | TREEMAX system variable | 553 |
| 23.46.1 | Tree maximum | 553 |
| 23.47 | TRIMMODE system variable | 553 |
| 23.47.1 | Trim mode | 553 |
| 23.48 | TRUSTEDPATHS system variable | 554 |
| 23.48.1 | Trusted executable file locations | 554 |
| 23.49 | TSPACEFAC system variable | 554 |
| 23.49.1 | Text space factor | 554 |
| 23.50 | TSPACETYPE system variable | 555 |
| 23.50.1 | Text space type | 555 |
| 23.51 | TSTACKALIGN system variable | 555 |
| 23.51.1 | Text stack align | 555 |
| 23.52 | TSTACKSIZE system variable | 556 |
| 23.52.1 | Text stack size | 556 |
| 23.53 | TTFTEXT system variable | 556 |
| 23.53.1 | TrueType Text displaying mode | 556 |
| 24. | U | 557 |
| 24.1 | UCSAXISANG system variable | 557 |
| 24.1.1 | UCS axis angle | 557 |
| 24.2 | UCSBASE system variable | 557 |
| 24.2.1 | UCS base | 557 |
| 24.3 | UCSDETECT system variable | 557 |
| 24.3.1 | UCS detect | 557 |
| 24.4 | UCSFOLLOW system variable | 558 |
| 24.4.1 | UCS follow | 558 |
| 24.5 | UCSICON system variable | 558 |
| 24.5.1 | UCS icon | 558 |
| 24.6 | UCSICONPOS system variable | 558 |
| 24.6.1 | UCS icon position | 558 |
| 24.7 | UCSNAME system variable | 559 |
| 24.7.1 | UCS name | 559 |
| 24.8 | UCSORG system variable | 559 |
| 24.8.1 | UCS origin | 559 |
| 24.9 | UCSORTHO system variable | 560 |
| 24.9.1 | UCS orthographic | 560 |



Spis treści

| | | |
|---------|---------------------------------|-----|
| 24.10 | UCSVIEW system variable | 560 |
| 24.10.1 | UCS view | 560 |
| 24.11 | UCSVP system variable | 560 |
| 24.11.1 | UCS viewports | 560 |
| 24.12 | UCSXDIR system variable | 561 |
| 24.12.1 | UCS X direction | 561 |
| 24.13 | UCSYDIR system variable | 561 |
| 24.13.1 | UCS Y direction | 561 |
| 24.14 | UNDOCTL system variable | 561 |
| 24.14.1 | Undo control | 561 |
| 24.15 | UNDOMARKS system variable | 562 |
| 24.15.1 | Undo marks | 562 |
| 24.16 | UNITESURFACES system variable | 562 |
| 24.17 | UNITMODE system variable | 562 |
| 24.17.1 | Unit mode | 562 |
| 24.18 | USECOMMUNICATOR system variable | 563 |
| 24.18.1 | Use Communicator | 563 |
| 24.19 | USENEWRIBBON system variable | 563 |
| 24.19.1 | Use the new Ribbon | 563 |
| 24.20 | USERI1 system variable | 564 |
| 24.20.1 | User integer 1 | 564 |
| 24.21 | USERI2 system variable | 564 |
| 24.21.1 | User integer 2 | 564 |
| 24.22 | USERI3 system variable | 564 |
| 24.22.1 | User integer 3 | 564 |
| 24.23 | USERI4 system variable | 565 |
| 24.23.1 | User integer 4 | 565 |
| 24.24 | USERI5 system variable | 565 |
| 24.24.1 | User integer 5 | 565 |
| 24.25 | USERR1 system variable | 565 |
| 24.25.1 | User real 1 | 565 |
| 24.26 | USERR2 system variable | 565 |
| 24.26.1 | User real 2 | 565 |
| 24.27 | USERR3 system variable | 566 |
| 24.27.1 | User real 3 | 566 |
| 24.28 | USERR4 system variable | 566 |
| 24.28.1 | User real 4 | 566 |
| 24.29 | USERR5 system variable | 566 |
| 24.29.1 | User real 5 | 566 |
| 24.30 | USERS1 system variable | 567 |
| 24.30.1 | User string 1 | 567 |
| 24.31 | USERS2 system variable | 567 |
| 24.31.1 | User string 2 | 567 |
| 24.32 | USERS3 system variable | 567 |
| 24.32.1 | User string 3 | 567 |
| 24.33 | USERS4 system variable | 567 |
| 24.33.1 | User string 4 | 567 |
| 24.34 | USERS5 system variable | 567 |



Spis treści

| | | |
|---------|---|-----|
| 24.34.1 | User string 5 | 567 |
| 24.35 | UVESTANDARDOPENFILEDIALOG system variable | 568 |
| 24.35.1 | Use standard open file dialog (Windows) | 568 |
| 25. | V | 569 |
| 25.1 | VBAMACROS system variable | 569 |
| 25.1.1 | Enable macros | 569 |
| 25.2 | VENDORNAME system variable | 569 |
| 25.2.1 | Vendor name | 569 |
| 25.3 | VERBOSEBIMSECTIONUPDATE system variable | 569 |
| 25.3.1 | Additional diagnostics while section update | 569 |
| 25.4 | VERSIONCONTROLCONFIGPATH system variable | 570 |
| 25.4.1 | Version Control config path | 570 |
| 25.5 | VERSIONCONTROLDOWNLOADPATH system variable | 570 |
| 25.5.1 | Version Control download path | 570 |
| 25.6 | VERSIONCUSTOMIZABLEFILES system variable | 570 |
| 25.6.1 | Version customizable files | 570 |
| 25.7 | VIEWCTR system variable | 570 |
| 25.7.1 | View center | 570 |
| 25.8 | VIEWDIR system variable | 571 |
| 25.8.1 | View direction | 571 |
| 25.9 | VIEWMODE system variable | 571 |
| 25.9.1 | View mode | 571 |
| 25.10 | VIEWSIZE system variable | 571 |
| 25.10.1 | View size | 571 |
| 25.11 | VIEWTWIST system variable | 572 |
| 25.11.1 | View twist | 572 |
| 25.12 | VIEWUPDATEAUTO system variable | 572 |
| 25.12.1 | Automatically update drawing views | 572 |
| 25.13 | VISRETAIN system variable | 572 |
| 25.13.1 | Visibility retain | 572 |
| 25.14 | VOLUMEPREC system variable | 573 |
| 25.14.1 | Volume precision | 573 |
| 25.15 | VOLUMEUNITS system variable | 574 |
| 25.15.1 | Volume units | 574 |
| 25.16 | VPMAXIMIZEDSTATE system variable | 574 |
| 25.16.1 | Viewport maximized | 574 |
| 25.17 | VPROTATEASSOC system variable | 575 |
| 25.17.1 | Rotate view | 575 |
| 25.18 | VSMAX system variable | 575 |
| 25.18.1 | Virtual screen maximum | 575 |
| 25.19 | VSMIN system variable | 575 |
| 25.19.1 | Virtual screen minimum | 575 |
| 25.20 | VTDURATION system variable | 576 |
| 25.20.1 | View transition duration | 576 |
| 25.21 | VTENABLE system variable | 576 |
| 25.21.1 | Enable view transitions | 576 |
| 25.22 | VTFPS system variable | 576 |
| 25.22.1 | View transition minimum FPS | 576 |



Spis treści

| | | |
|---------|---------------------------------|-----|
| 26. | W | 578 |
| 26.1 | WARNINGMESSAGES system variable | 578 |
| 26.1.1 | Warning messages | 578 |
| 26.2 | WHIPARC system variable | 578 |
| 26.2.1 | Whip arcs | 578 |
| 26.3 | WHIPTHREAD system variable | 579 |
| 26.3.1 | Whip thread | 579 |
| 26.4 | WINDOWAREACOLOR system variable | 579 |
| 26.4.1 | Window area color | 579 |
| 26.5 | WIPEOUTFRAME system variable | 580 |
| 26.5.1 | Wipeout frame | 580 |
| 26.6 | WMFBKGND system variable | 580 |
| 26.6.1 | Windows Meta File background | 580 |
| 26.7 | WMFFOREGND system variable | 580 |
| 26.7.1 | Windows Meta File foreground | 580 |
| 26.8 | WNDLMAIN system variable | 581 |
| 26.8.1 | Main window state | 581 |
| 26.9 | WNDLSCRL system variable | 581 |
| 26.9.1 | Window scrollbars (Windows) | 581 |
| 26.10 | WNDLTEXT system variable | 582 |
| 26.10.1 | Text window state | 582 |
| 26.11 | WNDPMAIN system variable | 582 |
| 26.11.1 | Main window top left | 582 |
| 26.12 | WNDPTEXT system variable | 582 |
| 26.12.1 | Text window top left | 582 |
| 26.13 | WNDMAIN system variable | 582 |
| 26.13.1 | Main window size | 582 |
| 26.14 | WNDSTEXT system variable | 583 |
| 26.14.1 | Text window size | 583 |
| 26.15 | WORLDUCS system variable | 583 |
| 26.15.1 | World UCS | 583 |
| 26.16 | WORLDVIEW system variable | 583 |
| 26.16.1 | World view | 583 |
| 26.17 | WRITESTAT system variable | 584 |
| 26.17.1 | Write status | 584 |
| 26.18 | WSAUTOSAVE system variable | 584 |
| 26.18.1 | Workspace autosave | 584 |
| 26.19 | WSCURRENT system variable | 584 |
| 26.19.1 | Current workspace | 584 |
| 27. | X | 586 |
| 27.1 | XCLIPFRAME system variable | 586 |
| 27.1.1 | Xref clipping frame | 586 |
| 27.2 | XDWGFADECTL system variable | 586 |
| 27.2.1 | Xref database fade control | 586 |
| 27.3 | XEDIT system variable | 586 |
| 27.3.1 | Xref editable | 586 |
| 27.4 | XFADECTL system variable | 587 |
| 27.4.1 | Reference editing fade control | 587 |



Spis treści

| | | |
|---------|------------------------------|-----|
| 27.5 | XLOADCTL system variable | 587 |
| 27.5.1 | Xref load control | 587 |
| 27.6 | XLOADPATH system variable | 588 |
| 27.6.1 | Xref load path | 588 |
| 27.7 | XNOTIFYTIME system variable | 588 |
| 27.7.1 | Xnotify time | 588 |
| 27.8 | XREFCTL system variable | 588 |
| 27.8.1 | Xref control | 588 |
| 27.9 | XREFNOTIFY system variable | 588 |
| 27.9.1 | Xref notify | 588 |
| 27.10 | XREFOVERRIDE system variable | 589 |
| 27.10.1 | Xref override | 589 |
| 28. | Y | 590 |
| 29. | Z | 591 |
| 29.1 | ZOOMFACTOR system variable | 591 |
| 29.1.1 | Zoom factor | 591 |
| 29.2 | ZOOMWHEEL system variable | 591 |
| 29.2.1 | Mouse wheel zoom direction | 591 |



1. System variable reference

The System variable reference gives an overview of all the system variables in BricsCAD®.

System variables and preferences variables are used to save BricsCAD® settings and user preferences. They can be accessed through the Settings dialog box. Many system variables correspond to other CAD software. When a variable is BricsCAD® specific, this is indicated as well.

Note: The AUTOCOMPLETEMODE system variable value defines whether system and/or preference variables are recognized when typing in the Command line.

1.1 System variable data types

- **Boolean:** the value is either 1 or 0 (True or False, Yes or No).
- **Short:** integer value in the range of -32,768 to +32,767.
- **Long:** integer value in the range of -2,147,483,648 to +2,147,483,647.
- **Real:** floating point numbers with a period for a decimal point and no thousands separator.
- **String:** text.
- **String Standard:** text according to a specific format, for example a folder path.
- **3D point:** specifies a point in a 3D space.
- **2D point:** specifies a point in the XY-plane.
- **Bit flag variables:** integer variable controlled by bit codes. The value of this variable changes by adding or removing options.

| Entity snap mode | 0x0007 (7) |
|------------------|--|
| 1 | <input checked="" type="checkbox"/> Endpoint |
| 2 | <input checked="" type="checkbox"/> Midpoint |
| 4 | <input checked="" type="checkbox"/> Center |
| 8 | <input type="checkbox"/> Node |
| 16 | <input type="checkbox"/> Quadrant |
| 32 | <input type="checkbox"/> Intersection |
| 64 | <input type="checkbox"/> Insertion |
| 128 | <input type="checkbox"/> Perpendicular |
| 256 | <input type="checkbox"/> Tangent |
| 512 | <input type="checkbox"/> Nearest |
| 1024 | <input type="checkbox"/> Geometric center |
| 2048 | <input type="checkbox"/> Apparent intersection |
| 4096 | <input type="checkbox"/> Extension |
| 8192 | <input type="checkbox"/> Parallel |
| 16384 | <input type="checkbox"/> Turn off all snaps |

1.2 System variables save location

- Windows **registry** (or **config** file for macOS and LINUX): the value is saved in a user profile. When you start BricsCAD®, the values of the current user profile are loaded. The values apply to all drawings in the current BricsCAD® session. The current user profile is set in the User Profile Manager dialog box. Launch the PROFILEMANAGER command to open this dialog box.
- **Drawing:** the value is saved in the drawing and applies to that drawing only.
- **Preference:** the value is saved in a user profile. When you start BricsCAD the values of the current user profile are loaded. The values apply to all drawings in the current BricsCAD session.



- **NOT saved:** the default value is hard-coded, and the new value is not saved when BricsCAD® is restarted.
- **Workspace:** the value is saved in the current workspace.

Note: The distinction between system and preference variable is strictly about whether the setting is marked as a system variable (save="reg") or user preference (save="prf") in settings.xml.

1.3 Editing system variables

The system variables have a default value which can be edited:

- Through the Settings dialog box.
- By typing it in the Command line.

In the Settings dialog box, you can also filter variables that are no longer set to their default value.

1.4 Searching for variables

You can use the SETVAR command to search for a variable.



2. _

2.1 _QUADTABFLAGS system variable

2.1.1 Quad tab flags

Temporary setting used while new quad tab layout is being implemented. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 31 |
| Default value: | 12 |
| Possible options: | 1: Fixed width tabs 2: Center tab labels 4: Tab borders 8: Double tab height 16: Show 3D Solid mass properties |

2.2 _VERNUM system variable

2.2.1 Version number

Shows the program version number.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |



3. 3

3.1 3DCOMPAREMODE system variable

3.1.1 Compare visualization mode

The value of the 3DCOMPAREMODE system variable controls the display in the viewports of the Comparison layout.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 3 |
| Possible values: | 0: First model on the left, second model on the right. 1: First model with differences on the left, second model on the right. 2: First model on the left, second model with differences on the right. 3: First model with differences on the left, second model with differences on the right. 4: Both models with all differences in one viewport. 5: Both models with all differences in one viewport. 6: Both models with all differences in one viewport. 7: Both models with all differences in one viewport. |

3.2 3DOSMODE system variable

3.2.1 3D entity snap mode

The current 3D entity snap modes are saved through the 3DOSMODE system variable as the sum of the bitcodes of the selected snap modes.

| | |
|----------------|------------|
| Type: | Long |
| Saved in: | Registry |
| Range: | 0 to 33023 |
| Default value: | 11 |



| | |
|------------------|--|
| Possible values: | 1: Turn off all 3D snaps 2: 3D Entity Vertices and Control Vertices of Splines 4: Midpoint of edge 8: Center of face 16: Spline Knot 32: Perpendicular to face 64: Nearest to face 128: Pointcloud nearest Point 32768: Intersection with face |
|------------------|--|

3.3 3DSNAPMARKERCOLOR system variable

3.3.1 3d snap marker color

Specifies the color of the 3d snap marker. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 5 |



4. A

4.1 ACADLSPASDOC system variable

4.1.1 on_start.lsp for each doc

Specifies whether on_start_default.lsp and on_start.lsp are loaded into every drawing as are on_doc_load.lsp and on_doc_load_default.lsp, or just when the first drawing opens in a session.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Do not load on_start.lsp with every drawing On (1): Load on_start.lsp with every drawing |

4.2 ACADPREFIX system variable

4.2.1 Program folder path

List of support paths, with path separators appended if necessary.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

4.3 ACADVER system variable

4.3.1 AutoCAD version

Shows the AutoCAD compatible program version number.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |



4.4 ACISHLRRESOLUTION system variable

4.4.1 Hidden line removal resolution

Specifies the smallest distance taken into consideration during Hidden Line Removal calculation. A negative value means that auto-calibration based on the size of the model will be used. This is highly recommended. When dealing with entities that have very small sizes the value can be set to 0.001 or smaller.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | -1.0 |

4.5 ACISOUTVER system variable

4.5.1 Acisout version

Specifies the ACIS version of the SAT files created by ACISOUT.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Not saved |
| Default value: | 70 |

4.6 ADAPTIVEGRIDSTEPSIZE system variable

4.6.1 Adaptive grid step size

Specifies the snap spacing (in pixels) for 'Adaptive Grid Snap' mode of SNAPTYPE system variable. Values between 2 and 100 are accepted. The step size of the Ruler in Manipulator depends on this variable.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 4.0 |



4.7 AFLAGS system variable

4.7.1 Attribute options

Specifies the default options for attribute creation. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Default value: | 0 |
| Possible options: | 0: No mode selected 1: Invisible 2: Constant 4: Verify 8: Preset 16: Lock position 32: Multiline |

4.8 ALLOWBREAKLINECROSSINGS system variable

4.8.1 Allow breakline crossings

If breakline crossings are allowed, intersections between breakline segments are calculated and added as points to the TIN surface.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |

4.9 ALLOWEDBENDANGLES system variable

4.9.1 Allowed bend angles

Defines allowed bend angles for connections that are created by the BIMFLOWCONNECT command.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | 1: Any 2: 90 4: 60 8: 45 16: 30 |

4.10 ALLOWTABEXTERNALMOVE system variable

4.10.1 Move tabs externally (Mac & Linux)

Allows a tab to be moved to another tab control On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't allow a tab to be moved externally On (1): Allow a tab to be moved externally |

4.11 ALLOWTABMOVE system variable

4.11.1 Move tabs (Mac & Linux)

Allows a tab to be moved horizontally by dragging On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't allow tabs to be moved On (1): Allow tabs to be moved |



4.12 ALLOWTABSPLIT system variable

4.12.1 Split tabs (Mac & Linux)

Allows the tab control to be split by dragging a tab On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't allow tabs to be split On (1): Allow tabs to be split |

4.13 ANGBASE system variable

4.13.1 Angle base

Specifies the direction of angle 0, relative to the current UCS.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

4.14 ANGDIR system variable

4.14.1 Angle direction

Specifies the positive angle direction from angle 0, relative to the current UCS.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Counter-clockwise On (1): Clockwise |



4.15 ANGLE SAMPLING INTERVAL system variable

4.15.1 Angle sampling interval

Defines angle sampling interval in decimal degrees, which is used for grading rounding at convex vertices.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 90 |
| Default value: | 5 |

4.16 ANNOALLVISIBLE system variable

4.16.1 Annotation visibility

Hides or displays annotative entities that do not support the current annotation scale. The setting is saved individually for model space and each layout.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 1 |
| Possible values: | 0: Only annotative entities that support the current scale representation are displayed 1: All annotative entities are displayed |

4.17 ANNOAUTOSCALE system variable

4.17.1 Annotation scaling

Synchronizes annotative entities with the current annotation scale.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | -4 |



| | |
|------------------|--|
| Possible values: | <p>0: Newly set annotation scale is not added to annotative entities.</p> <p>1: Newly set annotation scale is added to annotative entities supporting it except entities on locked, turned off, frozen or viewport-frozen layers.</p> <p>2: Newly set annotation scale is added to annotative entities supporting it except entities on turned off, frozen or viewport-frozen layers.</p> <p>3: Newly set annotation scale is added to annotative entities supporting it except entities on locked layers.</p> <p>4: Newly set annotation scale is added to all annotative entities supporting it.</p> <p>-1: Newly set annotation scale is not added to annotative entities (toggled value 1).</p> <p>-2: Newly set annotation scale is not added to annotative entities (toggled value 2).</p> <p>-3: Newly set annotation scale is not added to annotative entities (toggled value 3).</p> <p>-4: Newly set annotation scale is not added to annotative entities (toggled value 4).</p> |
|------------------|--|

4.18 ANNOTATIVEDWG system variable

4.18.1 Annotative drawing

Specifies whether or not the drawing will behave as an annotative block when inserted into another drawing. The ANNOTATIVEDWG system variable becomes Read-only if the drawing contains annotative entities.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Not annotative On (1): Annotative |

4.19 ANTIALIASRENDER system variable

4.19.1 Anti-alias amount for render

Specifies the smoothness of the output from RENDER command. For values higher than 1, an anti-aliased output is calculated. High anti-alias values incur a high calculation cost.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Preference |
| Range: | 1 to 5 |
| Default value: | 2 |
| Possible values: | 1: 1x1 (no anti-aliasing) 2: 2x2 3: 3x3 4: 4x4 5: 5x5 (maximum anti-aliasing) |

4.20 ANTIALIASSCREEN system variable

4.20.1 Anti-alias amount for screen

Specifies the smoothness of on-screen curve display. For values higher than 1 and visual style 2DWireframe (which uses GDI), calculation of an anti-aliased display comes at a high performance cost (roughly a factor 7). For the other display modes the calculation time increases with less than 50%.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 5 |
| Default value: | 1 |
| Possible values: | 1: 1x1 (no anti-aliasing) 2: 2x2 3: 3x3 4: 4x4 5: 5x5 (maximum anti-aliasing) |

4.21 APBOX system variable

4.21.1 Entity snap aperture box

Toggles the display of the Entity Snap aperture box. If the APBOX system variable is on, the entity Snap Aperture Box is added to the crosshairs when one or more entity snaps are active.

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|




| | |
|------------------|---|
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Does not display the aperture box. On (1): Displays the aperture box. |

4.22 APERTURE system variable

4.22.1 Entity snap aperture

Specifies the size (in pixels) of the entity snap aperture box. Values between 1 and 50 are accepted. The program searches the area inside the rectangular aperture cursor for geometric features, such as endpoints and mid points. A large aperture cursor makes it easier for you to hover over geometric features, but then the program may find too many matching entity snap points; a smaller one may be more difficult for you to position over geometry, but is more precise at snapping to geometric features.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 10 |

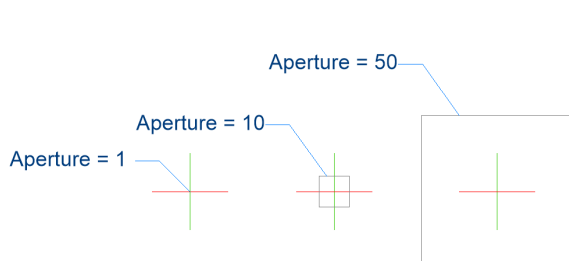

4.23 ARCTESSELLATION system variable

4.23.1 Arc approximation mid-ordinate distance

Mid-ordinate distance is the maximal distance between arc and chord (straight) segment which is used for arc approximation.

BricsCAD only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |



| | |
|----------------|------|
| Default value: | 0.01 |
|----------------|------|

4.24 ARCTESSELLATIONGRADING system variable

4.24.1 Arc approximation mid-ordinate distance

Mid-ordinate distance is the maximal distance between arc and chord (straight) segment which is used for arc approximation.


BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.01 |

4.25 ARCTESSELLATIONTEMPLATEELEMENT system variable

4.25.1 Template Element arc approximation mid-ordinate distance

Mid-ordinate distance (1) is the maximal distance between arc and chord (straight) segment which is used for arc approximation.



BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.01 |

4.26 AREA system variable

4.26.1 Calculated area

Specifies the last calculated area by AREA, LIST or DBLIST.

Read-only

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|-----------|-----------|
| Saved in: | Not saved |
|-----------|-----------|

4.27 AREAPREC system variable

4.27.1 Area precision

Specifies the number of decimal places displayed for areas when the area bit of PROPUNITS is on. If negative, LUPREC is used.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Default value: | -1 |
| Possible values: | -1: Use LUPREC 0 1: 0.0 2: 0.00 3: 0.000 4: 0.0000 5: 0.00000 6: 0.000000 7: 0.0000000 8: 0.00000000 |

4.28 AREAUNITS system variable

4.28.1 Area units

Specifies a list of units used for displaying areas when the area bit of PROPUNITS is on. If empty, all areas are displayed in the current drawing unit, as defined by INSUNITS. If multiple units are selected, the unit that fits best is used.

BricsCAD only

| | |
|----------------|-----------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | in ft mi μ m mm cm m km |



4.29 ARRAYASSOCIATIVITY system variable

4.29.1 Associative arrays

Specifies whether newly created arrays are associative or non-associative.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Not associative On (1): Associative |

4.30 ARRAYEDITSTATE system variable

4.30.1 Array editing state

Array editing state is activated while editing an associative array's source entities.

Read-only

| | |
|----------------|-----------|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |

4.31 ARRAYTYPE system variable

4.31.1 Array type

Specifies the default associative array type.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Rectangular array 1: Path array 2: Polar array |



4.32 CIVILASSOCIATIVITY system variable

4.32.1 Associativity

Defines if TIN Surface or Grading are associative.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 15 |
| Possible options: | 1: TIN Surface associativity 2: Grading associativity 4: TIN Volume Surface associativity 8: Corridor associativity |

4.33 ATTDIA system variable

4.33.1 Attribute dialog

Specifies whether or not the INSERT command uses a dialog box for entering attribute values.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't use dialog box On (1): Use dialog box |

4.34 ATTMODE system variable

4.34.1 Attribute display mode

Specifies whether attributes are visible or not. If the ATTMODE variable is set to 2, all attributes display, including Hidden attributes.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |



| | |
|------------------|--|
| Default value: | 1 |
| Possible values: | 0: Don't show 1: As defined in block 2: Show all |

4.35 ATTRACTIONDISTANCE system variable

4.35.1 Grips attraction distance

Specifies the grips attraction distance. If the cursor is within this distance the cursor is attracted by the grip and jumps to it.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 4 |

4.36 ATTREQ system variable

4.36.1 Insertion default settings

Specifies whether default attribute settings are used by the INSERT command during block insertion.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | Off (0): Use default values On (1): Prompt user |

4.37 AUDITCTL system variable

4.37.1 Audit control

Toggles the creation of audit report (ADT) files by the AUDIT command. When you turn on the AUDITCTL settings variable, Audit creates an ASCII file describing problems and the action taken. This report, with the file extension .adt, is placed in the same directory as the current drawing.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't write ADT files On (1): Write ADT files |

4.38 AUDITERORCOUNT system variable

4.38.1 Audit Error Count

The number of errors found in the last audit.

Read-only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |

4.39 AUNITS system variable

4.39.1 Angular unit type

Specifies the angular unit type.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Decimal degrees 1: Degrees/minutes/seconds 2: Gradians 3: Radians 4: Surveyor's units |

4.40 AUPREC system variable

4.40.1 Angular unit precision

Specifies the number of decimal places for angular units.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: 0 1: 0.0 2: 0.00 3: 0.000 4: 0.0000 5: 0.00000 6: 0.000000 7: 0.0000000 8: 0.00000000 |

4.41 AUTOCOMPLETEDELAY system variable

4.41.1 Auto complete delay

Specifies the amount of time that elapses before automated keyboard features display at the Command prompt.

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.3 |

4.42 AUTOCOMPLETEMODE system variable

4.42.1 Auto complete mode

Specifies what types of automated keyboard features are available at the Command prompt. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 63 |
| Default value: | 47 |



| | |
|-------------------|--|
| Possible options: | 1: Enable 2: Auto-Append 4: Suggestion List 8: Display Icons (unsupported) 16: Exclude the display of system variables 32: Display preference variables |
|-------------------|--|

4.43 AUTOMATICCONNECTION system variable

4.43.1 Automatic connection

Controls automatic creation of the connections in the BIMLINEARSOLID and BIMAPPLYPROFILE commands.

BricsCAD only

| | |
|------------------|------------------------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | Off (0): Disable On (1): Enable |

4.44 AUTOMATICSTAIRSECTIONBEHAVIOR system variable

4.44.1 Automatic stair section behavior

If set to Symbolic, a symbolic representation of entities classified as Stairs will be generated during section generation. This will affect only the automatic stair sectioning behavior. To customize, launch the BIMGENERATE2DSTAIR command before sectioning.

BricsCAD only

| | |
|------------------|-----------------------------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Symbolic 1: Geometric |



4.45 AUTOMATICTEES system variable

4.45.1 Automatic tees

Controls automatic creation of the tee flow fitting in case of T type connection in the BIMFLOWCONNECT command.

BricsCAD only

| | |
|------------------|------------------------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Disable On (1): Enable |

4.46 AUTOMENULOAD system variable

4.46.1 Auto menu load

When you open a drawing, determines whether the default menu or a menu file associated with a drawing is loaded.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Not automatic menu loading On (1): Automatic menu loading |

4.47 AUTORESETSCALES system variable

4.47.1 Purge unused scales

Unneeded annotation scales are deleted automatically when drawing contains a large number of annotation scales. Storing a large number of annotation scales decreases performance. Scales are purged when drawing is being loaded.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Ask in dialog box 1: Always purge unneeded scales 2: Don't purge scales and don't show dialog box when drawing contains a large number of scales |

4.48 AUTOSAVECHECKONLYFIRSTBITDBMOD system variable

4.48.1 Ignore all but first bit of DBMOD for autosave

The first bit(1) of DBMOD means that the object database is modified. If this user preference is switched on, no autosave file will be created for files that are viewed only (DBMOD changes as soon as you pan and zoom).

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Autosave file for files that are viewed only On (1): No autosave file for files that are viewed only |

4.49 AUTOSNAP system variable

4.49.1 AutoSnap

Toggles polar and entity snap tracking and controls the display of snap marker, tooltips and magnet. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 127 |
| Default value: | 127 |



| | |
|-------------------|---|
| Possible options: | 0: All off 1: AutoSnap marker 2: AutoSnap tooltips 4: AutoSnap magnet 8: Polar tracking 16: Entity snap tracking 32: Tooltips for polar tracking and entity snap tracking 64: Tracking line from LASTPOINT |
|-------------------|---|

4.50 AUTOTRACKINGVECCOLOR system variable

4.50.1 Auto tracking vector color

Specifies the color of the polar/snap tracking vector.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 171 |

4.51 AUTOVPFITTING system variable

4.51.1 Automatically fit viewport borders

Specifies if viewport borders automatically fit when updating the viewport.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't fit viewports' borders automatically On (1): Fit viewports' borders automatically |



5. B

5.1 BACKGROUNDPLOT system variable

5.1.1 Background plotting

Specifies whether background plotting is enabled for plotting and/or publishing. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 2 |
| Possible options: | 0: None 1: When plotting (Not supported) 2: When publishing |

5.2 BACKZ system variable

5.2.1 Back clipping plane offset

Specifies the current viewport's back clipping plane offset from the target plane, expressed in drawing units. Clipping planes are used in the CLIPPING option of the DVIEW command.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

5.3 BASEFILE system variable

5.3.1 Template

Specifies the path and name of the default template file to use when creating a new drawing. If empty, built-in defaults will be used.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|-----------|----------|
| Saved in: | Registry |
|-----------|----------|

5.4 BCFSOURCEURL system variable

5.4.1 BCF source url

Specifies the web address of the last used external BIM collaboration service, launched from the BIM BCF panel.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

5.5 BILLOFMATERIALSSETTINGS system variable

5.5.1 Bill of materials defaults

Sets default options for bill of materials.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 10 |
| Possible values: | 1: Add thumbnails to new bill of materials 2: Automatically update thumbnails 4: Display warning messages 8: Allow multiple inserts of the same table |

5.6 BIMACTIVATEPYTHON system variable

5.6.1 Activate Python

Enables embedded Python for BriqPy.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Don't enable embedded Python On (1): Enable embedded Python |

5.7 BIMDEFAULTPROPERTIESPATH system variable

5.7.1 Default properties path

Paths to properties which are loaded in new document.

BricsCAD only

| | |
|----------------|---|
| Type: | String |
| Saved in: | Registry |
| Default value: | bimproj_user.xml;bimproj_IFC2x3.xml;bimproj_IFC4.xml;bimproj_quantity.xml |

5.8 BIMMATCHPROP system variable

5.8.1 Match BIM Properties

Enables matching BIM properties during the MATCHPROP command.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Match standard properties 1: Match standard and BIM properties |

5.9 BIMOSMODE system variable

5.9.1 BIM snap mode

Overrules entity snap modes for BIM entities using bitcodes.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 0: Entity snap modes are not overruled for BIM entities 1: Axis of linear solid 2: Axis of BIM grid |

5.10 BIMPROFILESTANDARDS system variable

5.10.1 Profile's standards

Specifies which profile standards will be used in the Profiles dialog box and panel. You can add multiple standards using the semicolon ; as a separator.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

5.11 BINDTYPE system variable

5.11.1 Xref bind type

Specifies the handling of xref names when binding xrefs or when xrefs are edited in-place. If the BINDTYPE variable = 1 (Insert-like behavior), Xrefs will be converted into blocks. If BINDTYPE = 0 (traditional binding behavior), it binds the xref and makes the xref part of the drawing (the objects/layers from the external drawing will be added to the current drawing with the prefix equal to the file name).

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | 0 |
| Possible values: | Off (0): Traditional binding behavior On (1): Insert-like behavior |



5.12 BKGCOLOR system variable

5.12.1 Background color

Specifies the background color of the drawing window when working in model space.

BricsCAD only

| | |
|----------------|--------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | RGB:24,25,28 |

5.13 BKGCOLORPS system variable

5.13.1 Paper space background color

Set the background color of the drawing window when working in paper space.

BricsCAD only


| | |
|----------------|-----------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | RGB:250,250,250 |

5.14 BLIPMODE system variable

5.14.1 Blip mode

Toggles the display of blips that are made as you pick points in the drawing.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't display marker blips On (1): Display marker blips |

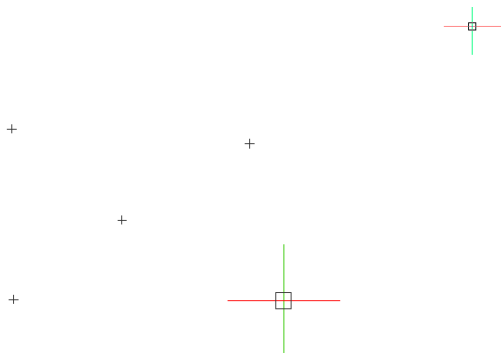

5.15 BLOCKEDITLOCK system variable

5.15.1 Block editor lock

Disables opening of the Block Editor and editing of dynamic block definitions.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |

5.16 BLOCKEDITOR system variable

5.16.1 Block editor

Shows whether the Block Editor is open or not.

Read-only

| | |
|-----------|-----------|
| Type: | Boolean |
| Saved in: | Not saved |

5.17 BLOCKIFYMODE system variable

5.17.1 Blockify settings

Defines the behavior of the BLOCKIFY and PARAMETRICBLOCKIFY commands. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|-------------------|---|
| Saved in: | Registry |
| Range: | 16 to 247 |
| Default value: | 48 |
| Possible options: | 1: Use entire drawing as search space 2: Use default block insertion point 4: Use default block name 32: Compare geometry only 64: Convert unique solids to blocks 128: Show preview |

5.18 BLOCKIFYTOLERANCE system variable

5.18.1 Blockify tolerance

Specifies a relative tolerance used in the BLOCKIFY and PARAMETRICBLOCKIFY commands for determining whether two entities are equal. An example of a relative tolerance is the maximum ratio of the difference between two line lengths to the length of one line. A negative value means the algorithm will determine the optimal tolerance itself (0.000001 for 2D and 0.0003 for 3D entities). This option is highly recommended.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | -1.0 |

5.19 BLOCKLEVELOFDETAIL system variable

5.19.1 Block Level of detail

Controls the level of detail of blocks.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 1 |



| | |
|------------------|-------------------|
| Possible values: | 0: Low 1: High |
|------------------|-------------------|

Uwaga: The low level of detail representation is a bounding box.

5.20 BLOCKSPATH system variable

5.20.1 Blocks path

Specifies an additional folder in the file dialog for the INSERT command.

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

5.21 BMAUTOUPDATE system variable

5.21.1 Update external components

Specifies when external assembly components are reloaded to reflect the changes in their definition files.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | 0: Only when BMUPDATE command is issued 1: Automatically on opening the file |

5.22 BMFORMTEMPLATEPATH system variable

5.22.1 BMFORM template path

Specifies the path and name of the default BMFORM Template file.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |



5.23 BMUPDATEMODE system variable

5.23.1 Assembly components updating mode

Specifies if external assembly components are reloaded only in case they are modified (faster) or unconditionally (slower, but repairs assembly structure).

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Update only modified components 1: Update all components |

5.24 BOMFILTERSETTINGS system variable

5.24.1 Default BOM filter settings

Sets default filter settings to define which objects to include.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 127 |
| Default value: | 1 |
| Possible values: | 1: Include mechanical components, blocks and solids 2: Include non-mechanical local blocks and solids 4: Include non-mechanical external references 8: Include solid plies 16: Ignore BOM status 32: Treat external references as transparent 64: Treat leaf parts as transparent |

Uwaga: If the file does not contain any mechanical components and the mode does not require to include any non-mechanical entities, then it will be extended to include all non-mechanical entities.



5.25 BOMPROPERTYSET system variable

5.25.1 Default BOM property set

Sets default set of properties for BOM tables.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 1: Mechanical-only properties 2: All properties except coordinates 3: All properties |

Uwaga: If the BOM filter mode requires to include non-mechanical objects (BOMFILTERSETTINGS = 2 / 4 / 6)), then the property set will be automatically extended to include all properties except coordinates (BOMPROPERTYSET=2).

5.26 BOMTEMPLATE system variable

5.26.1 Default template

Defines a path to the file with the default BOM template.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | " " |

5.27 BOMTHUMBNAILHEIGHT system variable

5.27.1 Default thumbnail height, px

Sets default thumbnail height for BOM tables, in pixels

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Default value: | 200 |

5.28 BOMTHUMBNAILWIDTH system variable

5.28.1 Default thumbnail width, px

Sets default thumbnail width for BOM tables, in pixels

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 200 |

5.29 BOUNDARYCOLOR system variable

5.29.1 Detected Boundary Color

Specifies which color to be used for highlighting detected boundaries.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 95 |

5.30 BSYSLIBCOPYPYOVERWRITE system variable

5.30.1 Bsyslib copy overwrite

What to do when copying a material or composition with a name that already exists in the target database.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |



| | |
|------------------|---|
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Prompt 1: Skip 2: Overwrite 3: Rename |

5.31 BVMODE system variable

5.31.1 Block Visibility Mode

Specifies how hidden entities of the current visibility state are displayed in the Block Editor.

Read-only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Hidden entities are invisible 1: Hidden entities are visible but dimmed |



6. C

6.1 CACHELAYOUT system variable

6.1.1 Cache layout

Specifies whether layouts are cached, resulting in faster switching from one layout to another.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't cache layout On (1): Cache layout |

6.2 CAMERADISPLAY system variable

6.2.1 Camera display

Specifies the display of camera glyphs.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display camera glyphs On (1): Display camera glyphs |

6.3 CAMERAHEIGHT system variable

6.3.1 Camera height

Specifies the default height, in drawing units, for new camera entities.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |



6.4 CANNOSCALE system variable

6.4.1 Annotation scale name

Specifies the name of the current annotation scale for the current space.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | 1:1 |

6.5 CANNOSCALEVALUE system variable

6.5.1 Annotation scale value

Displays the value of the current annotation scale.

Read-only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

6.6 CDATE system variable

6.6.1 Calendar date

Shows the current date and time in decimal format.

Read-only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

6.7 CECOLOR system variable

6.7.1 Entity color

Specifies the color for new entities.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|---------|
| Saved in: | Drawing |
| Default value: | ByLayer |

6.8 CELTSCALE system variable

6.8.1 Entity linetype scale

Specifies the current entity linetype scaling factor.

| | |
|----------------|----------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | Greater than 0 |
| Default value: | 1.0 |

6.9 CELTYPE system variable

6.9.1 Entity linetype

Specifies the linetype for new entities.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | ByLayer |

6.10 CELWEIGHT system variable

6.10.1 Entity lineweight

Specifies the lineweight of new entities (in hundredths of millimeters).

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -3 to 211 |
| Default value: | -1 |




| | |
|------------------|--|
| Possible values: | -3: Default (defined by LWDEFAULT) -2: ByBlock -1: ByLayer 0 - 211: Lineweight value in hundredths of millimeters |
|------------------|--|

6.11 CENTERCROSSGAP system variable

6.11.1 Center mark cross gap

Specifies the gap between the center mark and its centerlines.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | 0.05x |

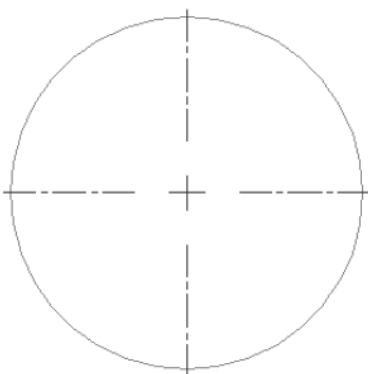


6.12 CENTERCROSSSIZE system variable

6.12.1 Center mark cross size

Specifies the size of the associative center mark.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | 0.1x |

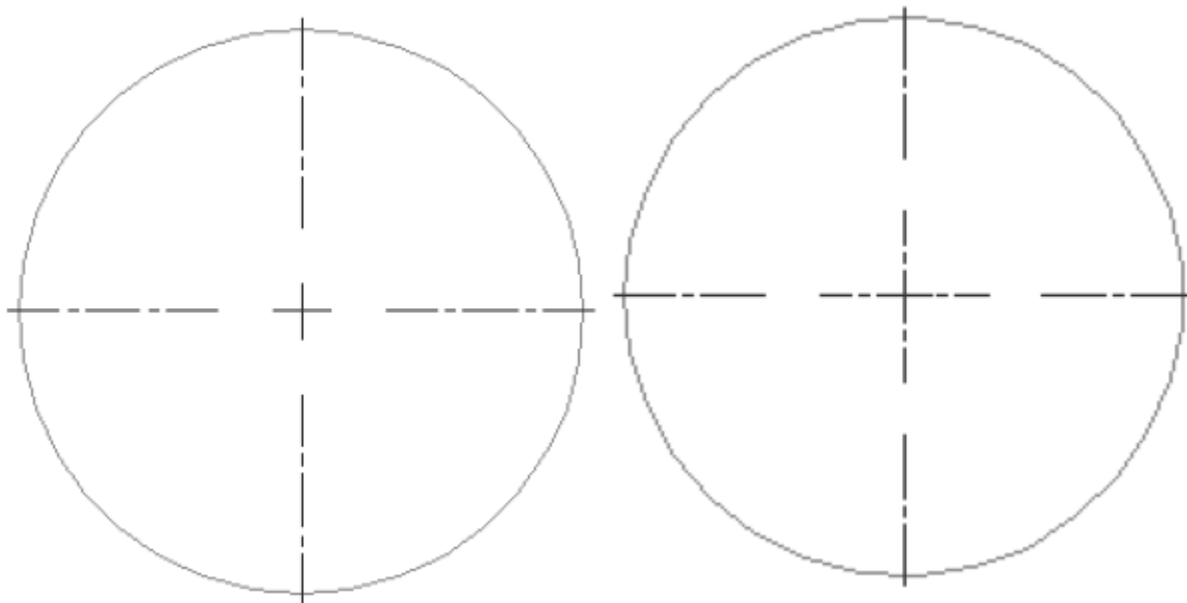


6.13 CENTEREXE system variable

6.13.1 Centerline extensions length

Specifies the length of the centerline extensions. The value is expressed in drawing units.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.12 |

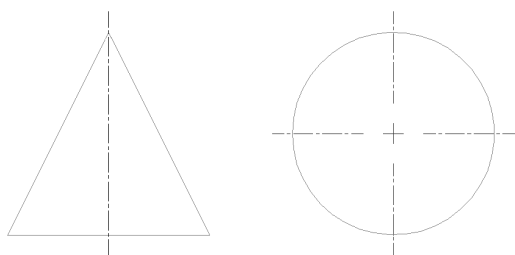

6.14 CENTERLAYER system variable

6.14.1 Default layer for center mark or centerline

Specifies a default layer for new center mark or centerline.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|---------|
| Saved in: | Drawing |
| Default value: | . |

6.15 CENTERLTSCALE system variable

6.15.1 Linetype scale for center mark or centerline

Specifies the linetype scale used by center marks and centerlines.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

6.16 CENTERLTYPE system variable

6.16.1 Linetype for center mark or centerline

Specifies the linetype used by center marks and centerlines.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | CENTER2 |

6.17 CENTERLTYPEFILE system variable

6.17.1 Linetype file for center mark or centerline


Specifies the linetype file used to create center marks and centerlines. Default in imperial unit drawings: default.lin. Default in metric unit drawings: iso.lin.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

6.18 CENTERMARKEXE system variable

6.18.1 Automatic extension for center mark or centerline

Specifies whether centerlines extend automatically from new center marks.

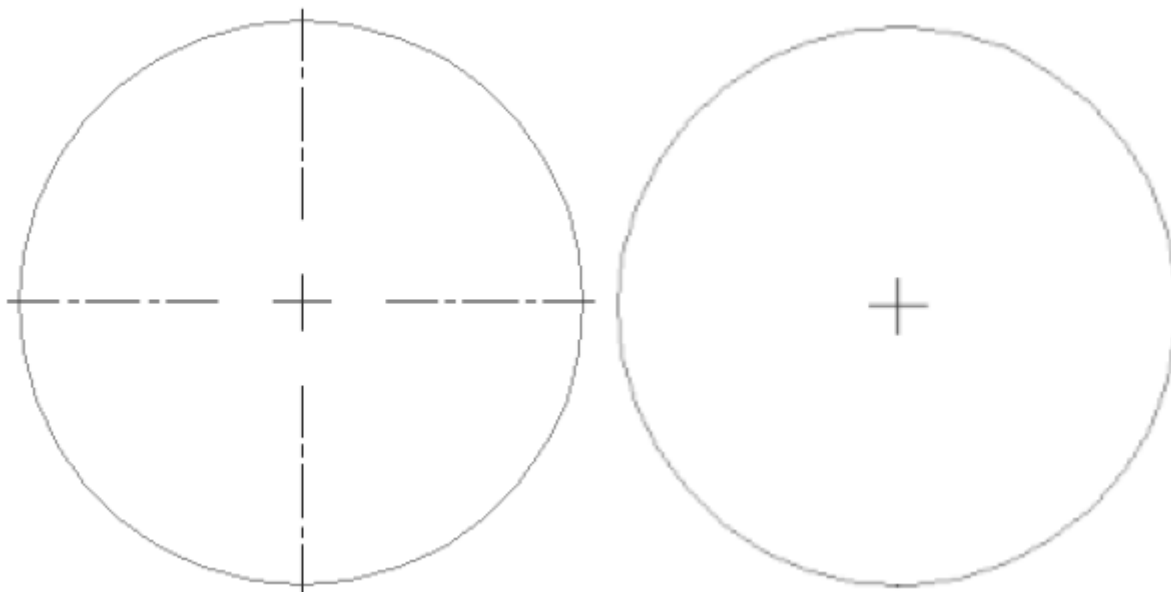

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): No automatic extension On (1): Automatic extension |

6.19 CETRANSARENCY system variable

6.19.1 Transparency for new entities

Specifies the transparency level for new entities.

| | |
|------------------|--|
| Type: | String |
| Saved in: | Drawing |
| Default value: | ByLayer |
| Possible values: | ByLayer: Apply the layer's transparency ByBlock: Apply the block's transparency 0: Apply no transparency (fully opaque) 1-90: Apply transparency percentage from least (1) to most (90) transparent |



6.20 CHAMFERA system variable

6.20.1 Chamfer first distance

Specifies the first chamfer distance when the chamfer input mode requires two distances (CHAMMODE is Distance-Distance).

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

6.21 CHAMFERB system variable

6.21.1 Chamfer second distance

Specifies the second chamfer distance when the chamfer input mode requires two distances (CHAMMODE is Distance-Distance).

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

6.22 CHAMFERC system variable

6.22.1 Chamfer length

Specifies the chamfer length when the chamfer input mode requires a length and an angle (CHAMMODE is Length-Angle).

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

6.23 CHAMFERD system variable

6.23.1 Chamfer angle

Specifies the chamfer angle when the chamfer input mode requires a length and an angle (CHAMMODE is Length-Angle).




| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

6.24 CHAMMODE system variable

6.24.1 Chamfer mode

Specifies the input method by which chamfers are created: Distance-Distance or Length-Angle.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Distance-Distance 1: Length-Angle |

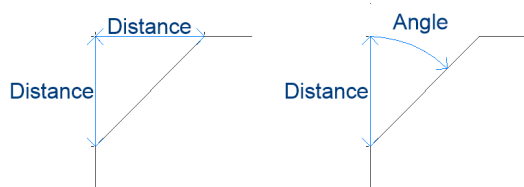

6.25 CHECKDWLPRESENCE system variable

6.25.1 Check Dwl file existence before open

When trying to open a drawing, warn the user about the presence of a dwl lock file. The content of the lock files allows to inform other users trying to open that drawing, that it is in use, since when, and by whom. This is typically useful for drawings on a shared folder that can be accessed by multiple users from different operating systems.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Preference |
| Default value: | Off (Windows) On (Mac & Linux) |
| Possible values: | Off (0): Don't check dwl file existence before opening a drawing On (1): Check dwl file existence before opening a drawing |

6.26 CIRCLERAD system variable

6.26.1 Circle radius

Specifies the default circle radius. If set to zero, there is no default.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 0.0 |

6.27 CLAYER system variable

6.27.1 Current layer

Specifies the layer for new entities.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | 0 |

6.28 CLEANSCREENOPTIONS system variable

6.28.1 Clean screen options

Specifies which UI elements are hidden by the CLEANSCREENON command. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|-------------------|---|
| Range: | 0 to 127 |
| Default value: | 15 |
| Possible options: | 1: Hide document tabs 2: Hide dockable panels 4: Hide toolbars 8: Hide ribbon 16: Hide Command line panel 32: Hide status bar 64: Hide menu bar |

6.29 CLEANSCREENSTATE system variable

6.29.1 Clean screen state

Specifies whether clean screen state is active or not. Clean screen state is controlled by the CLEANSCREENON and CLEANSCREENOFF commands. Activating the clean screen state makes the drawing area larger by hiding elements of the user interface.

Read-only

| | |
|----------------|-----------|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |

6.30 CLIPBOARDFORMAT system variable

6.30.1 Clipboard DWG format

Specifies the drawing format version used for copying to the clipboard.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 4 |



| | |
|------------------|--|
| Possible values: | 1: DWG 2018 4: DWG 2013 7: DWG 2010 10: DWG 2007 13: DWG 2004 16: DWG 2000 19: DWG R14 22: DWG R13 25: DWG R11/R12 |
|------------------|--|

6.31 CLIPBOARDFORMATS system variable

6.31.1 Clipboard Formats

Types of data that are supported when copying to the clipboard. Flags can be unchecked to improve performance. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 127 |
| Default value: | 127 |
| Possible options: | 1: Bitmap 2: Metafile Picture Format 4: Enhanced Metafile 8: AutoCAD.r14 16: BricsCAD 32: OLE Embed Source and Object Descriptor 64: CVS and XMLSS table data |

6.32 CLIPROMPTLINES system variable

6.32.1 Prompt Lines

If the Command panel is not visible, the last few Command line entries are shortly displayed at the bottom of the main graphics window each time a command is entered. CLIPROMPTLINES specifies the number of lines to display. (set to zero to disable the feature).

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Range: | 0 to 64 |
| Default value: | 4 |

6.33 CLISTATE system variable

6.33.1 Command line state

Specifies whether the Command line is visible or not.

Read-only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | 1 |
| Possible values: | Off (0): Command line is invisible On (1): Command line is visible |

6.34 CLOSECHECKONLYFIRSTBITDBMOD system variable

6.34.1 Ignore all but first bit of DBMOD for close

The first bit(1) of DBMOD means that the object database is modified. If this user preference is switched on, you can view a file, then close it without getting a request to save the file.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't close drawing without getting a request to save the file. On (1): Close drawing without getting a request to save the file. |



6.35 CLOUDDOWNLOADPATH system variable

6.35.1 Cloud download path

Specifies the folder where files downloaded through the Bricsys 24/7 Panel are saved.

BricsCAD only

| | |
|----------------|----------------------------|
| Type: | String Standard |
| Saved in: | Registry |
| Default value: | {User}Documents/Bricsys247 |

6.36 CLOUDLOG system variable

6.36.1 Cloud log

Specifies whether Bricsys 24/7 transactions are being logged or not. If set to 2 ("Log file") the log file will be written in the folder specified by the LOGFILEPATH variable.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No log 1: Log messages 2: Log file |

6.37 CLOUDLOGVERBOSE system variable

6.37.1 Cloud log verbose

If switched on, more information is being logged but therefore Bricsys 24/7 actions will be slower.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|--|
| Default value: | Off |
| Possible values: | Off (0): Verbose log off On (1): Verbose log on |

6.38 CLOUDONMODIFIED system variable

6.38.1 Cloud on modified

Specifies what to do when a file opened from Bricsys 24/7, is modified and saved locally.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: Do nothing 1: Prompt 2: Always upload to new revision 3: Always save locally under new name |

6.39 CLOUDSERVER system variable

6.39.1 Cloud server

Specifies the address of the Bricsys 24/7 server. Examples: <https://my.bricsys247.com/>, <https://apac.bricsys247.com/>

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

6.40 CLOUDTEMPFOLDER system variable

6.40.1 Cloud temporary folder

Specifies the folder where temporary files from Bricsys 24/7 are downloaded.

BricsCAD only



| | |
|----------------|---------------------------------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | {User}AppData/Local/Temp/Bricsys_24_7 |

6.41 CLOUDUPLOADDEPENDENCIES system variable

6.41.1 Cloud upload dependencies

Specifies what to do with dependencies (such as external references or images) when a drawing is uploaded to Bricsys 24/7.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Upload drawing only (ignore dependencies) 1: Use eTransmit dialog if the drawing contains external references 2: Always use eTransmit dialog |

6.42 CMATERIAL system variable

6.42.1 Current material

Specifies the render material for new entities.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | ByLayer |



6.43 CMDACTIVE system variable

6.43.1 Active command

Stores the type of the current command: ordinary command, transparent command, script, dialog box, DDE, lisp or ObjectARX command. The value is stored as a bitcode using the sum of the values of all selected options.

Read-only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Default value: | 1 |
| Possible options: | 1: Ordinary command is active 2: Ordinary command and a transparent command are active 4: Script is active 8: Dialog box is active 16: DDE is active 32: lisp is active (only visible to an ObjectARX-defined command) 64: ObjectARX command is active |

6.44 CMDDIA system variable

6.44.1 Command dialogs

Specifies whether dialog boxes are turned on for commands.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't use dialog box for commands On (1): Use dialog box for commands |

6.45 CMDECHO system variable

6.45.1 Command echo

Toggles the display of prompts and input during the lisp 'command' function.



| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Echoing off On (1): Echoing on |

6.46 CMDLINEEDITBGCOLOR system variable

6.46.1 Command line edit background color

Specifies the background color of the Command line's edit field. Color may be represented as a name (for standard colors) or as RGB values. At the Command line, color may be entered as a name (for standard colors), RGB values, or HTML color.

BricsCAD only

| | |
|----------------|--|
| Type: | String |
| Saved in: | Preference |
| Default value: | 50 54 56 (Settings dialog) #323638 (Command line) |

6.47 CMDLINEEDITFGCOLOR system variable

6.47.1 Command line edit foreground color

Specifies the foreground color (RGB) of the Command line's edit field. Color may be represented as a name (for standard colors) or as RGB values. At the Command line, color may be entered as a name (for standard colors), RGB values, or HTML color.

BricsCAD only

| | |
|----------------|---|
| Type: | String |
| Saved in: | Preference |
| Default value: | White (Settings dialog) #FFFFFF (Command line) |



6.48 CMDLINEFADINGLOGBGCOLOR system variable

6.48.1 Command line fading log background color

Specifies the background color (RGB) of the Command line's fading log. Color may be represented as a name (for standard colors) or as RGB values. At the Command line, color may be entered as a name (for standard colors), RGB values, or HTML color.

BricsCAD only

| | |
|----------------|--|
| Type: | String |
| Saved in: | Preference |
| Default value: | 50 54 56 (Settings dialog) #323638 (Command line) |

6.49 CMDLINEFADINGLOGFADEDELAY system variable

6.49.1 Command line fading log fade delay

Specifies the amount of time (in seconds) that elapses before Command line's fading log starts to fade.

BricsCAD only

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.0 to 10.0 |
| Default value: | 2.0 |

6.50 CMDLINEFADINGLOGFGCOLOR system variable

6.50.1 Command line fading log foreground color

Specifies the foreground color of the Command line's fading log.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | White |



6.51 CMDLINEFADINGLOGTRANSPARENCY system variable

6.51.1 Command line fading log transparency

Specifies the transparency of the Command line's fading log. A value of 0 sets the log to be fully opaque, and a value of 100 sets the log to be fully transparent.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 30 |

6.52 CMDLINEFONTNAME system variable

6.52.1 Command line font name

Specifies the font to use in the Command line.

BricsCAD only

| | |
|------------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | Consolas |
| Possible values: | |

6.53 CMDLINEFONTSIZE system variable

6.53.1 Command line font size

Specifies a font size for the Command line.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 10 |



6.54 CMDLINEFRAMEACTIVETRANSparency system variable

6.54.1 Command line frame transparency when active (Windows)

Specifies the transparency of the Command line frame when active. A value of 0 sets the frame to be fully opaque, and a value of 100 sets the frame to be fully transparent.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 10 |

6.55 CMDLINEFRAMEINACTIVETRANSparency system variable

6.55.1 Command line frame transparency when inactive (Windows)

Specifies the transparency of the Command line frame when inactive. A value of 0 sets the frame to be fully opaque, and a value of 100 sets the frame to be fully transparent.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 30 |

6.56 CMDLINEFRAMEUSETEXTSCR system variable

6.56.1 Command line frame TEXTSCR

When the Command line is displayed as a mini-frame, it controls the effect of TEXTSCR command. If enabled, a separate window is displayed (same as in the docked state). If not enabled, a slide-out window is integrated with the mini-frame. Additionally, the setting has impact on how long prompts are displayed (e.g. for the LIST command).

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't display (TEXTSCR) history window in a separate floating frame On (1): Display (TEXTSCR) history window in a separate floating frame |

6.57 CMDLINELISTBGCOLOR system variable

6.57.1 Command line list background color

Specifies the background color of the Command line's history list.

BricsCAD only

| | |
|----------------|-----------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:130,130,130 |

6.58 CMDLINELISTFGCOLOR system variable

6.58.1 Command line list foreground color

Specifies the foreground color of the Command line's history list.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | White |

6.59 CMDLINEOPTIONBGCOLOR system variable

6.59.1 Command line option background color

Specifies the background color of the Command line's options.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|-----------------|
| Saved in: | Preference |
| Default value: | RGB:121,132,142 |

6.60 CMDLINEOPTIONSHORTCUTCOLOR system variable

6.60.1 Command line option shortcut color

Specifies the color of the Command line's option shortcut.

BricsCAD only

| | |
|----------------|---------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:255,187,0 |

6.61 CMDLINEUSEMINIFRAME system variable

6.61.1 Command line mini floating frame

Controls whether the new mini-frame is used when the Command line is floating.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't use new mini-frame On (1): Use new mini-frame |

Note: The CMDLINEUSEMINIFRAME system variable replaces the CMDLINEUSENEWFRAME system variable.

6.62 CMDLNTXT system variable

6.62.1 Prompt prefix

Specifies the prompt prefix shown in the Command line.

BricsCAD only



| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | : |

6.63 CMDNAMES system variable

6.63.1 Active Command Name

Shows the names of the active and transparent commands.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

6.64 CMLEADERSTYLE system variable

6.64.1 Multileader style

Specifies the multileader style for new multileader entities.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |

6.65 CMLJUST system variable

6.65.1 Multiline justification

Specifies the justification when creating multilines relative to the point you pick.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |



| | |
|------------------|--------------------------------|
| Possible values: | 0: Top 1: Zero 2: Bottom |
|------------------|--------------------------------|

6.66 CMLSCALE system variable

6.66.1 Multiline scale

Specifies the overall width scale factor for multilines. A negative scale factor mirrors the offset lines.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

6.67 CMLSTYLE system variable

6.67.1 Multiline style

Specifies the multiline style for new multiline entities.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |

6.68 CMPCLRMIS system variable

6.68.1 Color for displaying of missing entities in DWGCOMPARE mode

Specifies the color for displaying of missing entities in DWGCOMPARE mode.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 1 |



6.69 CMPCLRMOD1 system variable

6.69.1 Color for displaying of modified entities in this drawing in DWGCOMPARE mode

Specifies the color for displaying of modified entities in this drawing in DWGCOMPARE mode.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 253 |

6.70 CMPCLRMOD2 system variable

6.70.1 Color for displaying of modified entities in the second drawing in DWGCOMPARE mode

Specifies the color for displaying of modified entities in the second drawing in DWGCOMPARE mode.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 2 |

6.71 CMPCLRNEW system variable

6.71.1 Color for displaying of new entities in DWGCOMPARE mode

Specifies the color for displaying of new entities in DWGCOMPARE mode.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |



| | |
|----------------|---|
| Default value: | 3 |
|----------------|---|

6.72 CMPDIFFLIMIT system variable

6.72.1 Maximal number of entities in the output of DWGCOMPARE command

Specifies the limit for entities comparison in DWGCOMPARE command.

BricsCAD only

| | |
|----------------|---------------|
| Type: | Long |
| Saved in: | Registry |
| Range: | 1 to 10000000 |
| Default value: | 10000000 |

6.73 CMPFADECTL system variable

6.73.1 DWGCOMPARE fade control

Specifies the fading level for unmodified entities.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 90 |
| Default value: | 80 |

6.74 CMPLOG system variable

6.74.1 DWGCOMPARE log control

Toggles the creation of DWGCOMPARE log report (cmplog) files by the DWGCOMPARE command.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't write cmplog files On (1): write cmplog files |
|------------------|---|

6.75 COLORBOOKPATH system variable

6.75.1 Color book file search path

Specifies the folder(s) in which BricsCAD should look for color book files.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

6.76 COLORTHEME system variable

6.76.1 UI color theme

Choose a dark or light color scheme for UI elements.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Dark color theme 1: Light color theme |

6.77 COLORX system variable

6.77.1 X axis color

Specifies the color for the X-axis of the crosshairs. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |



| | |
|----------------|----|
| Default value: | 11 |
|----------------|----|

6.78 COLORY system variable

6.78.1 Y axis color

Specifies the color for the Y-axis of the crosshairs. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 112 |

6.79 COLORZ system variable

6.79.1 Z axis color

Specifies the color for the Z-axis of the crosshairs.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 150 |

6.80 COMACADCOMPATIBILITY system variable

6.80.1 COM Acad compatibility

Use registry settings to make existing VB applications run with BricsCAD®.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|---|
| Default value: | Off |
| Possible values: | Off (0): Don't use registry settings On (1): Use registry settings |

Note: When the COMACADCOMPATIBILITY system variable is set to **On**, AutoCAD® drawing files that are embedded as OLE objects in other applications will open in BricsCAD®.

6.81 COMBINETEXTMODE system variable

6.81.1 Options for COMBINETEXTMODE

Controls an order of text selection, word-wrap method and linespacing style for TXT2MTXT command.

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 15 |
| Default value: | 11 |
| Possible options: | 1: Combine into a single mtext 2: Sort top-down 4: Word-wrap text 8: Uniform linespacing |

6.82 COMMUNICATORBACKGROUNDMODE system variable

6.82.1 Perform import and export in background

Enables user interaction while import/export is performed.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Disable the import and export in background On (1): Enable the import and export in background |



6.83 COMPASS system variable

6.83.1 Compass

Toggles the display of the 3D compass On/Off in the current viewport.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): 3D Compass off On (1): 3D Compass on |

6.84 COMPONENTSCONFIG system variable

6.84.1 Library panel configuration

Name of the active Library panel configuration file. This file contains which libraries are shown in the components panel. SRCHPATH is used for finding the file.

BricsCAD only

| | |
|----------------|-------------|
| Type: | String |
| Saved in: | Workspace |
| Default value: | default.cct |

6.85 COMPONENTSPATH system variable

6.85.1 Library directory path

Specifies the folder(s) in which BricsCAD should look for user created library files.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

6.86 CONSTRAINTBARDISPLAY system variable

6.86.1 Constraint Bar Display

Specifies when the constraint bar will be displayed.



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 1: Displays constraint bars when geometrical constraints are added. 2: Displays hidden constraint bars when constrained entities are selected. |

6.87 CONTINUOUSMOTION system variable

6.87.1 Continuous motion

Specifies whether rotation continues after releasing the mouse when using the Realtime View Rotate command.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Disable continuous inertial motion in realtime On (1): Enable continuous inertial motion in realtime |

6.88 CONVERTODMAX system variable

6.88.1 Maximal multiplier for outer diameter

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 1.1 |

6.89 CONVERTODMIN system variable

6.89.1 Minimal multiplier for outer diameter



| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.95 |

6.90 CONVERTTHMAX system variable

6.90.1 Maximal multiplier for thickness

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 2 |

6.91 CONVERTTHMIN system variable

6.91.1 Minimal multiplier for thickness

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.5 |

6.92 COORDS system variable

6.92.1 Coordinates

Specifies the format and update frequency of the coordinate field in the status bar.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 1 |



| | |
|------------------|--|
| Possible values: | 0: Update coordinates only when selecting points 1: Coordinates always show pointer location 2: Coordinates in polar form for point, distance and angle selection 3: Coordinates in geographic form as latitude and longitude |
|------------------|--|

6.93 COPYMODE system variable

6.93.1 Copy mode

Specifies whether the COPY command creates a single copy or multiple copies.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Repeat automatically 1: Create single copy |

6.94 CPLOTSTYLE system variable

6.94.1 Current plot style

Specifies the plot style for new entities. In color-dependent mode drawings (PSTYLEMODE = 1), CPLOTSTYLE is set to "BYCOLOR" (Read-only). In named-plot-style mode drawings (PSTYLEMODE = 0), the options for CPLOTSTYLE are: "BYLAYER" (default), "BYBLOCK", "NORMAL" and "USER DEFINED". Use the CONVERTPSTYLES command to convert the current drawing to use named or color-dependent plot styles.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

6.95 CPROFILE system variable

6.95.1 Current profile

The name of the current user profile.

Read-only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Default value: | Default |

6.96 CREATETHUMBNAILONTHEFLY system variable

6.96.1 Create preview thumbnail on the fly

Generates the preview thumbnail in the Open Dialog, if the drawing doesn't have prepared thumbnail (drawing was saved with RASTERPREVIEW set to 0).

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't create preview thumbnail on the fly On (1): Create preview thumbnail on the fly |


6.97 CREATESKETCHFEATURE system variable

6.97.1 Sketch based feature (experimental)

Controls whether sketch based feature should be created in Extrude and Revolve commands.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Do not create sketch based feature 1: Create sketch based feature |

Uwaga: This system variable can also be set by pressing the **CreateSketchFeature** toggle button  in the ribbon.

The location of the toggle button depends on the loaded CUI file and the workspace:



Classic interface

Modeling workspace: **Solid & Surface** tabs > **Direct Modeling** ribbon panel.

Mechanical workspace: **Solid & Surface** tabs > **Create** ribbon panel.

Modern interface

Modeling & **Mechanical** workspaces: **Home** tab > **Controls** ribbon panel.

6.98 CREATEVIEWPORTS system variable

6.98.1 Automatic viewport creation

Specifies whether a viewport will be created automatically for newly created layouts.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't create viewport for new layouts On (1): Create viewport for new layouts |

6.99 CROSSHAIRDRAWMODE system variable

6.99.1 Crosshair rendering mode

Specifies the way the mouse cursor is rendered while inside the drawing window (crosshair, pickbox, etc.).

If the value of CROSSHAIRDRAWMODE is 0, the crosshair is always rendered at window toolkit level. The sub-items enable a rendered cursor depending on visual style.

- In 2dwireframe, render the crosshair in OpenGL. Attempts to eliminate cursor duplicates or flickering, which may happen using the window toolkit.
- In RedSDK visual styles, render the crosshair by RedSDK. Rendering the cursor by RedSDK tends to be faster, but some old systems might not support it.

BricsCAD only

| | |
|----------------|--------------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 (Mac & Linux) 2 (Windows) |



| | |
|------------------|--|
| Possible values: | 0: Always render crosshair at window toolkit level 1: Render crosshair in OpenGL, for 2d drawings 2: Render crosshair by RedSDK, for 3d drawings |
|------------------|--|

6.100 CROSSINGAREACOLOR system variable

6.100.1 Crossing area color

Specifies the color for crossing selection areas. In effect only when SELECTIONAREA setting is on.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 91 |

6.101 CTAB system variable

6.101.1 Current tab

Stores the name of the current (model or layout) tab in the drawing. Allows to control which tab is active.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Model |

6.102 CTABLESTYLE system variable

6.102.1 Current table style

Specifies the table style for new table entities.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |



6.103 CTRL3D.MOUSE system variable

6.103.1 3D mouse mode

Specifies view navigation with 3Dconnexion 3D mouse.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Disable 3D mouse 1: Enable 3D mouse |

6.104 CTRL.MOUSE system variable

6.104.1 Mouse shortcuts

Toggles mouse shortcuts for several operations:

- Ctrl + Shift + Left button for realtime zoom.
- Ctrl + Shift + Right button for realtime pan.
- Ctrl + middle button for view rotation.
- Ctrl + right button for view rotation with fixed Z-axis.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Disable mouse shortcuts 1: Enable mouse shortcuts |



6.105 CURSORSIZE system variable

6.105.1 Crosshairs size

Specifies the crosshairs size as a percentage of the size of the screen.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 100 |
| Default value: | 3 |

6.106 CVPORT system variable

6.106.1 Current viewport

Stores the identification number of the current viewport. Change this value to change the current viewport on three conditions: (1) the identification number is that of an active viewport, (2) cursor movement in that viewport is not locked by a command in progress and (3) tablet mode is off.

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 or greater |
| Default value: | 2 |

6.107 CVERSIONCONTROLPATH system variable

6.107.1 Current version control path

Specifies the folder to the current version control project.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |



6.108 CLOUDSSOSCOPE system variable

6.108.1 Cloud SSO Scope

Specifies scopes or permissions to be used when connecting to SSO service.

BricsCAD only

| | |
|----------------|----------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | openid profile email |

6.109 CLOUDSSOCLIENTID system variable

6.109.1 Cloud SSO Client ID

Specifies the client_id to be used when connecting to SSO service.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | bricscad |

6.110 CTRLMBUTTON system variable

6.110.1 Middle Button Click

Enables/disables temporary tracking points on middle click (mouse wheel click).

Uwaga: This variable is only available on the command line.

If CTRLMBUTTON is ON, then during a command a mouse middle click can be used to start entering temporary tracking points.

| | |
|------------------|---|
| Default value: | 1 |
| Possible values: | 0: Disables temporary tracking points on middle button click. 1: Enables temporary tracking points on middle button click. |



7. D

7.1 DATACOLLECTION system variable

7.1.1 Diagnostics and usage data collection

Specifies whether you wish to share anonymous usage data to help to improve BricsCAD.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | -2 to 1 |
| Default value: | -2 |
| Possible values: | -2: Not asked -1: Not set 0: Off 1: On |

7.2 DATACOLLECTIONENABLED system variable

7.2.1 Current state of data collection

Controls diagnostic and usage data collection.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Range: | Off |
| Possible values: | Off (0): Data collection is disabled. On (1): Data collection is enabled. |

Uwaga: This is a read-only system variable.

Uwaga: The value of this system variable is by default based on the value of the DATACOLLECTION preference variable, however it is possible to override the default by applying an administrative override. The administrative override is applied by manually adding the registry value in *HKLM\Software\Bricsys\BricsCAD\V23x64\AdminPolicy*.



To add this override follow the next steps:

- Go to: `Computer\HKEY_LOCAL_MACHINE\SOFTWARE\Bricsys\BricsCAD\V23x64`.
- Right-click the V23x64 key and choose **New > Key** and rename it to **AdminPolicy**.
- Right-click on the new created key and choose **New > DWORD (32-bit)** and name the value **DATACOLLECTIONENABLED**.
- Change its value to 0 or 1 to override the value of DATACOLLECTION user preference.

Uwaga: The AdminPolicy values are only read when BricsCAD starts, so any change requires a restart.

7.3 DATACOLLECTIONLOGINTYPE system variable

7.3.1 Current type of login for data collection

Determines the login type for data collection. (Off/Anonymous/User Password)

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | -1: Off 0: Anonymous 1: User/Password |

Uwaga: This is a read-only system variable.

7.4 DATALINKNOTIFY system variable

7.4.1 Notification of data links

Specifies the notification for updated or missing data links. Enables or disables data link notifications and balloon message notifications.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |



| | |
|------------------|--|
| Possible values: | 0: Disables data link update notification. 1: Enables data link notification. 2: Enables data link notification and balloon message notifications. |
|------------------|--|

7.5 DATE system variable

7.5.1 Current date

Shows the current date and time in Julian Day format.

Read-only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

7.6 DBCSTATE system variable

7.6.1 DbConnect state

Shows whether the dbConnect Manager is active or not.

Read-only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display dbConnect Manager On (1): Display dbConnect Manager |

7.7 DBLCLKEDIT system variable

7.7.1 Double click editing

Specifies the double click editing behavior in the drawing area.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | On |



| | |
|------------------|--|
| Possible values: | Off (0): Disable double click editing On (1): Enable double click editing |
|------------------|--|

7.8 DBMOD system variable

7.8.1 Modification status

Shows the status of the drawing modification as a bit-code.

Read-only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Possible values: | 1: Object database modified 4: Database variable modified 8: Window modified 16: View modified 32: Field modified |

7.9 DCTCUST system variable

7.9.1 Custom spelling dictionary

Stores the path and file name of the current custom spelling dictionary. During a spelling check, the SPELL command matches the words in the drawing or the current selection set to the words in the current main dictionary and the current custom dictionary. Custom dictionaries are used for discipline-specific words, such as medical or mechanical.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

7.10 DCTMAIN system variable

7.10.1 Main spelling dictionary

Stores the file name of the current main spelling dictionary, which is supposed to sit in the support folder, therefore the full path is not shown. During a spelling check, the SPELL command matches the words in the drawing or the current selection set to the words in the current main dictionary and the current custom dictionary.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|-----------|----------|
| Saved in: | Registry |
|-----------|----------|

7.11 DEFAULTBSYSLIBIMPERIAL system variable

7.11.1 Default Bsyslib imperial

Default location of the Bsyslib library database when MEASUREMENT is 0 (imperial).

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

7.12 DEFAULTBSYSLIBMETRIC system variable

7.12.1 Default Bsyslib metric

Default location of the Bsyslib library database when MEASUREMENT is 1 (metric).

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

7.13 DEFAULTCURVETYPEHA system variable

7.13.1 Default curve for horizontal alignments

Specifies the curve type to be used when create a new horizontal alignment or adding new PI.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Possible values: | -1: None 0: Auto Arc 1: Free Arc 2: Auto Spiral-Curve-Spiral 3: Free Spiral-Curve-Spiral |



7.14 DEFAULTCURVETYPEVA system variable

7.14.1 Default curve for vertical alignments

Specifies the curve type to be used when create a new vertical alignment or adding new PVI.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Possible values: | -1: None 0: Auto Arc 1: Free Arc 2: Auto Parabola 3: Free Parabola |

7.15 DEFAULTLIGHTING system variable

7.15.1 Default lighting

Specifies whether default lighting should be used always or only in case no other lights have been switched on. Default lighting consists of distant light that follows the view direction. This setting can be specified per viewport. When default lighting is used, it replaces all other light sources defined in the drawing.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Default lighting is used only in case no other lights are switched on On (1): Default lighting is used instead of the light sources defined in the drawing |

7.16 DEFAULTLIGHTSHADOWBLUR system variable

7.16.1 Default light shadow blur

Shadow blur amount for default light.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|----------------|------------|
| Saved in: | Preference |
| Range: | 1 to 40 |
| Default value: | 8 |

7.17 DEFAULTNEWSHEETTEMPLATE system variable

7.17.1 Default new sheet template

Specifies the default drawing template file (.dwg or .dwt) for new sheets.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

7.18 DEFAULTPLOTSTYLETABLE system variable

7.18.1 Default plot style table

Specifies the default plot style table for new page setups and new layouts. Changing this preference will not apply to the layouts that already exist.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

7.19 DEFAULTSPACEHEIGHT system variable

7.19.1 Default Space Height

Default height of a space's solid representation. This will be used if there are no ceilings to connect to or walls to get the height from.

BricsCAD only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |



| | |
|----------------|--|
| Default value: | 120 for MEASUREMENT=0 (inches) 3000 for MEASUREMENT=1 (millimeters) |
|----------------|--|

7.20 DEFAULTSTYLEPIPECROSS system variable

7.20.1 Default style for pipe cross

Style display as default while BIM FlowFitting cross is converting to Stdpart.

BricsCAD only

| | |
|----------------|------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Cross |

7.21 DEFAULTSTYLEPIPEECCENTRICREDUCER system variable

7.21.1 Default style for pipe reducer

Style display as default while BIM FlowFitting reducer is converting to Stdpart.

BricsCAD only

| | |
|----------------|------------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Eccentric Reducer |

7.22 DEFAULTSTYLEPIPEELBOW45 system variable

7.22.1 Default style for pipe elbow (45 deg)

Style display as default while BIM FlowBend with 45 degrees angle is converting to Stdpart.

BricsCAD only

| | |
|----------------|----------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Elbow LR 45 Deg |



7.23 DEFAULTSTYLEPIPEELBOW90 system variable

7.23.1 Default style for pipe elbow (90 deg)

Style display as default while BIM FlowBend with 90 degrees angle is converting to Stdpart.

BricsCAD only

| | |
|----------------|----------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Elbow LR 90 Deg |

7.24 DEFAULTSTYLEPIPEREDUCER system variable

7.24.1 Default style for pipe reducer

Style display as default while BIM FlowFitting reducer is converting to Stdpart.

BricsCAD only

| | |
|----------------|--------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Reducer |

7.25 DEFAULTSTYLEPIPESEGMENT system variable

7.25.1 Default style for pipe segment

Style display as default while BIM FlowSegment is converting to Stdpart.

BricsCAD only

| | |
|----------------|-------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B36.10M Pipe |

7.26 DEFAULTSTYLEPIPETEE system variable

7.26.1 Default style for pipe tee

Style display as default while BIM FlowFitting tee is converting to Stdpart.



BricsCAD only

| | |
|----------------|----------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | ASME B16.9 Tee |

7.27 DEFLPLSTYLE system variable

7.27.1 Default layer plot style

Specifies the default plot style for layer 0. In color-dependent mode drawings (PSTYLEMODE = 1), DEFLPLSTYLE is set to "BYCOLOR" (Read-only). In named-plot-style mode drawings (PSTYLEMODE = 0), DEFLPLSTYLE is set to "NORMAL" and can be changed. Use the CONVERTPSTYLES command to convert the current drawing to use named or color-dependent plot styles.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

7.28 DEFPLSTYLE system variable

7.28.1 Default entity plot style

Specifies the default plot style for new entities. In color-dependent mode drawings (PSTYLEMODE = 1), DEFPLSTYLE is set to "BYCOLOR" (Read-only). In named-plot-style mode drawings (PSTYLEMODE = 0), DEFPLSTYLE is set to "NORMAL" and can be changed. Use the CONVERTPSTYLES command to convert the current drawing to use named or color-dependent plot styles.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

7.29 DELETEINTERFERENCE system variable

7.29.1 Delete interference

Specifies whether interferences between source and other 3d solids are retained or resolved (i.e. source solids will be subtracted from any interfering solids).

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't solve interferences after commands On (1): Solve interferences after commands |


7.30 DELETETOOL system variable

7.30.1 Delete tool

Specifies whether tool entities in command SUBTRACT are retained or deleted.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Workspace |
| Default value: | On |
| Possible values: | Off (0): Don't delete tool entities in command SUBTRACT On (1): Delete tool entities in command SUBTRACT |

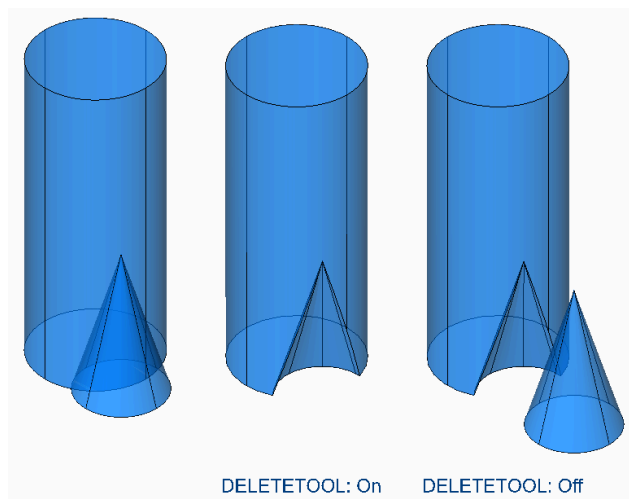

7.31 DELOBJ system variable

7.31.1 Delete entity

Specifies whether source entities used to create 3D entities are retained or deleted.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | 0: Retain defining entities 1: Delete profile entities 2: Delete all defining entities -1: Prompt to delete profile entities -2: Prompt to delete all defining entities (including paths and reference curves) |

7.32 DEMANDLOAD system variable

7.32.1 Demand load

Specifies how BricsCAD interacts with custom entities created by a third-party application. If you set this system variable to 0, third-party applications and some BricsCAD commands cannot function.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 1: Demand-load source application when opening a drawing that contains custom entities 2: Demand-load source application when invoking one of the application's commands |

7.33 DETAILSPATH system variable

7.33.1 Details directory path

Specifies the folder(s) in which BricsCAD should look for user created detail files.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |



7.34 DGNEXPXREFMODE system variable

7.34.1 Export Conversion of Xrefs

Specifies conversion of references to xrefs. The dependent files themselves are not converted when exporting the parent. They must be converted separately.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 0 |
| Possible values: | 0: Convert reference to DGN 1: Keep reference to DWG 2: Bind reference file to the parent DGN 3: Detach xref |

7.35 DGNFRAME system variable

7.35.1 DGN frame

Specifies if DGN frames in the current drawing are visible or plotted.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Hide DGN frames 1: Display and plot DGN frames 2: Display but do not plot DGN frames |

7.36 DGNIMP2DCLOSEDBSPLINECURVEIMPORTMODE system variable

7.36.1 2D closed B-spline curve import mode

Specifies how to convert closed 2D B-Spline curve elements.

BricsCAD only



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Convert to spline 1: Convert to region |

7.37 DGNIMP2DELLIPSEIMPORTMODE system variable

7.37.1 2D ellipse import mode

Specifies how to convert 2D Ellipse elements.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Convert to ellipse 1: Convert to region |

7.38 DGNIMP2DSHAPEIMPORTMODE system variable

7.38.1 2D shape import mode

Specifies how to convert 2D Shape and 2D Complex Shape elements. If an element is filled, then a hatch is created as well as the result of importing.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |



| | |
|------------------|---|
| Default value: | 0 |
| Possible values: | 0: Convert to polyline 1: Convert to region 2: Convert to polyface mesh |

7.39 DGNIMP3DCLOSEDBSPLINECURVEIMPORTMODE system variable

7.39.1 3D closed B-spline curve import mode

Specifies how to convert closed 3D B-Spline curve elements.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Convert to spline 1: Convert to region |

7.40 DGNIMP3DELLIPSEIMPORTMODE system variable

7.40.1 3D ellipse import mode

Specifies how to convert 3D Ellipse elements.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Convert to ellipse 1: Convert to region |



7.41 DGNIMP3DOBJECTIMPORTMODE system variable

7.41.1 3D object import mode

Specifies how to convert 3D entities.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Convert to polyface mesh 1: Convert to 3D Solid, Body or Surface |

7.42 DGNIMP3DSHAPEIMPORTMODE system variable

7.42.1 3D shape import mode

Specifies how to convert 3D Shape and 3D Complex Shape elements. If an element is filled, then a hatch is created as well as the result of importing.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Convert to polyline 1: Convert to region 2: Convert to polyface mesh |

7.43 DGNIMPBREAKDIMENSIONASSOCIATION system variable

7.43.1 Break dimension association

Specifies if dimensions lose their associativity upon import. If on, then dgn dimension associations are broken in the dwg.



BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't break dimension associations On (1): Break dimension associations |

7.44 DGNIMPCONVERTDGNCOLORINDICESTOTRUECOLORS system variable

7.44.1 Convert DGN color indices to true colors

Specifies how Microstation colors are mapped to BricsCAD colors. Microstation assigns color numbers to colors that are different from BricsCAD. If on, then BricsCAD converts dgn color indexes to RGB true colors. Otherwise it tries to convert dgn color indices to dwg color indices. BricsCAD gets the color from the dgn color table and tries to find the same color in dwg color table. If it is not possible, then the color will be saved as an RGB true color to the dwg file.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Convert DGN color indices to DWG color indices On (1): Convert DGN color indices to RGB true colors |

7.45 DGNIMPCONVERTEMPTYDATAFIELDSTOSPACES system variable

7.45.1 Convert empty data fields to spaces

Specifies how empty field values are handled. If on, then empty field values from a dgn file are replaced by space symbols in the dwg file. Otherwise empty field values from a dgn file are replaced by underscore symbols (" _ ") in the dwg file.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Replace by underscore symbols (" _") On (1): Replace by space symbols |

7.46 DGNIMPERASEUNUSEDRESOURCES system variable

7.46.1 Erase unused resources

Specifies if unreferenced elements, such as text styles and linetypes, are imported or deleted.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Import unreferenced elements. On (1): Erase unreferenced imported items |

7.47 DGNIMPEXPLODETEXTNODES system variable

7.47.1 Explode text nodes

Specifies how to handle text nodes (empty text fields). If on, imported dgn text nodes are converted to simple entities (text, line, etc.). Otherwise they are converted to multiline text. Microstation uses text nodes as empty fields that are used to reserve space for text that will be added later so the length of the text is not yet known.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Convert text nodes to multiline text On (1): Convert text nodes to simple entities, such as text and lines |



7.48 DGNIMPIMPORTACTIVEMODELTOMODELSPACE system variable

7.48.1 Import active model to Model Space

Specifies how active spaces are handled. If on, BricsCAD imports the active dgn model to dwg Model Space. Otherwise BricsCAD imports the first dgn design model from the model table to the dwg Model Space. Microstation uses the phrase “design model” for model space, and “active model” for the current view of a model.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Import the first design model from the model table to the model space On (1): Import the active model to model space |

7.49 DGNIMPIMPORTDGTEXTSASDBMTEXTS system variable

7.49.1 Import Texts as MTexts

If true, import simple text objects as multiline texts.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Does not import simple text objects as multiline texts. On (1): Imports simple text objects as multiline texts. |

7.50 DGNIMPIMPORTINVISIBLEELEMENTS system variable

7.50.1 Import invisible elements

Specifies how invisible elements (entities) are handled. If on, BricsCAD imports invisible dgn elements as invisible entities. Otherwise they are skipped.

BricsCAD only



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Skip invisible elements On (1): Import invisible elements |

7.51 DGNIMPIMPORTPAPERSPACEMODELS system variable

7.51.1 Import Paper Space models

Specifies whether to import sheet models (paper space). If on, all dgn sheet models are imported to the Paper Space layouts. Otherwise sheet models are not imported. Microstation uses the phrase "sheet model" for paper space.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't import sheet models On (1): Import sheet models to paper space layouts |

7.52 DGNIMPIMPORTVIEWINDEX system variable

7.52.1 Import view index

Specifies the number of dgn views to use level masks and dgn view settings. If the view number is "-1", then the view is not defined, and view settings and level masks are not used. Microstation uses the word "level" for layers; a "mask" hides content in areas or levels/layers.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | -1 to 7 |



| | |
|------------------|---|
| Default value: | -1 |
| Possible values: | -1: View is not defined 1 to 7: Specifies level mask |

7.53 DGNIMPRECOMPUTEDIMENSIONSATERIMPORT system variable

7.53.1 Recompute dimensions after import

Specifies how to handle imported dimensions. If on, BricsCAD will re-compute all dimensions to create dwg-based dimension geometry blocks; otherwise it will create dgn-based dimension geometry blocks.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): create DGN-style dimension geometry blocks On (1): re-compute all dimensions to create DWG dimension geometry blocks |

7.54 DGNIMPSYMBOLRESOURCEFILES system variable

7.54.1 Symbol resource files

Specifies the paths to folders holding DGN and RSC files. Microstation uses RSC resource files to store fonts, line styles, and so on. (analog to MS_SYMBRSRC MicroStation setting).

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

7.55 DGNIMPXREFIMPORTMODE system variable

7.55.1 External references import mode

Specifies how to import dgn reference attachments. The options are "Omit" - don't import dgn reference attachments; "Retain" - convert attached dgn files to dwg and create dwg Xref; "Merge to cell" - create block definition and import attached dgn file to it, then create block reference to dgn attachment block; "Create DGN Underlay" - create DGN Underlay object.



BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 2 |
| Possible values: | 0: Omit 1: Retain 2: Merge to cell 3: Create DGN Underlay |

7.56 DGNOSNAP system variable

7.56.1 Dgn entity snap

Enable snapping to entities in DGN underlay files.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Disable DGN entity snap On (1): Enable DGN entity snap |

7.57 DIASTAT system variable

7.57.1 Dialog state

Shows how the user exited the most recently used dialog box.

Read-only

| | |
|------------------|-------------------------------|
| Type: | Boolean |
| Saved in: | Not saved |
| Possible values: | Off (0): Cancel On (1): OK |



7.58 DIMADEC system variable

7.58.1 Dim angle precision

Specifies the display precision for angular dimensions. Values between -1 and 8 are accepted. If -1 is entered, DIMADEC is initialized with the value of the DIMDEC setting. Values 0 to 8 specify the number of decimal places for angular dimensions, independent of DIMDEC.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -1 to 8 |
| Default value: | 0 |
| Possible values: | -1: Use DIMDEC setting 0 - 8: Decimal places |

7.59 DIMALT system variable

7.59.1 Alt units

Enables alternate units in dimensions.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Disable alternate units On (1): Enable alternate units |

7.60 DIMALTD system variable

7.60.1 Alt precision

Specifies the display precision for the alternate dimension units.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |



| | |
|----------------|--------|
| Range: | 0 to 8 |
| Default value: | 3 |

7.61 DIMALT system variable

7.61.1 Alt multiplier

Specifies the multiplier for alternate units. If DIMALT is on, linear dimensions are multiplied by DIMALT to provide an alternate linear dimension. E.g. if one drawing unit equals 1 inch, and DIMALT=25.4, alternate linear dimensions are expressed in mm.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0394 |

7.62 DIMALTRND system variable

7.62.1 Alt roundoff

Specifies the roundoff rules for alternate units.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.63 DIMALTDD system variable

7.63.1 Alt tolerance precision

Specifies the tolerance precision in the alternate dimension units.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 8 |
| Default value: | 3 |



7.64 DIMALTTZ system variable

7.64.1 Alt tolerance suppress zeros

Specifies the suppression of zeros in tolerance values.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Suppress zero feet and precisely zero inches 1: Include zero feet and precisely zero inches 2: Include zero feet and suppress zero inches 3: Suppress zero feet and include zero inches 4: Suppress leading zeros in decimal dimensions 8: Suppress trailing zeros in decimal dimensions |

7.65 DIMALTU system variable

7.65.1 Alt unit type

Specifies the alternate unit type for linear dimensions.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 8 |
| Default value: | 2 |
| Possible values: | 1: Scientific 2: Decimal 3: Engineering 4: Architectural (stacked) 5: Fractional (stacked) 6: Architectural 7: Fractional 8: Windows control panel |



7.66 DIMALTZ system variable

7.66.1 Alt suppress zeros

Suppresses leading and/or trailing zeros in alternate unit dimension values.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 12 |
| Default value: | 0 |
| Possible values: | 0: Suppress zero feet and precisely zero inches 1: Include zero feet and precisely zero inches 2: Include zero feet and suppress zero inches 3: Suppress zero feet and include zero inches 4: Suppress leading zeros in decimal dimensions 8: Suppress trailing zeros in decimal dimensions |

7.67 DIMANNO system variable

7.67.1 Style is annotative

Indicates if the current dimension style is annotative.

Read-only

| | |
|-----------|---------|
| Type: | Boolean |
| Saved in: | Drawing |

7.68 DIMAPOST system variable

7.68.1 Alt units prefix/suffix

Specifies a prefix and/or suffix that to appear in the alternate dimension text. The general format is just the suffix string or 'prefix[]suffix'. DIMAPOST does not apply to angular dimensions. In the DimStyle explorer the variable is split up into Alt Prefix and Alt Suffix for editing.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |



7.69 DIMARCSYM system variable

7.69.1 Arc symbol

Specifies how the arc length symbol displays in an arc dimension.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Arc length symbol is placed before the dimension text 1: Arc length symbol is placed above the dimension text 2: The display of the arc length symbol is suppressed |

7.70 DIMASO system variable

7.70.1 Associativity (Obsolete)

Replaced by DIMASSOC. Has no effect except to preserve the integrity of scripts.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |

7.71 DIMASSOC system variable

7.71.1 Associativity

Specifies the associativity of dimension entities or whether they are exploded.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |



| | |
|------------------|--|
| Possible values: | 0: Exploded dimensions 1: Non-associative dimension entities 2: Associative dimension entities |
|------------------|--|

7.72 DIMASZ system variable

7.72.1 Arrow size

Specifies the size of arrowheads of dimension lines and leader lines.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.18 |

7.73 DIMATFIT system variable

7.73.1 Arrow and text fit

Specifies how dimension text and arrows are arranged when there is insufficient place within the extension lines. When DIMTMOVE=1, a leader is added if the dimension text is placed outside.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 0: Place both text and arrows outside extension lines 1: Move arrows first, then text 2: Move text first, then arrows 3: Move either text or arrows, whichever fits best |

7.74 DIMAUNIT system variable

7.74.1 Dim angle units

Specifies angular dimensions unit type.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Decimal degrees 1: Degrees/minutes/seconds 2: Gradians 3: Radians |

7.75 DIMAZIN system variable

7.75.1 Suppress angle zeros

Suppresses leading and/or trailing zeros for angular dimensions. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible options: | 1: Suppress leading zeros 2: Suppress trailing zeros |

7.76 DIMBLK system variable

7.76.1 Arrow

Specifies the name of the block displayed at the ends of dimension lines and leader lines. The block name can be either a standard name or refer to a user-defined arrowhead block.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |



7.77 DIMBLK1 system variable

7.77.1 Arrow 1

Specifies the name of the block displayed at the first end of dimension line when DIMSAH is on (= use different blocks for the first and the second arrowhead).

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.78 DIMBLK2 system variable

7.78.1 Arrow 2

Specifies the name of the block displayed at the second end of dimension line when DIMSAH is on (= use different blocks for the first and the second arrowhead).

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.79 DIMCEN system variable

7.79.1 Center mark

Specifies if and how center marks and centerlines of circles and arcs are drawn by DIMCENTER, DIMDIAMETER and DIMRADIUS commands. Set to zero for no center mark, negative for Line or positive for Mark. The DIMCEN system variable also controls the length of center mark lines and size of the center marks.

| | |
|------------------|---------------------------------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.09 |
| Possible values: | 0: None <0: Line >0: Mark |



7.80 DIMCLRD system variable

7.80.1 Dim line color

Specifies the color for dimension lines, arrowheads and dimension leader lines.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 256 |
| Default value: | 0 |
| Possible values: | 0: ByBlock 1 - 255: index 256: ByLayer |

7.81 DIMCLRE system variable

7.81.1 Ext line color

Specifies the color for dimension extension lines.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 256 |
| Default value: | 0 |
| Possible values: | 0: ByBlock 1 - 255: index 256: ByLayer |

7.82 DIMCLRT system variable

7.82.1 Text color

Specifies the color for dimension text.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Drawing |
| Range: | 0 to 256 |
| Default value: | 0 |
| Possible values: | 0: ByBlock 1 - 255: index 256: ByLayer |

7.83 DIMDEC system variable

7.83.1 Dim precision

Specifies the display precision for the primary dimension units.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 8 |
| Default value: | 4 |

7.84 DIMDLE system variable

7.84.1 Dim line ext

Specifies the extension of the dimension line beyond the extension lines in case obliques or architectural ticks are drawn instead of arrowheads.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.85 DIMDLI system variable

7.85.1 Dim baseline spacing

Specifies the spacing between dimension lines in baseline dimensions.



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 3.8 |

7.86 DIMDSEP system variable

7.86.1 Decimal separator

Specifies a new decimal separator character.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.87 DIMEXE system variable

7.87.1 Ext line ext

Specifies the extension of the extension lines beyond the dimension line.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | .18 |

7.88 DIMEXO system variable

7.88.1 Ext line offset

Specifies the offset of extension lines from the origin points.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.625 |



7.89 DIMFIT system variable

7.89.1 Dimension text fit (Obsolete)

Replaced by DIMATFIT and DIMTMOVE.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 3 |

7.90 DIMFRAC system variable

7.90.1 Fractional type

Specifies the fraction format for Architectural (DIMLUNIT = 4) or Fractional (DIMLUNIT = 5) linear dimensions.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Horizontal 1: Diagonal 2: Not stacked |

7.91 DIMFXL system variable

7.91.1 Ext line fixed length

Specifies the total length of the extension lines.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |



7.92 DIMFXLON system variable

7.92.1 Ext line fixed

Specifies whether extension lines are set to a fixed length.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't use fixed length extension lines On (1): Use fixed length extension lines |

7.93 DIMGAP system variable

7.93.1 Text offset

Specifies the offset distance around the dimension text and the distance between annotation and hook line created using the LEADER command. A negative value for DIMGAP draws a box around the dimension or annotation text.


| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.09 |

7.94 DIMJOGANG system variable

7.94.1 Jogged angle

Specifies the angle of the oblique dimension line segment in jogged radius dimensions. Jogged radius dimensions are often created when the center point is located off the page.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 45.0 |

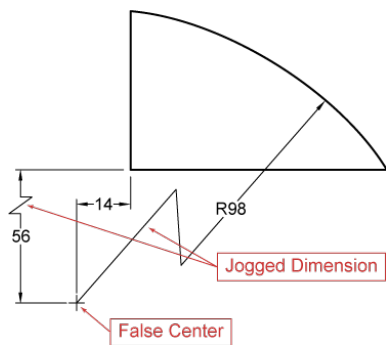

7.95 DIMJUST system variable

7.95.1 Horizontal text position

Specifies the horizontal position of dimension text, with respect to the extension lines.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 4 |
| Default value: | 0 |
| Possible values: | 0: Text above the dimension line and center-justified between extension lines 1: Text next to the first extension line 2: Text next to the second extension line 3: Text above and aligned with the first extension line 4: Text above and aligned with the second extension line |

7.96 DIMLAYER system variable

7.96.1 Default layer for new dimensions

Specifies a default layer for new dimensions.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | . |



7.97 DIMLDRBLK system variable

7.97.1 Leader arrow

Specifies the arrowhead block for leaders.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.98 DIMLFAC system variable

7.98.1 Dim scale linear

Specifies the scale factor for linear dimensions. Linear dimensions (incl. radius, diameter and ordinate dimensions), are multiplied by DIMLFAC. Positive values apply to dimensions in both model space and paper space; negative values apply to paper space dimensions only.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

7.99 DIMLIM system variable

7.99.1 Tolerance method

Specifies the default text to dimension limits. If DIMLIM is On, DIMTOL is switched Off.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't generate dimension limits as default text On (1): Generate dimension limits as default text |

7.100 DIMLTEX1 system variable

7.100.1 Ext line 1 linetype

Specifies the linetype for the first extension line.



| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.101 DIMLTEX2 system variable

7.101.1 Ext line 2 linetype

Specifies the linetype for the second extension line.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.102 DIMLTYPE system variable

7.102.1 Dim line linetype

Specifies the linetype for the dimension line.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.103 DIMLUNIT system variable

7.103.1 Dim units

Specifies the primary unit type for linear dimensions.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 6 |
| Default value: | 2 |



| | |
|------------------|--|
| Possible values: | 1: Scientific 2: Decimal 3: Engineering 4: Architectural 5: Fractional 6: Windows control panel |
|------------------|--|

7.104 DIMLWD system variable

7.104.1 Dim line lineweight

Specifies the lineweight of dimension lines.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -3 to 211 |
| Default value: | Bylayer |
| Possible values: | -3: Default (defined by LWDEFAULT) -2: ByBlock -1: ByLayer 0 - 211: Lineweight value in hundredths of millimeters |

7.105 DIMLWE system variable

7.105.1 Ext line LW

Specifies the lineweight of extension lines.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -3 to 211 |
| Default value: | Bylayer |



| | |
|------------------|--|
| Possible values: | -3: Default (defined by LWDEFAULT) -2: ByBlock -1: ByLayer 0 - 211: Lineweight value in hundredths of millimeters |
|------------------|--|

7.106 DIMMARKTYPE system variable

7.106.1 Dimension override marking

Automatically displays overridden associative dimensions with a special marking (underline/overline) without database modification.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Not enabled 1: Display overridden dimensions with an underline 2: Display overridden dimensions with an overline |

7.107 DIMPOST system variable

7.107.1 Dim prefix/suffix

Specifies a prefix and/or suffix to be added to the dimension text. The general format is just the suffix string or 'prefix <> suffix'. A single linefeed can be inserted with '\\X' (often when alternate units are active). In the DimStyle explorer the variable is split into Dim Prefix and Dim Suffix for editing.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

7.108 DIMRND system variable

7.108.1 Dim round

Specifies the roundoff rules for linear dimensions. E.g. set DIMRND to 0.1 if you want to round all distances to the nearest 0.1 unit. Set DIMRND to 1 if you want to round distances to the nearest integer.



Remember the number of decimal places is limited by DIMDEC. Angular dimensions or not affected by DIMRND.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.109 DIMSAH system variable

7.109.1 Arrowheads

Specifies whether dimension line arrowhead blocks are set by DIMBLK or by DIMBLK1 and DIMBLK2. If=0: use the same block for the first and the second arrowhead. The arrowhead block is then defined by DIMBLK. If=1: use different blocks for the first and the second arrowhead. The arrowhead blocks are defined by DIMBLK1 and DIMBLK2

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Arrowhead blocks set by DIMBLK On (1): Arrowhead blocks set by DIMBLK1 and DIMBLK2 |

7.110 DIMSCALE system variable

7.110.1 Dim scale overall

Specifies the scale factor applied to all dimensioning variables that specify the size of the components of dimension entities, such as text height, distances or offsets. DIMSCALE does not affect measured lengths, coordinates, or angles.

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 or greater |
| Default value: | 1.0 |



7.111 DIMSD1 system variable

7.111.1 Dim line 1

Suppresses the display of the first part of the dimension line: from the first extension line to the text origin.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't suppress first dimension line On (1): Suppress first dimension line |

7.112 DIMSD2 system variable

7.112.1 Dim line 2

Suppresses the display of second part of the dimension line: from the text origin to the second extension line.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't suppress second dimension line On (1): Suppress second dimension line |

7.113 DIMSE1 system variable

7.113.1 Ext line 1

Suppresses the display of the first extension line.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't suppress first extension line On (1): Suppress first extension line |
|------------------|---|

7.114 DIMSE2 system variable

7.114.1 Ext line 2

Suppresses the display of the second extension line.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't suppress second extension line On (1): Suppress second extension line |

7.115 DIMSHO system variable

7.115.1 Dimension show (Obsolete)

Specifies redefinition of dimension entities while dragging. Has no effect except to preserve the integrity of scripts.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |

7.116 DIMSOXD system variable

7.116.1 Dim line inside

Suppresses arrowheads outside the extension lines if there is insufficient room inside the extension lines and if DIMITX is on. If DINTIX is off, DIMSOXD had no effect.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't suppress outside arrowheads On (1): Suppress outside arrowheads |
|------------------|---|

7.117 DIMSTYLE system variable

7.117.1 Dimension style

Shows the current dimension style.

Read-only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |

7.118 DIMTAD system variable

7.118.1 Vertical text position

Specifies the vertical position of text with respect to the dimension line. If DIMTAD=1 (Above dimension line), the distance from the dimension line is set by DIMGAP.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 4 |
| Default value: | 0 |
| Possible values: | 0: Centered between extension lines 1: Above dimension line, unless DIMTIH is 1 and the dimension line is not horizontal 2: Farthest from defining points 3: Japanese Industrial Standards 4: Below dimension line |

7.119 DIMTDEC system variable

7.119.1 Tolerance precision

Specifies the number of decimal places for tolerance values in the primary dimension units.



| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 8 |
| Default value: | 4 |

7.120 DIMTFAC system variable

7.120.1 Tolerance text height

Specifies the scale factor to calculate the text height for dimension fractions and tolerances, relative to the dimension text height, as set by DIMTXT. Only applies if DIMLUNIT=Fractional.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

7.121 DIMTFILL system variable

7.121.1 Text fill

Specifies the dimension text background.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No background or fill 1: Background or fill color matches the background of the drawing window 2: Background or fill color matches the value specified by DIMTFILLCLR |

7.122 DIMTFILLCLR system variable

7.122.1 Text fill color

Specifies the dimension text background color when DIMTFILL is set to 2.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 256 |
| Default value: | 0 |
| Possible values: | 0: ByBlock 1-255: index 256: ByLayer |

7.123 DIMTIH system variable

7.123.1 Text inside align

Specifies the position of dimension text inside the extension lines. DIMTIH does not apply to ordinate dimensions.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 1 |
| Possible values: | Off (0): Aligned with dimension line On (1): Horizontal |

7.124 DIMTIX system variable

7.124.1 Text inside

Draws text between extension lines, even if there is insufficient room. DIMTIX does not apply to radius and diameter dimensions.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't force text between extension lines On (1): Force text between extension lines |



7.125 DIMTM system variable

7.125.1 Tolerance limit lower

Specifies the minimum (lower) tolerance limit for dimension text when DIMTOL or DIMLIM is on.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.126 DIMTMOVE system variable

7.126.1 Text movement

Specifies how dimension text can move.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Move dimension line with dimension text 1: Add leader when dimension text is moved 2: Allow text to be moved freely without a leader |

7.127 DIMTOFL system variable

7.127.1 Dim line forced

Specifies whether a dimension line is drawn between the extension lines even when the text is placed outside.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't force dimension lines even when text is outside On (1): Force dimension lines even when text is outside |
|------------------|---|

7.128 DIMTOH system variable

7.128.1 Text outside align

Forces the dimension text outside the extension lines to be placed horizontally.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 1 |
| Possible values: | Off (0): Aligned with dimension line On (1): Horizontal |

7.129 DIMTOL system variable

7.129.1 Tolerance display

Adds tolerances to dimension text.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | |
| Default value: | Off |
| Possible values: | Off (0): Don't display tolerance On (1): Display tolerance |

7.130 DIMTOLJ system variable

7.130.1 Tolerance pos vert

Specifies the vertical position for tolerance values relative to the primary dimension text.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|----------------------------------|
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Bottom 1: Middle 2: Top |

7.131 DIMTP system variable

7.131.1 Tolerance limit upper

Specifies the maximum (upper) tolerance limit for dimension text when DIMITOL or DIMLIM is on.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.132 DIMTSZ system variable

7.132.1 Dim tick size

Specifies the size of tick marks drawn instead of arrowheads for linear, radius and diameter dimensioning. If the value is zero, arrowheads are drawn.

| | |
|------------------|--|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |
| Possible values: | 0: Draw arrowheads >0: Draw oblique strokes instead of arrowheads |



7.133 DIMTVP system variable

7.133.1 Text offset vert

Specifies the vertical position of dimension text above or below the dimension line when DIMTAD=0. The offset equals the product of DIMTVP and the height of the dimension text (DIMTXT). Setting DIMTVP to 1.0 is equivalent to DIMTAD=1

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

7.134 DIMTXSTY system variable

7.134.1 Text style

Specifies the style of the dimension text.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |

7.135 DIMTXT system variable

7.135.1 Text height

Specifies the dimension text height if the text style as defined in DIMTXSTY has no fixed height.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | .18 |

7.136 DIMTXTDIRECTION system variable

7.136.1 Text direction

Specifies the dimension text reading direction.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Left to right On (1): Right to left |

7.137 DIMTZIN system variable

7.137.1 Tolerance suppress zeros

Specifies the suppression of zeros in tolerance values. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 15 |
| Default value: | 0 |
| Possible options: | 0: Suppress zero feet and precisely zero inches 1: Include zero feet and precisely zero inches 2: Include zero feet and suppress zero inches 3: Suppress zero feet and include zero inches 4: Suppress leading zeros in decimal dimensions 8: Suppress trailing zeros in decimal dimensions |

7.138 DIMUNIT system variable

7.138.1 Dim unit type (Obsolete)

Replaced by DIMLUNIT and DIMFRAC.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 8 |



| | |
|------------------|---|
| Default value: | 2 |
| Possible values: | 1: Scientific 2: Decimal 3: Engineering 4: Architectural (stacked) 5: Fractional (stacked) 6: Architectural 7: Fractional 8: Windows control panel |

7.139 DIMUPT system variable

7.139.1 Place text manually

Allows user-positioned text.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Cursor controls only the dimension line location On (1): Cursor controls both the text position and the dimension line location |

7.140 DIMZIN system variable

7.140.1 Suppress dim zeros

Suppresses leading and/or trailing zeros in the primary unit. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 15 |
| Default value: | 0 |



| | |
|-------------------|--|
| Possible options: | 0: Suppress zero feet and precisely zero inches 1: Include zero feet and precisely zero inches 2: Include zero feet and suppress zero inches 3: Suppress zero feet and include zero inches 4: Suppress leading zeros in decimal dimensions 8: Suppress trailing zeros in decimal dimensions |
|-------------------|--|

7.141 DISPLAYAXES system variable

7.141.1 Display Axes

Controls the display of the axis of linear structural elements such beams and columns.

BricsCAD only

| | |
|-------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible options: | Off (0): Do not display axes On (1): Display axes |

7.142 DISPLAYAXESFORMEP system variable

7.142.1 Display axes

Controls the display of the MEP element axes.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

7.143 DISPLAYSCALING system variable

7.143.1 Automatic display scaling

Current display scaling percentage (from system display settings).

BricsCAD only

Read-only



| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 50 to 1000 |
| Default value: | 100 |

7.144 DISPLAYSIDESANDENDS system variable

7.144.1 Display sides and ends

When ON, the sides and ends of linear solids highlight on hovering if the Quad is ON or bitcode 1 of the SELECTIONPREVIEW system variable is selected. The variable is available in the BIM and Ultimate license level only.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display sides and ends On (1): Display side and ends |

7.145 DISPLAYSNAPMARKERINALLVIEWS system variable

7.145.1 Snap marker in all views

Specifies whether the snap marker displays in all viewports.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't display snap marker in all views On (1): Display snap marker in all views |



7.146 DISPLAYTOOLTIPS system variable

7.146.1 Snap tooltips

Toggles the display of snap tooltips On/Off.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable snap tooltips On (1): Enable snap tooltips |

7.147 DISPPAPERBKG system variable

7.147.1 Paper background

Enables or disables displaying of paper sheet in paper space.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display paper background On (1): Display paper background |

7.148 DISPPAPERMARGINS system variable

7.148.1 Printable area

Enables or disables displaying of printable area of a drawing.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |




| | |
|------------------|---|
| Possible values: | Off (0): Don't display printable area On (1): Display printable area |
|------------------|---|

7.149 DISPSILH system variable

7.149.1 Display silhouette curves

Specifies the display of silhouette curves of solid entities in Wireframe modes (2D and 3D) and whether a mesh is drawn or not when a solid entity is hidden in 2D Wireframe mode. To view changes on existing entities, perform a REGEN.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display silhouette curves On (1): Display silhouette curves |

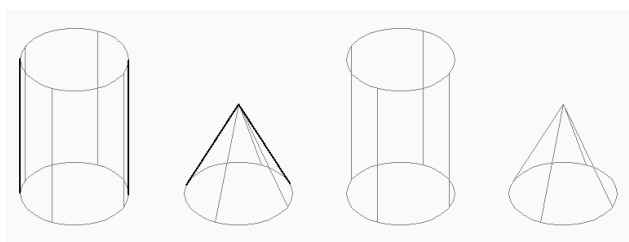

7.150 DISTANCE system variable

7.150.1 Distance

Specifies the last calculated distance by the DIST command.

Read-only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

7.151 DMAUDITLEVEL system variable

7.151.1 DMAUDIT command, level of details

Specifies whether certain types of errors are reported by the DMAUDIT command. The value is stored as a bitcode using the sum of the values of all selected options.



BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible options: | 1: Ignore dynamic range errors 2: Ignore sliver faces |

7.152 DMAUTOUPDATE system variable

7.152.1 3D constraints recalculation mode

Specifies if a model automatically updates when 3D constraints are added or edited. If this setting is switched off, command DMUPDATE must be used to update the model.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't update 3D constraints automatically On (1): Update 3D constraints automatically |

7.153 DMCONNECTIONCUTTYPE system variable

7.153.1 Connection type

Specifies the type of connection.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |



| | |
|------------------|------------------------|
| Default value: | 0 |
| Possible values: | 0: Smooth 1: Planar |

7.154 DMPUSHPULLSUBTRACT system variable

7.154.1 DMPUSHPULL subtract

Specifies if a solid that intersects with other solids during a PUSH/PULL operation subtracts from the existing solid.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Workspace |
| Range: | 0 to 1 |
| Default value: | Off |
| Possible values: | Off (0): Disable DMPUSHPULL subtract On (1): Enable DMPUSHPULL subtract |

7.155 DMRECOGNIZE system variable

7.155.1 Automatic 3D geometry constraints recognition

Specifies which geometrical relations between the surfaces are maintained direct modeling operations. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -1 to 1023 |
| Default value: | 0 |



| | |
|-------------------|--|
| Possible options: | Negative: Switch off automatic 3D geometry constraints recognition 1: Tangent surfaces 2: Coincident planes 4: Parallel planes 8: Perpendicular planes 16: Cylinders perpendicular to planes 32: Coaxial surfaces 64: Cylinders and spheres of equal radius 128: Vertices between 4 or more faces 256: Edges between coincident faces 512: Fix a constrained plane lying in XY/YZ/ZX (compatibility) |
|-------------------|--|

7.156 DOCKPRIORITY system variable

7.156.1 Docking Priority

Specifies the docking priority of top, left, right and bottom docking bars. Changing this preference will take effect only after restarting the application.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 14 |
| Default value: | 1 |
| Possible values: | 1: Top, Left, Right, Bottom 2: Top, Bottom, Left, Right 3: Top, Left, Bottom, Right 4: Top, Right, Bottom, Left 5: Left, Right, Top, Bottom 6: Left, Top, Bottom, Right 7: Left, Top, Right, Bottom 8: Left, Bottom, Right, Top 9: Right, Top, Left, Bottom 10: Right, Bottom, Left, Top 11: Right, Top, Bottom, Left 12: Bottom, Left, Right, Top 13: Bottom, Left, Top, Right 14: Bottom, Right, Top, Left |



7.157 DOCTABPOSITION system variable

7.157.1 Tabs position

Specifies where to display the document tab control.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Top 1: Bottom 2: Left 3: Right |

7.158 DONUTID system variable

7.158.1 Donut inside diameter

Stores the default inside diameter of a donut.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 0.5 |

7.159 DONUTOD system variable

7.159.1 Donut outside diameter

Stores the default outside diameter of a donut.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 1.0 |



7.160 DRAGMODE system variable

7.160.1 Entity dragging

Specifies whether entities display dynamically, e.g. when moved or copied.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: No dragging 1: When requested 2: Whenever possible |

7.161 DRAGMODEHIDE system variable

7.161.1 Hide original entity when dragging

Specifies whether the original entity should be visible or not when a drag operation is performed.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 1: Hide original entity in 3D Modeling commands. 2: Hide original entity in 2D Drafting commands. |

7.162 DRAGMODEINTERRUPT system variable

7.162.1 Dragging interruption mode

Specifies whether the recalculation/redrawing of the model can be interrupted when mouse cursor is being moved (responsive, but may cause blinking, incomplete or disappearing graphics) or every drag iteration must be completed (slow, but graphics is always valid).

BricsCAD only



| | |
|------------------|---------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: Disabled 1: Enabled |

7.163 DRAGOPEN system variable

7.163.1 Drag open

Specifies if a drawing file that is dragged onto the application inserts into the current drawing or opens as a separate drawing.

BricsCAD only

| | |
|------------------|--------------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Insert file 1: Open file |

7.164 DRAGP1 system variable

7.164.1 Regen-drag rate

Specifies the regen-drag input sampling rate.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 32767 |
| Default value: | 10 |



7.165 DRAGP2 system variable

7.165.1 Fast-drag rate

Specifies the fast-drag input sampling rate.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 32767 |
| Default value: | 25 |

7.166 DRAGSNAP system variable

7.166.1 Snap dragged entities

Switches entity snapping of dragged entities on or off.

The DRAGSNAP system variable controls the snap behavior while dragging, providing an increased WYSIWIG experience. DRAGSNAP controls whether rubberband dynamics are displayed at the current cursor location or at the current entity snap location. DRAGSNAP applies to all modify commands that display dynamics, such as COPY, PASTECLIP, PASTEBLOCK, MOVE, ROTATE, MIRROR, SCALE and STRETCH.

When DRAGSNAP is off, snap is only in effect during drawing and editing commands; when DRAGSNAP is on, the cursor also snaps when no command is active.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't snap dragged entities On (1): Snap dragged entities |

7.167 DRAWINGPATH system variable

7.167.1 Drawings path

Specifies an additional folder in the file dialog for the OPEN and SAVEAS commands. On the Windows platform: the fifth folder in the open file dialog's Places Bar.



BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

7.168 DRAWINGVIEWASM system variable

7.168.1 Assemblies optimization

Enables the use of assembly data structures to optimize generation of drawing views. Toggles between normal analytical hidden line removal (HLR) and ASM_HLR procedure.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

7.169 DRAWINGVIEWFLAGS system variable

7.169.1 Drawing View Flags

Bit flags for drawing views processing.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | Off (0) |
| Possible values: | Off (0): Disabled parallel generation and update of drawing views On (1): Enabled parallel generation and update of drawing views |

7.170 DRAWINGVIEWPRESET system variable

7.170.1 Drawing view preset

Stores the current preset for the VIEWBASE command, the default value is 'None'. Presets specify the types of generated drawings and their placement in the layout.

BricsCAD only



| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | None |

7.171 DRAWINGVIEWPRESETHIDDEN system variable

7.171.1 Drawing view hidden lines preset

Stores the current hidden lines preset for the VIEWBASE command.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't store the current hidden line preset On (1): Store the current hidden line preset |

7.172 DRAWINGVIEWPRESETSCALE system variable

7.172.1 Scale for drawing view preset

Stores the annotation scale for current drawing view preset.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

7.173 DRAWINGVIEWPRESETTANGENT system variable

7.173.1 Drawing view tangent lines preset

Stores the current tangent lines preset for VIEWBASE command.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't store the current tangent lines preset On (1): Store the current tangent lines preset |

7.174 DRAWINGVIEWPRESETTRAILING system variable

7.174.1 Drawing view trailing lines preset

Stores the current trailing lines preset for VIEWBASE command.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't store the current trailing lines preset On (1): Store the current trailing lines preset |

7.175 DRAWINGVIEWQUALITY system variable

7.175.1 Quality of drawing views

Specifies the quality of drawing views.

You can significantly reduce the time needed to generate drawing views by changing the DRAWINGVIEWQUALITY setting to 0. This enables draft-quality drawing views. Such drawing views are internally represented as 3D solids, which makes it impossible to put annotations on their silhouette edges. However, they look very similar to a precise (high-quality) drawing view and you can use them to quickly create layouts.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |



| | |
|------------------|-------------------------------------|
| Possible values: | 0: Draft quality 1: High quality |
|------------------|-------------------------------------|

7.176 DRAWORDERCTL system variable

7.176.1 Draworder control

Specifies the default behavior for the display of overlapping entities. Use this setting to limit draw order if some editing operations take slightly longer. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible options: | 1: Default display of entities with draw order 2: Draw order inheritance |

7.177 DWFFORMAT system variable

7.177.1 Default DWF format

Specifies the default format to DWF or DWFX for 3DDWF command.

BricsCAD only

| | |
|------------------|-------------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: DWF 1: DWFX |



7.178 DWFFRAME system variable

7.178.1 DWF frame

Specifies the visibility of DWF or DWFx underlay frames.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Hide DWF frames 1: Display and plot DWF frames 2: Display but do not plot DWF frames |

7.179 DWFOSNAP system variable

7.179.1 Dwf entity snap

Enable snapping to entities in DWF underlay files.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Disable DWF entity snap On (1): Enable DWF entity snap |

7.180 DWFVERSION system variable

7.180.1 DWF version

Specifies the dwf version for export in dwf format.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |



| | |
|------------------|---|
| Range: | 1 to 10 |
| Default value: | 2 |
| Possible values: | 1: 3D DWF v6.01 2: Binary DWF v6.0 3: Zipped Ascii Encoded 2D Stream DWF v6.0 4: Compressed DWF v5.5 5: Binary DWF v5.5 6: Ascii DWF v5.5 7: Compressed DWF v4.2 8: Binary DWF v4.2 9: Ascii DWF v4.2 10: XPS DWFx |

7.181 DWGCHECK system variable

7.181.1 Drawing check

Executes an automatic data integrity check when opening a drawing.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Warn on potential problem 1: Warn on potential problem and on other application 2: Notify on potential problem 3: Notify on potential problem, warn on other application |

7.182 DWGCODEPAGE system variable

7.182.1 Drawing codepage

Displays the drawing code-page for text in drawings (same value as SYSCODEPAGE).

Read-only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|-----------|---------|
| Saved in: | Drawing |
|-----------|---------|

7.183 DWGGUIDCLOUDAI system variable

7.183.1 Drawing Guid

Unique GUID for this drawing

BricsCAD only

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | " " |

7.184 DWGNAME system variable

7.184.1 Drawing name

Shows the name of the current drawing.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

7.185 DWGPREFIX system variable

7.185.1 Drawing prefix

Shows the folder path of the current drawing.

Read-only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Not saved |

7.186 DWGTITLED system variable

7.186.1 Drawing titled

Specifies if the current drawing has been named.

Read-only



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Drawing has not been named On (1): Drawing has been named |

7.187 DXEVAL system variable

7.187.1 Data extraction update mode

Specifies the notification for data extraction tables. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 511 |
| Default value: | 12 |
| Possible options: | 0: No notification 1: Notification on open 2: Notification on save 4: Notification on plot 8: Notification on publish 16: Notification on ETRANSMIT or ARCHIVE 32: Notification on save + automatic update 64: Notification on plot + automatic update 128: Notification on publish + automatic update 256: Notification on ETRANSMIT or ARCHIVE + automatic update |

7.188 DXFTEXTADJUSTALIGNMENT system variable

7.188.1 Dxf text adjust alignment

Specifies whether alignment is adjusted when text is loaded from DXF file.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|---|
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't adjust alignment On (1): Adjust alignment |

7.189 DYNCONSTRAINTMODE system variable

7.189.1 Dynamic Constraint Mode

Specifies the visibility of hidden dimensional constraints when the constrained entity is selected.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display hidden dimensional constraints when the constrained entities are selected. On (1): Display hidden dimensional constraints when the constrained entities are selected. |

7.190 DYNDIGRIP system variable

7.190.1 Show dynamic dimensions

Specifies which dynamic dimensions are shown. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 31 |
| Default value: | 31 |



| | |
|-------------------|--|
| Possible options: | 0: None 1: Resulting length 2: Extended length 4: Absolute angle 8: Relative angle 16: Arc radius |
|-------------------|--|

7.191 DYNDIMAPERTURE system variable

7.191.1 Dynamic dimension aperture

Specifies the radius (in pixels) around cursor. This parameter is used only when DYNMODE flag is 16 'Nearest entity dynamic dimensions'. The nearest entity is looked for between entities which intersect or are inside this radius.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 500 |
| Default value: | 20 |
| Unit | pixels |

7.192 DYNDIMCOLORHOT system variable

7.192.1 Dynamic dimension hot color

Specifies the color of dynamic dimensions when moving grip points.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 142 |



7.193 DYNDIMCOLORHOVER system variable

7.193.1 Dynamic dimension hover color

Specifies the color of dynamic dimensions when hovering over a grip point.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 142 |


7.194 DYNDIMDISTANCE system variable

7.194.1 Dynamic dimension distance

Specifies a factor for the distance between the dynamic dimension line and the grip points being dimensioned (default: 0.0).

BricsCAD only

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.0 to 10.0 |
| Default value: | 1.0 |

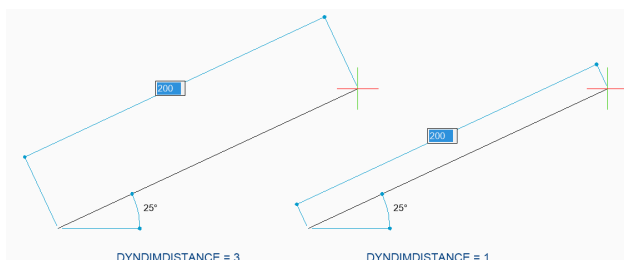

7.195 DYNDIMLINETYPE system variable

7.195.1 Dynamic dimension linetype

Specifies the linetype of dynamic dimensions when moving grip points.

BricsCAD only



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | -1 to 2 |
| Default value: | 0 |
| Possible values: | -1: Current 0: Continuous 1: Dotted 2: Dashed |

7.196 DYNDIVIS system variable

7.196.1 Dynamic dimension visibility

Specifies how many dynamic dimensions are displayed while moving grips.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Only the first dynamic dimension 1: Only the first two dynamic dimensions 2: All dynamic dimensions, as specified by DYNDIGRIP |

7.197 DYNINPUTTRANSPARENCY system variable

7.197.1 Transparency of dynamic input fields

Specifies the transparency of dynamic input fields. A value of 0 sets the fields to be fully transparent, and a value of 100 sets the fields to be fully opaque.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |



| | |
|----------------|----------|
| Range: | 0 to 100 |
| Default value: | 90 |

7.198 DYNMODE system variable

7.198.1 Dynamic input mode

Turns dynamic input features on and off. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | -31 to 31 |
| Default value: | 3 |
| Possible options: | Negative: Switch all off temporarily 0: No dynamic input 1: Dynamic input at pointer (not supported) 2: Editable dynamic dimensions 4: Tracking dynamic dimensions 8: Nearest entity by UCS X/Y axes dynamic dimensions 16: Nearest entity dynamic dimensions |

7.199 DYNPICOORDS system variable

7.199.1 Default mode for dynamic coordinates input

Specifies the default mode in which coordinates are entered during dynamic input.

| | |
|------------------|----------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Relative 1: Absolute |



8. E

8.1 EDGEMODE system variable

8.1.1 Edge mode

Specifies how cutting and boundary edges are checked with the TRIM and EXTEND commands, with or without extension.


| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Use the selected edge without an extension On (1): Extend or trim the selected entity to an imaginary extension of the cutting or boundary edge |

8.2 ELEVATION system variable

8.2.1 Elevation

Specifies the current elevation for new entities relative to the current UCS.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

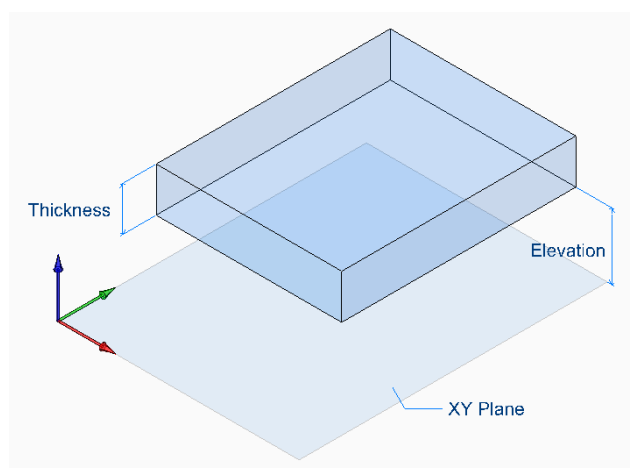



8.3 ELEVATIONATBREAKLINECROSSINGS system variable

8.3.1 Elevation at breakline crossings

Defines elevation at breakline crossings (Minimal, Maximal, Average).

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Minimal 1: Maximal 2: Average |

8.4 ENABLEATTRACTION system variable

8.4.1 Grips attraction

Toggles the magnetism of entity grips.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable grips attraction On (1): Enable grips attraction |

8.5 ENABLEBIMBKUPDATE system variable

8.5.1 Enable sections update in background

Defines whether BIMBKUPDATE is enabled.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Default value: | 0 |

8.6 ENABLEHYPERLINKMENU system variable

8.6.1 Hyperlink menu

Toggles the hyperlink menu On/Off.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable hyperlink menu On (1): Enable hyperlink menu |

8.7 ENABLEHYPERLINKTOOLTIP system variable

8.7.1 Hyperlink tooltip

Toggles the display of the hyperlink tooltip On/Off.

BricsCAD only

| | |
|------------------|--|
| Type: | Preference |
| Saved in: | Off |
| Possible values: | Off (0): Disable hyperlink tooltip On (1): Enable hyperlink tooltip |

8.8 ERRNO system variable

8.8.1 Error number

Reports the error type which occurred in a LISP program.

Read-only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|----------------|-----------|
| Saved in: | Not saved |
| Default value: | 0 |

8.9 EXPERT system variable

8.9.1 Expert

Specifies the display of certain prompts. If prompts are suppressed by EXPERT, the operation proceeds as though you entered y(es) at the suppressed prompt. EXPERT can affect scripts, menu macros, LISP and command functions.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 5 |
| Default value: | 0 |
| Possible values: | 0: Issue all prompts normally 1: Suppress regen and layer off prompts 2: Also suppress block already defined (BLOCK) and file already exists (SAVE and WBLOCK) prompts 3: Also suppress linetype already loaded prompt 4: Also suppress file already exists (UCS and VPORTS Save) prompts 5: Also suppress dimstyle already exists prompt |

8.10 EXPINSALIGN system variable

8.10.1 Explorer Insert Aligned

Align blocks inserted from the Drawing Explorer with selected entities.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't insert blocks aligned On (1): Insert blocks aligned |



8.11 EXPINSANGLE system variable

8.11.1 Explorer Insert Angle

Rotation angle used when inserting blocks from the Drawing Explorer.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |
| Unit | degrees |

8.12 EXPINSFIXANGLE system variable

8.12.1 Explorer Insert Fix Angle

Insert blocks from the Drawing Explorer at a fixed rotation angle.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't insert blocks at fixed angle On (1): Insert blocks at fixed angle |

8.13 EXPINSFIXSCALE system variable

8.13.1 Explorer Insert Fix Scale

Insert blocks from the Drawing Explorer at a fixed scale.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't insert blocks at fixed scale On (1): Insert blocks at fixed scale |
|------------------|---|

8.14 EXPINSSCALE system variable

8.14.1 Explorer Insert Scale

Scale factor used when inserting blocks from the Drawing Explorer.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 1.0 |

8.15 EXPLMODE system variable

8.15.1 Explode mode

Specifies whether EXPLODE applies to nonuniformly scaled (NUS) blocks.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | On |
| Possible values: | Off (0): Don't explode nonuniformly scaled blocks On (1): Explode nonuniformly scaled blocks |

8.16 EXPORT3DPDFWRITER system variable

8.16.1 3D PDF writer

Defines the writer to save 3D PDF files.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 1 |



| | |
|------------------|--|
| Possible values: | 0: Communicator 3D PDF writer 1: Internal 3D PDF writer |
|------------------|--|

8.17 EXPORTACISASSEMBLYWRITER system variable

8.17.1 ASAT/ASAB writer

Defines the writer to save ASAT/ASAB files. Internal ASAT/ASAB writer is always used if Communicator is not installed.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Communicator ASAT/ASAB writer 1: Internal ASAT/ASAB writer |

8.18 EXPORTACISFORMATVERSION system variable

8.18.1 ACIS export format version

Defines the ACIS file version to export.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |



| | |
|-------------------|--|
| Possible options: | 0: Latest available 1: R18 2: R19 3: R20 4: R21 5: R22 6: R23 7: R24 8: R25 9: 2016 10: 2017 11: 2018 12: 2019 13: 2020 14: 2021 |
|-------------------|--|

8.19 EXPORTCATIAV4FORMATVERSION system variable

8.19.1 CATIA V4 export format version

Defines CATIA V4 file version to export.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 6 |
| Default value: | 0 |
| Possible values: | 0: Latest available 1: 4.1.9 2: 4.2.0 3: 4.2.1 4: 4.2.2 5: 4.2.3 6: 4.2.4 |

8.20 EXPORTCATIAV5FORMATVERSION system variable

8.20.1 CATIA V5 export format version

Defines CATIA V5 file version to export.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Registry |
| Range: | 0 to 16 |
| Default value: | 0 |
| Possible values: | 0: Latest available 1: CATIA V5 R16 2: CATIA V5 R17 3: CATIA V5 R18 4: CATIA V5 R19 5: CATIA V5 R20 6: CATIA V5 R21 7: CATIA V5 R22 8: CATIA V5 R23 9: CATIA V5 R24 10: CATIA V5 R25 11: CATIA V5-6 R2016 12: CATIA V5-6 R2017 13: CATIA V5-6 R2018 14: CATIA V5-6 R2019 15: CATIA V5-6 R2020 16: CATIA V5-6 R2021 |

8.21 EXPORTGEOMETRYFLAGS system variable

8.21.1 Export Geometry Flags

Controls geometry representation in IGES and STEP formats. The Split Pcurves at G1 Discontinuities flag is currently supported only when exporting without product structure.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 15 |
| Default value: | 0 |
| Possible values: | 01: Convert Analytical Curves to Splines 02: Convert Analytical Surfaces to Splines 04: Split Pcurves at G1 Discontinuities 08: Split Periodic Faces |



8.22 EXPORTHIDDENPARTS system variable

8.22.1 Hidden parts

Defines hidden parts processing mode.

Entities can be invisible because of:

- The result of the HIDEOBJECTS command.
- Sitting on a hidden layer.
- Owned by an invisible component.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Export and hide if possible: Exports hidden entities. If the target format supports hidden entities, hidden entities in the source document will be hidden also in target document. 1: Do not export: Invisible entities are skipped. |

8.23 EXPORTMODELSPACE system variable

8.23.1 Export model space

Specifies what part of the drawing to export from model space to a DWF, DWFx or PDF file.

| | |
|------------------|---------------------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Display 1: Extents 2: Window |

Note: The EXPORTMODELSPACE, EXPORTPAPERSPACE and EXPORTPAGESETUP system variables currently are dummies for .dwf exports.



8.24 EXPORTPAGESETUP system variable

8.24.1 Export page setup

Specifies if the current page setup is used when exporting to a DWF, DWFx or PDF file.

| | |
|------------------|---------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Default 1: Override |

Note: The EXPORTMODELSpace, EXPORTPAPERSpace and EXPORTPAGESETUP system variables currently are dummies for .dwf exports.

8.25 EXPORTPAPERSPACE system variable

8.25.1 Export paper space

Specifies what part of the drawing to export from paper space to a DWF, DWFx or PDF file.

| | |
|------------------|-------------------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Current layout 1: All layouts |

Note: The EXPORTMODELSpace, EXPORTPAPERSpace and EXPORTPAGESETUP system variables currently are dummies for .dwf exports.

8.26 EXPORTPARASOLIDFORMATVERSION system variable

8.26.1 Parasolid export format version

Defines the Parasolid file version to export.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 22 |
| Default value: | 0 |
| Possible values: | 0: Latest available 1: Parasolid 12 2: Parasolid 13 3: Parasolid 14 4: Parasolid 15 5: Parasolid 16 6: Parasolid 17 7: Parasolid 18 8: Parasolid 19 9: Parasolid 20 10: Parasolid 21 11: Parasolid 22 12: Parasolid 23 13: Parasolid 24 14: Parasolid 25 15: Parasolid 26 16: Parasolid 27 17: Parasolid 28 18: Parasolid 29 19: Parasolid 30 20: Parasolid 31 21: Parasolid 32 22: Parasolid 33 |

8.27 EXPORTPRODUCTSTRUCTURE system variable

8.27.1 Product structure

Defines if Product structure is exported.

The option [1] is valid for Pro (or higher) license level. It works as [0] otherwise.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |



| | |
|------------------|--|
| Default value: | 1 |
| Possible values: | 0: No product structure: Exports a flat structure without components in the target document, whether the BricsCAD® document has a product structure or not. 1: Export product structure: Exports the BricsCAD® product structure data (if existing) to the target document. |

8.28 EXPORTSTEPFORMATVERSION system variable

8.28.1 STEP export format version

Defines the STEP file version to export.

| | |
|------------------|----------------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: AP203 1: AP214 2: AP242 |

8.29 EXPORTXCGMFORMATVERSION system variable

8.29.1 XCGM export format version

Defines the XCGM file version to export.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 15 |
| Default value: | 0 |



| | |
|------------------|---|
| Possible values: | 0: Latest available 1: CGM R2013x 2: CGM R2014 3: CGM R2014x 4: CGM R2015x B1 5: CGM R2015x B5 6: CGM R2015x B5 SP1 7: CGM R2016 1.0 8: CGM R2016 1.1 9: CGM R2017 1.0 10: CGM R2017 1.1 11: CGM R2018 1.0 12: CGM R2018 1.1 13: CGM R2019 1.0 14: CGM R2020 1.0 15: CGM R2021 1.0 |
|------------------|---|

8.30 EXTMAX system variable

8.30.1 Extents maximum

Shows the coordinates of the upper-right point of the drawing extents. It increases as new entities are created outside the existing extents.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |

8.31 EXTMIN system variable

8.31.1 Extents minimum

Shows the coordinates of the lower-left point of the drawing extents.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |



8.32 EXT NAMES system variable

8.32.1 Extend names

Specifies the parameters for the names of named entities (e.g. linetypes and layers) saved in symbol tables.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 1 |
| Possible values: | Off (0): Names up to 31 characters On (1): Names up to 255 characters |

8.33 EXTRUDEINSIDE system variable

Resolve intersection with parent entity.

Determines how to modify the parent entity when it intersects with the extruded/revolved entity when the **Auto** option of the EXTRUDE or REVOLVE command is selected. Parent entities are entities that touch the contour from which the extruded/revolved entity is created.

The EXTRUDEINSIDE system variable is one of the four system variables found under the **Extrude mode** group.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |
| Default value: | 0 - for Workspaces Drafting and Modeling 1 - for Workspaces Mechanical and BIM |
| Possible options: | 0: Do not modify the parent entity. 1: Subtract the created entity from the parent entity. 2: Unite the created entity with the parent entity. |

8.34 EXTRUDEOUTSIDE system variable

Resolve touching to parent entity.



Determines how to modify the parent entity when it touches the extruded/revolved entity when the **Auto** option of the EXTRUDE or REVOLVE command is selected. Parent entities are entities that touch the contour from which the extruded/revolved entity is created.

The EXTRUDEOUTSIDE system variable is one of the four system variables found under the **Extrude mode** group.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |
| Default value: | 0 - for Workspaces Drafting and Modeling 1 - for Workspaces Mechanical and BIM |
| Possible options: | 0: Do not modify the parent entity. 1: Subtract the created entity from the parent entity. 2: Unite the created entity with the parent entity. |



9. F

9.1 FACETRATIO system variable

9.1.1 Faceting aspect ratio

Specifies the aspect ratio of faceting for cylindrical and conic ACIS solids.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Creates an N by 1 mesh for cylindrical and conic ACIS solids 1: Creates an N by M mesh for cylindrical and conic ACIS solids |

9.2 FACETRES system variable

9.2.1 Facet resolution

Specifies the smoothness of shaded, rendered and hidden lines views. For large values there can be significant impact on memory usage and performance.

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0.01 to 10.0 |
| Default value: | 0.5 |

9.3 FBXEXPORTCAMERAS system variable

9.3.1 Fbx Export Cameras

Specifies whether to export the cameras from model space.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|--|
| Default value: | On |
| Possible values: | Off (0): Disable export of cameras On (1): Enable export of cameras |

9.4 FBXEXPORTENTITIES system variable

9.4.1 Fbx Export Entities

Specifies whether to export the entities from model space.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable export of entities On (1): Enable export of entities |

9.5 FBXEXPORTENTITIESSELTYPE system variable

9.5.1 Fbx entities to export

Specifies the type of displayed entities that gets exported.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Visible Entities 1: Selected Entities |



9.6 FBXEXPORTLIGHTS system variable

9.6.1 Fbx Export Lights

Specifies whether to export the lights from model space.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable export of lights On (1): Enable export of lights |

9.7 FBXEXPORTMATERIALS system variable

9.7.1 Fbx Export Materials

Specifies whether to export the materials from model space.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable export of materials On (1): Enable export of materials |

9.8 FBXEXPORTTEXTURES system variable

9.8.1 Fbx Export Textures

Set type for the export of materials.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |



| | |
|------------------|--|
| Default value: | 0 |
| Possible values: | 0: Embed 1: Reference 2: Copy textures to location |

9.9 FBXEXPORTTEXTURESPATH system variable

9.9.1 FBX Export Textures path

Specifies the folder path where textures are copied when exporting a model to FBX file format. This setting is only used when the FBXEXPORTTEXTURES system variable is set to 2.

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

9.10 FEATURECOLORS system variable

9.10.1 Feature colors

Specifies if the solid faces are colored by specified color of related feature.

BricsCAD only

| | |
|-------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | ON |
| Possible options: | On (1): Solid faces are colored by specified color of related feature Off (0): All feature faces are colored with the default 3d solid color. |

9.11 FIELDDISPLAY system variable

9.11.1 Field display

Specifies whether a gray fill is used to display a field.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|--|
| Default value: | On |
| Possible values: | Off (0): No gray background On (1): Gray background |

9.12 FIELDEVAL system variable

9.12.1 Field update mode

Specifies the way fields are updated. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 31 |
| Default value: | 31 |
| Possible options: | 0: Not updated 1: Updated on open 2: Updated on save 4: Updated on plot 8: Updated on use of ETRANSMIT 16: Updated on regeneration |

Note: Date fields are only updated by the UPDATEFIELD command; they are not automatically updated based on the FIELDEVAL system variable value.

9.13 FILEDIA system variable

9.13.1 File dialog

Toggles the display of file dialog boxes. If FILEDIA is Off, you can still get a file dialog if you type a tilde (~) at the command prompt. This procedure also counts for LISP functions and command fields in tool definitions.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't display file dialog boxes On (1): Display file dialog boxes |
|------------------|---|

9.14 FILLETRAD system variable

9.14.1 Fillet radius

The last radius used with the FILLET command.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.5 |

9.15 FILLETWELDINGCOMBINEADJACENT system variable

9.15.1 Combine adjacent fillet welds

Enables combining adjacent fillet weld segments into one fillet welding feature.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't combine adjacent fillet weld segments. On (1): Combine adjacent fillet weld segments. |

9.16 FILLETWELDINGMAXGAPRATIO system variable

9.16.1 Maximal ratio of a gap to a weld size

Sets the default maximal ratio of a gap between welding parts to a fillet weld size.

BricsCAD only

| | |
|-----------|----------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 0.8 |



| | |
|----------------|-----|
| Default value: | 0.4 |
|----------------|-----|

9.17 FILLETWELDINGZSIZE system variable

9.17.1 Default fillet weld Z size

Sets the default Z-size of the symmetric fillet weld.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 50 |
| Default value: | 5 |

9.18 FILLMODE system variable

9.18.1 Fill mode

Specifies whether multilines, traces, solids, hatches (including solid-fill), and wide polylines are filled in. If FILLMODE is off, all filled entities display and print as outlines, this will also reduce the time it takes to display or print a drawing.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | On |
| Possible values: | Off (0): Entities are not filled On (1): Entities are filled |

9.19 FITLINEFITARCMODE system variable

9.19.1 FitLine FitArc mode

The FITLINEFITARCMODE system variable sets the values for the options Use entire drawing, Fit in 3d, and Delete original entities after fitting, that are used by the FITLINE and FITARC commands. The value is stored as a bit code using the sum of the values of all selected options.

| | |
|-------|------|
| Type: | Byte |
|-------|------|



| | |
|------------------|---|
| Saved in: | Registry |
| Range: | 0 to 255 |
| Default value: | 0 |
| Possible values: | 0: None 1: Use entire drawing 2: Fit in 3D 4: Delete original entities after fitting |

9.20 FITTINGRADIUSTYPE system variable

9.20.1 Fitting Radius Type

Defines the default flow fitting radius type.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | (0): Profile Width Ratio (1): Absolute Value |

9.21 FITTINGRADIUSVALUE system variable

9.21.1 Fitting Radius Value

Defines the default flow fitting radius value.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.5 |



9.22 FONTALT system variable

9.22.1 Alternate font

Specifies the font which will be used if a text font cannot be found.

| | |
|----------------|-------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | simplex.shx |

9.23 FONTMAP system variable

9.23.1 Font mapping file

Specifies the font mapping file.

| | |
|----------------|-------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | default.fmp |

9.24 FRAME system variable

9.24.1 Frame

Specifies the visibility of frames for external references, images and underlays. It overrides the individual IMAGEFRAME, DWFFRAME, PDFFRAME, DGNFRAME, and XCLIPFRAME settings.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 0: Hide frames 1: Display and plot frames 2: Display but do not plot frames 3: Use individual settings for different underlays, external references and images |



9.25 FRAMESELECTION system variable

9.25.1 Frame selection

Specifies whether the hidden frame of an image, underlay, clipped xref, or wipeout can be selected.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | Off (0): Hidden frames cannot be selected On (1): Hidden frames can be selected |

9.26 FRONTZ system variable

9.26.1 Front clipping plane offset

Specifies the current viewport's front clipping plane offset from the target plane, expressed in drawing units. Clipping planes are used in the CLIPPING option of the DVIEW command.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

9.27 FULLOPEN system variable

9.27.1 Full open

Indicates the state of the current drawing: partially opened or fully opened.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Possible values: | 0: Drawing is partially open 1: Drawing is fully open |



10. G

10.1 GEARTEETHNUMBER system variable

10.1.1 Maximum number of sprocket teeth

Defines the number of teeth for sprocket parts created with the -BMHARDWARE command. Use this option to insert sprockets with simplified or full geometry.

Uwaga: This number must be greater or equal to the number of teeth of the inserted sprocket to create a sprocket with full geometry. 1000 is enough to insert any sprocket from the library with a full set of teeth.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 1 |

10.2 GENERATEASSOCATTRS system variable

10.2.1 Generate associative attributes

Specifies whether associative attributes are generated for 3D entities.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Workspace |
| Possible values: | Off (0): Do not generate associative attributes for 3D entities On (1): Generate associative attributes for 3D entities |

10.3 GENERATEASSOCVIEWS system variable

10.3.1 Generate associative drawings

Specifies associativity between the 3D model and generated views (VIEWBASE) and calculated drawings (BIMSECTIONUPDATE). As a result dimensions are updated in the associated paperspace viewports and BIM section drawings.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|--|
| Saved in: | Workspace |
| Default value: | Off |
| Possible values: | Off (0): Disable associative dimensions On (1): Enable associative dimensions |

10.4 GEOLATLONGFORMAT system variable

10.4.1 Geographic latitude/longitude format

Specifies the format of geographical latitude and longitude values.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Decimal degrees 1: Degrees/minutes/seconds |

10.5 GEOMARKERVISIBILITY system variable

10.5.1 Geographic marker visibility

Specifies the visibility of the geographic marker.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Geographic marker is not visible On (1): Geographic marker is visible |



10.6 GEOMRELATIONS system variable

10.6.1 Geometric relationship indication

Specified geometric relationships are recognized during dragging 2D entity. And dragged entity is adjusted to satisfy recognized relationship. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible options: | 1: Recognize tangency relation 2: Recognize perpendicularity relation |

10.7 GETSTARTED system variable

10.7.1 Get Started

Specifies whether the Launcher dialog is displayed each time BricsCAD starts up.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't show Launcher dialog On (1): Show Launcher dialog |

10.8 GFANG system variable

10.8.1 Gradient fill angle

Specifies the angle of a gradient fill.

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|-----------|
| Saved in: | Not saved |
| Default value: | 0.0 |

10.9 GFCLR1 system variable

10.9.1 Gradient fill primary color

The first color of a gradient fill.

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | 5 |

10.10 GFCLR2 system variable

10.10.1 Gradient fill secondary color

The second color of a gradient fill.

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | 7 |

10.11 GFCLRLUM system variable

10.11.1 Gradient fill tint level

Specifies the tint intensity in a one-color gradient fill.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 1.0 |



10.12 GFCLRSTATE system variable

10.12.1 Number of colors for a gradient fill

Specifies number of colors (one or two) for a gradient fill.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | 0 |
| Possible values: | Off (0): Two colors On (1): One color |

10.13 GFNAME system variable

10.13.1 Gradient fill name

Specifies the pattern of a gradient fill.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 1 to 9 |
| Default value: | 1 |
| Possible values: | 1: LINEAR 2: CYLINDER 3: INVCYLINDER 4: SPHERICAL 5: HEMISPHERICAL 6: CURVED 7: INVSPHERICAL 8: INVHEMISPHERICAL 9: INVCURVED |

10.14 GFSHIFT system variable

10.14.1 Gradient fill shift

Specifies whether the pattern in a gradient fill is centered or is shifted up and to the left.



| | |
|------------------|--------------------------------------|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | 0 |
| Possible values: | Off (0): Centered On (1): Shifted |

10.15 GLSWAPMODE system variable

10.15.1 GL Swap Mode

Specifies the swap method used when drawing with the GL engine. Depending on the used hardware driver, the visual effect may differ by choosing between these options.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 4 |
| Default value: | 2 |
| Possible values: | 0: Call glCopyPixels to copy back to front, don't call glXSwapBuffers. 1: Call glCopyPixels to copy back to front, then call glXSwapBuffers. 2: Call glXSwapBuffers, don't call glCopyPixels. 3: Call glXSwapBuffers, then call glCopyPixels to copy front to back. 4: Do nothing - for testing purposes only. |

10.16 GRADIENTCOLORBOTTOM system variable

10.16.1 Background gradient color bottom

Specifies the default bottom color for gradient backgrounds and also the default for solid view backgrounds.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |



| | |
|----------------|------------------|
| Default value: | RGB:210,210,210" |
|----------------|------------------|

10.17 GRADIENTCOLORMIDDLE system variable

10.17.1 Background gradient color middle

Specifies the default middle color for gradient backgrounds. This only applies if GRADIENTMODE is set to Three-color gradient.

BricsCAD only

| | |
|----------------|------------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:250,250,250" |

10.18 GRADIENTCOLORTOP system variable

10.18.1 Background gradient color top

Specifies the default top color for gradient backgrounds.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | White |

10.19 GRADIENTMODE system variable

10.19.1 Background gradient mode

Specifies if and how a gradient is to be applied in the default background (this is only used as a default value for the Background dialog).

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |



| | |
|------------------|--|
| Default value: | 0 |
| Possible values: | 0: No gradient background 1: Two-color gradient (top/bottom) 2: Three-color gradient (top/middle/bottom) |

10.20 GRIDAXISCOLOR system variable

10.20.1 Grid axis color

Specifies the color of the grid axis lines.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 254 |

10.21 GRIDDISPLAY system variable

10.21.1 Grid display

Specifies how the grid is displayed. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 15 |
| Default value: | 2 |
| Possible options: | 0: Restrict to LIMITS area 1: Display beyond LIMITS area 2: Adaptive grid display 4: Allow subdivision below grid spacing 8: Follow Dynamic UCS |



10.22 GRIDMAJOR system variable

10.22.1 Grid major

Specifies the frequency of major versus minor gridlines.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 100 |
| Default value: | 5 |

10.23 GRIDMAJORCOLOR system variable

10.23.1 Grid major color

Specifies the color of the major grid lines.

BricsCAD only

| | |
|------------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Possible values: | 251 |

10.24 GRIDMINORCOLOR system variable

10.24.1 Grid minor color

Specifies the color of the minor grid lines.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 250 |



10.25 GRIDMODE system variable

10.25.1 Grid mode

Turns the grid on or off.

| | |
|------------------|--------------------------------------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Grid off On (1): Grid on |

10.26 GRIDSTYLE system variable

10.26.1 Grid style

Specifies whether the grid is displayed with dots or lines. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 7 |
| Default value: | 0 |
| Possible options: | 0: Lined grid 1: Dotted grid in 2D model space 2: Dotted grid in Block Editor 4: Dotted grid in Sheet/Layout |

10.27 GRIDUNIT system variable

10.27.1 Grid unit

Specifies the X and Y grid spacing for the current viewport.

| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Drawing |



| | |
|----------------|---------|
| Default value: | 0.5,0.5 |
|----------------|---------|

10.28 GRIDXYZTINT system variable

10.28.1 Grid XYZ tint

Specifies whether the XYZ tints are to be applied over the color of the grid lines. (XYZ tints are stored in COLORX, COLORY, COLORZ variables). The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 7 |
| Default value: | 1 |
| Possible options: | 1: Apply XYZ tint to grid axis lines 2: Apply XYZ tint to major grid lines 4: Apply XYZ tint to minor grid lines |

10.29 GRIPBLOCK system variable

10.29.1 Grips in blocks

Specifies the display of grips for entities within a selected block. The insertion point of the block is displayed regardless of this setting.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Doesn't display grips of entities within the block On (1): Displays grips of entities within the block |



10.30 GRIPCOLOR system variable

10.30.1 Grip color

Specifies the color of unselected grips (drawn as box outlines). Values between 1 and 255 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 72 |

10.31 GRIPDYNCOLOR system variable

10.31.1 Dynamic grip color

Specifies the color of custom grips for dynamic blocks. Values between 1 and 255 are accepted. (Not yet supported)

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 140 |

10.32 GRIPHOT system variable

10.32.1 Selected grip color

Specifies the color of selected grips (hot grips), which are drawn as filled boxes.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 240 |



10.33 GRIPHOVER system variable

10.33.1 Hover grip color

Specifies the fill color of an unselected grip when the cursor pauses over it. Values between 1 and 255 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 150 |

10.34 GRIPOBJLIMIT system variable

10.34.1 Grip object limit

The display of grips is suppressed, if the number of selected entities exceeds the value of this settings variable. If set to 0, grips are always displayed. Values between 0 and 32767 are accepted.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 32767 |
| Default value: | 100 |

10.35 GRIPS system variable

10.35.1 Grips

Specifies the display of grips on selected entities.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 2 |



| | |
|------------------|--|
| Possible values: | 0: Turn off grips 1: Turn on endpoint grips 2: Turn on endpoint and midpoint grips |
|------------------|--|

10.36 GRIPSIZE system variable

10.36.1 Grip size

Specifies the size of the grip box (in pixels). Values between 1 and 255 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 4 |

10.37 GRIPTIPS system variable

10.37.1 Grip tips

Specifies whether grip tips display when the cursor hovers over grips on custom entities or dynamic blocks that support grip tips. (Not yet supported)

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display grip tips On (1): Display grip tips |

10.38 GSDEVICETYPE2D system variable

10.38.1 2D graphic system device

Specifies the current graphic system device for wireframe output. The GDI+ option is strongly recommended. Additional options are available only for testing purposes.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: GDI+ 1: OpenGL (not recommended, available only for testing) 2: RedOpenGL (not recommended, available only for testing) 3: GDI (not recommended, available only for testing) |

10.39 GSDEVICETYPE3D system variable

10.39.1 3D graphic system device

Set current graphic system device for rendered output for Hidden, Gouraud (with edges) and Flat (with edges) visual styles. Other rendered visual styles (such as modeling, realistic) will always use RedOpenGL device.

BricsCAD only

| | |
|------------------|---------------------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: OpenGL 1: RedOpenGL |



11. H

11.1 HALOGAP system variable

11.1.1 Halo gap

Specifies whether a gap is to be displayed if an entity is hidden by another entity. To be specified as a percent of one drawing unit, independent of the zoom level. HALOGAP applies to 2D views only.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 100 |
| Default value: | 0 |

11.2 HANDLES system variable

11.2.1 Publish Handles

Shows whether object handles can be accessed by applications or not.

Read-only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Handles cannot be accessed by applications On (1): Handles can be accessed by applications |

11.3 HANDSEED system variable

11.3.1 Handle seed

Starting handle for creating new entities.

BricsCAD only

Read-only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|-----------|
| Saved in: | Not saved |
| Default value: | 25 |

11.4 HIDEPRECISION system variable

11.4.1 Hide and shade precision

Specifies the accuracy of hides and shades. If set to 1 (double precision) more memory is needed, which might affect performance.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Double precision off On (1): Double precision on |

11.5 HIDESYSTEMPRINTERS system variable

11.5.1 Hide system printers

Specifies whether system printers are shown.

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |

11.6 HIDE TEXT system variable

11.6.1 Hide text on HIDE

Specifies whether the HIDE command processes text entities.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |



| | |
|------------------|--|
| Default value: | 1 |
| Possible values: | 0: Text is not hidden and does not hide other entities 1: Text is hidden but does hide other entities |

11.7 HIDEXREFSCALES system variable

11.7.1 Hide xref scales

Hides scales that come from external references.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Don't hide xref scales On (1): Hide xref scales |

11.8 HIGHLIGHT system variable

11.8.1 Highlight

Specifies if entities highlight on screen when selected.

Note: Does not affect entities selected with grips.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Entity selection highlighting off On (1): Entity selection highlighting on |

11.9 HIGHLIGHTCOLOR system variable

11.9.1 Selection Highlight Color

Specifies which highlight color to be used when GLSelectionHighlightStyle is set to "Use a different color for highlight".

BricsCAD only



| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 142 |

11.10 HIGHLIGHTEFFECT system variable

11.10.1 Selection Highlight Style

Specifies which highlight method to be used.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Use line stipple for highlight (default). 1: Use a different color for highlight. 2: Use a thickened line for highlight. 3: Use a different color and thickened line for highlight. |

11.11 HORIZONBKG_ENABLE system variable

11.11.1 Horizon background

Specifies whether horizon background should be enabled for perspective views.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable horizon background On (1): Enable horizon background |



11.12 HORIZONBKG_GROUNDHORIZON system variable

11.12.1 Ground horizon

Specifies the color of the ground horizon.

| | |
|----------------|---------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:67,74,80" |

11.13 HORIZONBKG_GROUNDORIGIN system variable

11.13.1 Ground origin

Specifies the color of the ground origin.

| | |
|----------------|-----------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:95,103,112" |

11.14 HORIZONBKG_SKYHIGH system variable

11.14.1 Sky high

Specifies the color of the higher regions of the sky.

| | |
|----------------|------------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:204,229,234" |

11.15 HORIZONBKG_SKYHORIZON system variable

11.15.1 Sky horizon

Specifies the color at the lowest part of the sky at the horizon. This effect can be very subtle. This color is also used as the color of the "sky" when the camera would look below the earth.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|------------------|
| Saved in: | Preference |
| Default value: | RGB:238,248,250" |

11.16 HORIZONBKG_SKYLOW system variable

11.16.1 Sky low

Specifies the color of the lower regions of the sky.

| | |
|----------------|------------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | RGB:238,248,250" |

11.17 HOTKEYASSISTANT system variable

11.17.1 Hotkey Assistant

Specifies whether to display the Hotkey Assistant widget or not.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't show Hotkey Assistant widget On (1): Show Hotkey Assistant widget |

11.18 HPANG system variable

11.18.1 Hatch pattern angle

Stores the hatch pattern angle.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 0.0 |



11.19 HPANNOTATIVE system variable

11.19.1 Hatch pattern annotative

Specifies whether a new hatch pattern is annotative.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Hatch pattern is not annotative On (1): Hatch pattern is annotative |

11.20 HPASSOC system variable

11.20.1 Hatch pattern associativity

Specifies whether new hatch patterns and gradient fills are associative or not. Associative hatches and gradient fills are updated automatically when their boundaries change.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't associate hatch patterns and gradient fills with their boundaries On (1): Associate hatch patterns and gradient fills with their boundaries |

11.21 HPBACKGROUNDCOLOR system variable

11.21.1 Hatch background default color

The background color of a hatch. Enter '' for none.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | . |



11.22 HPBOUND system variable

11.22.1 Hatch pattern boundary

Specifies the entity type (region or polyline) created by BHATCH and BOUNDARY.

| | |
|------------------|--------------------------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Region 1: Polyline |

11.23 HPBOUNDRETAIN system variable

11.23.1 Hatch pattern boundary retain

Specifies whether HATCH/BHATCH commands will create boundary entities.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: do not create boundary entities 1: create boundary entities |

11.24 HPCOLOR system variable

11.24.1 Hatch default color

The foreground color of a hatch. Enter '.' to use the current color, as defined in CECOLOR.

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |



| | |
|----------------|---|
| Default value: | . |
|----------------|---|

11.25 HPDOUBLE system variable

11.25.1 Hatch pattern doubling

Specifies whether user-defined patterns create a single hatch or a cross hatch.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Hatch pattern doubling off On (1): Hatch pattern doubling on |

11.26 HPDRAWORDER system variable

11.26.1 Hatch pattern draw order

Specifies the draw order of hatches and gradient fills. The Draw Order setting from the Hatch and Gradient dialog is saved here.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 4 |
| Default value: | 3 |
| Possible values: | 0: None 1: Send to back 2: Bring to front 3: Send behind boundary 4: Bring in front of boundary |

11.27 HPGAPTOL system variable

11.27.1 Hatch pattern gap tolerance

Specifies a tolerance to be used when entities are not completely closed when generating a boundary for BHATCH or BOUNDARY. The Tolerance setting from the Hatch and Gradient dialog is saved here. The



default value is 0: the tolerance is set by the application, based on the current view size. When zoomed in closely, boundary detection will fail; when zooming out further so the contour 'looks' closed, the boundary will become detected. Values greater than 0 define the maximum gap in drawing units.

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Registry |
| Range: | 0 or greater |
| Default value: | 0.0 |

11.28 HPISLANDDETECTION system variable

11.28.1 Hatch pattern island detection

Specifies islands processing within the hatch boundary.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Nested. Hatches areas within islands. 1: Outer. Hatches areas outside of islands. 2: Ignore. Hatches whole the boundary. |

11.29 HPLAYER system variable

11.29.1 Default layer for new hatches

Stores the default layer for new hatches.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | 0 |



11.30 HPLINETYPE system variable

11.30.1 Hatch pattern linetype

Specifies the display of non-continuous linetypes for hatch patterns.

When turned off, lines in the hatch pattern display as continuous, even if a non-continuous linetype is applied to the hatch entity. When turned on, lines in the hatch pattern display with the linetype that's applied to the hatch entity. This is not recommended because it can impact performance. Instead, you can choose a hatch pattern that is predefined with a non-continuous linetype.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | Off (0): Don't apply non-continuous linetypes to hatch entities On (1): Apply non-continuous linetypes to hatch entities |

11.31 HPMAXAREAS system variable

11.31.1 Fill mode for sparse hatches

Specifies how sparse hatches are filled.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Sparse hatches are left blank 1: Sparse hatches are changed to solid fills |

11.32 HPMAXCONTOURPOINTS system variable

11.32.1 Maximum number of points on a hatch contour

Specifies the maximum number of points on a contour (outline) that a hatch entity can contain and still be rendered. Hatches do not render if the number of points exceeds the specified value. Values between 0 and 10000000 are accepted. The default value of this variable is 100000. Setting to 0 disables the check, i.e. variable is not used.



BricsCAD only

| | |
|----------------|---------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 10000000 |
| Default value: | 100000 |

11.33 HPNAME system variable

11.33.1 Hatch pattern name

Stores the default hatch pattern name.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

11.34 HPOBJWARNING system variable

11.34.1 Hatch pattern object warning

Specifies how many hatch boundary entities can be selected before a warning message appears.

| | |
|----------------|----------------|
| Type: | Long |
| Saved in: | Registry |
| Range: | 1 to 100000000 |
| Default value: | 10000 |

11.35 HPORIGIN system variable

11.35.1 Hatch pattern origin

Stores the origin point for new hatches, relative to the current UCS.

| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Drawing |



| | |
|----------------|-----|
| Default value: | 0,0 |
|----------------|-----|

11.36 HPSCALE system variable

11.36.1 Hatch pattern scale

Stores the hatch pattern scale factor.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 1.0 |

11.37 HPSEPARATE system variable

11.37.1 Hatch pattern separate

Specifies whether the HATCH command creates a single hatch pattern object or separate entities when several hatch boundaries are selected.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | Off (0): Don't create separate hatches On (1): Create separate hatches |

11.38 HPSPACE system variable

11.38.1 Hatch pattern spacing

Specifies the hatch pattern line spacing for user-defined hatch patterns.

| | |
|----------------|-----------|
| Type: | Real |
| Saved in: | Not saved |
| Default value: | 1.0 |



11.39 HPTRANSPARENCY system variable

11.39.1 Default transparency for new hatches

Specifies the default transparency level for new hatches.

| | |
|------------------|--|
| Type: | String |
| Saved in: | Drawing |
| Default value: | . |
| Possible values: | .: Use current ByLayer: Apply the layer's transparency ByBlock: Apply the block's transparency 0: Apply no transparency (fully opaque) 0-90: Apply transparency percentage from least (1) to most (90) transparent |

11.40 HYPERLINKBASE system variable

11.40.1 Hyperlink base

Specifies the path for relative hyperlinks in the drawing.

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Drawing |



12. I

12.1 IFCCREATEUNIQUEGUID system variable

12.1.1 Export with unique guids

Defines whether a unique guid for nested elements should be generated.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 1: Inside classified blocks 2: Inside classified xrefs |

12.2 IFCEXPLODEEXTERNALREFERENCES system variable

12.2.1 Explode external references in IFC spatial structure

Explode external references in IFC spatial structure.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.3 IFCEXPORBASEQUANTITIES system variable

12.3.1 Export base quantities

Export derived base quantities from BIM entities.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|----------------|---|
| Default value: | 0 |
|----------------|---|

12.4 IFCEXPORTELEMENTSONOFFANDFROZENLAYER system variable

12.4.1 Export elements on OFF and FROZEN layers

Export elements on OFF and FROZEN layers.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |

12.5 IFCEXPORTEMAPPINGPATH system variable

12.5.1 Export mapping file path

Export mapping file path.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | " " |

12.6 IFCEXPORTEMULTIPLYELEMENTSASAGGREGATED system variable

12.6.1 Export multi-ply elements as aggregated elements

Export multi-ply elements as aggregated elements.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |



12.7 IFCEXPORTPROFILECENTEROFGRAVITY system variable

12.7.1 Export profile center of gravity

Only for IFC2x3. Exporting the center of gravity may cause a wrong positioning of the linear solids in certain IFC viewers. The center of gravity is never exported to IFC4 or higher.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.8 IFCEXPORTSWEPTSOLIDSASBREP system variable

12.8.1 Always export swept solids as BRep

All extrusions, revolutions, swept 3D solids with clippings and subtractions will be exported using a boundary representation.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.9 IFCEXPORTTESSELLATION system variable

12.9.1 Level of tessellation

Controls the level of tessellation of exported geometry. When the **Current** faceting option is chosen, no regeneration is required, the faceting as set by FacetRes or Modeler Properties is used. Choosing the **Low**, **Medium**, or **High** options causes corresponding regeneration of facets, which takes longer.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |



| | |
|------------------|--|
| Default value: | 0 |
| Possible values: | 0: Current 1: Low 2: Medium 3: High |

12.10 IFCEXPORTVERIFYMODEL system variable

12.10.1 Apply IFC model verification

Check that IFC model complies with its schema rules. The problems will be reported in export log next to ifc file. Evaluation takes extra time and can slow down export of big IFC files.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.11 IFCIMPORTBIMDATA system variable

12.11.1 Import BIM Data

Import BIM data.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |

12.12 IFCIMPORTBREPGEOMETRYASMESHES system variable

12.12.1 Import BREP geometry as meshes

Import BREP geometry as meshes.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Default value: | 0 |

12.13 IFCIMPORTMAPPINGPATH system variable

12.13.1 Import mapping file path

Import mapping file path.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | " " |

12.14 IFCIMPORTMODELORIGIN system variable

12.14.1 Import model position

Defines how to position the imported IFC model in the world coordinate system (WCS).

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: WCS matches IFC Global Coordinate system 1: WCS matches IFC Project Location 2: WCS matches IFC Site Location |

12.15 IFCIMPORTPARAMETRICCOMPONENTS system variable

12.15.1 Import Parametric Components

Import windows and doors as parametric components.

BricsCAD only



| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.16 IFCIMPORTPROJECTSTRUCTUREASXREFS system variable

12.16.1 Import IFC project structure as xrefs

Import IFC project structure as xrefs.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |

Uwaga: When IFCIMPORTPROJECTSTRUCTUREASXREFS system variable is ON (1), an IFC file cannot be opened with drag and drop in a saved drawing, but the IMPORT command should be used. A warning message is displayed.

12.17 IFCIMPORTSPACES system variable

12.17.1 Import Spaces

Import spaces.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |



12.18 IFCIMPORTUSESUBDMESH system variable

12.18.1 Import IFC meshes as subdivision meshes

If the value is off, the application will use Polyface meshes to import meshes from IFC. Polyface mesh has a limitation of 32767 faces or vertices, while subdivision mesh has no limitation.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.19 IFCMATCHIMPORTEDPROFILESGEOMETRICALLY system variable

12.19.1 Import: use profiles from databases with corresponding geometry

During import, profiles will consecutively be compared with the project and central database based on their geometry. In case of a match, the parameters defined in the project/central database (profile name, size and standard) will be used instead of the imported parameters.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |

12.20 IFCTESSELATEBSPLINECURVESANDSURFACES system variable

12.20.1 Tessellate complex curves and surfaces

Tessellate BSpline curves and surfaces in IFC4 and IFC4.1 (BSpline curves are not supported by some software products in IFC import).

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |



12.21 IMAGECACHEFOLDER system variable

12.21.1 Image disk cache folder

Specifies the folder where temporary image cache files are stored.

BricsCAD only

| | |
|----------------|-------------------------------------|
| Type: | String Standard |
| Saved in: | Preference |
| Default value: | {User}AppData/Local/Temp/ImageCache |

12.22 IMAGECACHEMAXMEMORY system variable

12.22.1 Maximum used memory

Maximum size of in-memory image cache, in MiB (mebibyte).

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 160 |

12.23 IMAGEDISKCACHE system variable

12.23.1 Image disk cache

Enable image disk cache.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable image disk cache On (1): Enable image disk cache |



12.24 IMAGEFRAME system variable

12.24.1 Image frame

Specifies the visibility of image frames.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Hide image frames 1: Display and plot image frames 2: Display but do not plot image frames |

12.25 IMAGEHLT system variable

12.25.1 Image highlight

Specifies whether the entire raster image highlights or only the raster image frame when selected.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't highlight entire raster image On (1): Highlight entire raster image |

12.26 IMAGENOTIFY system variable

12.26.1 Image notify

Enables/disables the notification about missing raster images when opening the parent drawing.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|--|
| Default value: | Off |
| Possible values: | Off (0): Disable image notification On (1): Enable image notification |

12.27 IMPORTACISWITHBRICSCAD system variable

12.27.1 Import ACIS using built-in importer

Defines importing ACIS formats using embedded routines even if Communicator is installed.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.28 IMPORTCATIAV5REPRESENTATION system variable

12.28.1 Import representation

Defines which data representation Communicator should import. Preview graphics is only imported and shown if CommunicatorBackgroundMode is on.

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible options: | 0: Graphics 1: Geometry 2: Geometry with preview graphics |

12.29 IMPORTCATIAV5EDGEATTRIBUTES system variable

12.29.1 Import edge attributes mode

Defines set of edges whose attributes (such as edge color) to read during import.



BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible options: | 0: None 1: Edges that are parts of wire entities 2: Edges that are owners of part PMI 3: All edges |

12.30 IMPORTCATIAV5SEARCHPATHSPREFERENCE system variable

12.30.1 Search paths preference

Defines priority order of search paths.

Uwaga: This option is taken into account only when import in background is enabled (CommunicatorBackgroundMode system variable is ON).

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 3 |
| Default value: | 1 |
| Possible options: | 1: Sub-folders first 2: Root folder only 3: Root folder first |

12.31 IMPORTCREOCONFIGURATION system variable

12.31.1 Import Creo configuration

Specifies the name of the Creo configuration that should be imported. If no configuration name is specified, then the part's default configuration will be imported.

BricsCAD only



| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.32 IMPORTCREOALTERNATESEARCHPATHS system variable

12.32.1 Alternate search paths

Defines the list of alternate file system paths to search when importing.

Uwaga: Paths must be absolute (fully qualified) and separated with a semicolon.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.33 IMPORTIGESSTITCH system variable

12.33.1 Perform stitching

Enables automatic DMSTITCH operation on imported IGES model. If turned on, it supersedes IMPORTSTITCH setting on IGES models.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |

12.34 IMPORTINVENTORSEARCHPATHSPREFERENCE system variable

12.34.1 Search paths preference

Defines priority order of search paths.

Uwaga: This option is taken into account only when import in background is enabled (CommunicatorBackgroundMode system variable is ON).

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|-------------------|---|
| Saved in: | Registry |
| Range: | 1 to 3 |
| Default value: | 1 |
| Possible options: | 1: Sub-folders first 2: Root folder only 3: Root folder first |

12.35 IMPORTNXCONFIGURATION system variable

12.35.1 Import NX configuration

Specifies the name of the NX configuration that should be imported. If no configuration name is specified, then the part's default configuration will be imported.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.36 IMPORTNXSEARCHPATHSPREFERENCE system variable

12.36.1 Search paths preference

Defines priority order of search paths.

Uwaga: This option is taken into account only when import in background is enabled (CommunicatorBackgroundMode system variable is ON).

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 3 |
| Default value: | 1 |
| Possible options: | 1: Sub-folders first 2: Root folder only 3: Root folder first |



12.37 IMPORTJTREPRESENTATION system variable

12.37.1 Import representation

Defines which data representation Communicator should import. This option is only taken into account when import in background is enabled.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Graphics 1: Geometry 2: Geometry with preview graphics |

12.38 IMPORTCOLORS system variable

12.38.1 Translate colors

Defines color conversion on import.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: To RGB: All entity colors will be converted to RGB, regardless of the current palette. 1: To RGB if no matching palette index: If the entity color is found in the palette, the entity gets an index color. Otherwise, it is given a true color. 2: To nearest palette index: For any true color of the imported entity, the nearest match is searched in the palette and this index color is assigned to the entity. |

12.39 IMPORTCUIFILEEXISTS system variable

12.39.1 Import cui file exists

Specifies what to do when a CUI file exists already while importing a MNU or CUIX file.



BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 0 to 2 |
| Possible values: | 0: Prompt 1: Overwrite 2: Rename |

12.40 IMPORTHIDDENPARTS system variable

12.40.1 Hidden parts

Defines the hidden parts processing mode.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Import and hide: All entities are imported; invisible entities are hidden. Note that currently there are no user tools to make these hidden entities visible again. 1: Import and set visible: All entities are imported and visible, regardless of the visibility in the source file. 2: Do not import: Hidden entities in the source file are not imported. |

12.41 IMPORTIGESSIMPLIFY system variable

12.41.1 Perform simplification

Enables automatic DMSIMPLIFY operation on imported IGES model. If turned on, it supersedes the ImportSimplify setting on IGES models.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|----------------|---|
| Default value: | 1 |
|----------------|---|

12.42 IMPORTINVENTORALTERNATESEARCHPATHS system variable

12.42.1 Alternate search paths

Defines the list of alternate file system paths to search for missing assembly references when importing.

Uwaga: Paths must be absolute (fully qualified) and separated with semicolon.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.43 IMPORTNXALTERNATESEARCHPATHS system variable

12.43.1 Alternate search paths

Defines the list of alternate file system paths to search when importing.

Uwaga: Paths must be absolute (fully qualified) and separated with semicolon.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.44 IMPORTPMI system variable

12.44.1 Product and manufacturing information

Enables importing product and manufacturing information. Currently, such information is imported as exploded data (lines, text, ...) instead of compound entities (e.g. annotations).

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |



12.45 IMPORTPRODUCTSTRUCTURE system variable

12.45.1 Product structure

Defines the way Product structure is represented in the imported model. The option [2] performs automatic BMMECH operation after import and is valid for Pro or higher license level. Otherwise, it works as [1]

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | <p>0: None: Creates a flat structure without blocks in the model space of the target database, regardless of whether the imported data have an assembly structure or not.</p> <p>1: As blocks: The imported data have an assembly structure, which will be converted into a hierarchy of plain blocks; so the structure will be preserved, while the assembly metadata are lost. If the imported data is composed of entities only, they are placed in the modelspace of the target database.</p> <p>2: As mechanical components: In this mode, data will be translated to BricsCAD® assembly data, the structure and its properties (physical materials – BLMATERIALS command). If the imported file has no assembly data, a mechanical component will nevertheless be created in the BricsCAD® target document root.</p> |

12.46 IMPORTREPAIR system variable

12.46.1 Repair model on import

The DMAUDITALL command is executed when importing a model. 3D geometry is analyzed and problems are fixed automatically, in order to improve the quality of the imported geometry. Geometry modeled in CAD systems which use a kernel different from ACIS, often needs to be healed because of possible flaws.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): The DMAUDITALL command is not executed when importing a model On (1): The DMAUDITALL command is executed when importing a model |
|------------------|---|

12.47 IMPORTSIMPLIFY system variable

12.47.1 Perform simplification

Enables automatic DMSIMPLIFY operation on imported model:

- Convert imported splines into canonical surfaces.
- Simplify topology (remove imprinted edges) if possible.

Uwaga: Also check the IMPORTIGESSIMPLIFY setting, which can set an override for the IGES file format.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |

12.48 IMPORTSOLIDEDGEALTERNATESEARCHPATHS system variable

12.48.1 Alternate search paths

Defines the list of alternate file system paths to search when importing.

Uwaga: Paths must be absolute (fully qualified) and separated with semicolon.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.49 IMPORTSOLIDEDGESEARCHPATHSPREFERENCE system variable

12.49.1 Search paths preference

Defines priority order of search paths.

Uwaga: This option is taken into account only when import in background is enabled (CommunicatorBackgroundMode system variable is ON).

BricsCAD only



| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 3 |
| Default value: | 1 |
| Possible options: | 1: Sub-folders first 2: Root folder only 3: Root folder first |

12.50 IMPORTSOLIDWORKSALTERNATESEARCHPATHS system variable

12.50.1 Alternate search paths

Defines the list of alternate file system paths to search when importing.

Uwaga: Paths must be absolute (fully qualified) and separated with a semicolon.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.51 IMPORTSOLIDWORKSCONFIGURATION system variable

12.51.1 Import SolidWorks configuration

Specifies the name of the SolidWorks configuration that should be imported. If no configuration name is specified, then the part's default configuration will be imported.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

12.52 IMPORTSOLIDWORKSREPRESENTATION system variable

12.52.1 Import representation

Defines which data representation Communicator should import. This option is only taken into account when import in background is enabled.



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Graphics 1: Geometry 2: Geometry with preview graphics |

12.53 IMPORTSOLIDWORKSROTATEYZ system variable

12.53.1 Map SolidWorks Y to current Z axis

Enables conversion of SolidWorks coordinate system to current coordinate system.

BricsCAD only

| | |
|------------------|-------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0) On (1) |

12.54 IMPORTSOLIDWORKSSEARCHPATHSPREFERENCE system variable

12.54.1 Search paths preference

Defines priority order of search paths.

Uwaga: This option is taken into account only when import in background is enabled (CommunicatorBackgroundMode system variable is ON).

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 3 |



| | |
|-------------------|---|
| Default value: | 1 |
| Possible options: | 1: Sub-folders first 2: Root folder only 3: Root folder first |

12.55 IMPORTSTEPROTATEYZ system variable

12.55.1 Map Y to current Z axis

Enables conversion of STEP coordinate system to current coordinate system.

BricsCAD only

| | |
|------------------|-------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0) On (1) |

12.56 IMPORTSTITCH system variable

12.56.1 Perform stitching

Enables automatic DMSTITCH operation on imported model.

In some cases, imported geometry represents solid geometry as a set of separate surfaces. Use the DMSTITCH command to work with solid operations on the imported geometry . If IMPORTSTITCH is set to ON, the DMSTITCH command is executed automatically when the geometry is imported.

Uwaga:

- Stitch operations are time-consuming when importing large files.
- Check the IMPORTIGESSTITCH setting, which can set an override for the IGES file format.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |



12.57 INCLUDEPLOTSTAMP system variable

12.57.1 Include Plot Stamp

Specifies whether to include the plot stamp when printing.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't include Plot Stamp On (1): Include Plot Stamp |

12.58 INDEXCTL system variable

12.58.1 Index control

Specifies whether layer and/or spatial indexes are created and saved. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible options: | 0: No indexes 1: Layer index 2: Spatial index |

12.59 INETLOCATION system variable

12.59.1 Internet location

Default website for the BROWSER command.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |



| | |
|----------------|--------------------------|
| Default value: | "http://www.bricsys.com" |
|----------------|--------------------------|

12.60 INSBASE system variable

12.60.1 Insertion base point

Stores the drawing's insertion point when inserted into other drawings. INSBASE is set by the BASE command and expressed as a UCS coordinate for the current space.

| | |
|----------------|----------|
| Type: | 3D point |
| Saved in: | Drawing |
| Default value: | 0,0,0 |

12.61 INSMODEAUTO system variable

12.61.1 Insertion mode Auto

During insertion with the INSERT command, insertion mode is determined automatically.

BricsCAD only

| | |
|-------------------|--|
| Type: | Boolean |
| Saved in: | Workspace |
| Default value: | 0 |
| Possible options: | 0: Insertion mode is not determined automatically 1: Insertion mode is determined automatically |

12.62 INSNAME system variable

12.62.1 Insertion name

Stores the default block name for the INSERT command.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | |



12.63 INSUNITS system variable

12.63.1 Insertion units

Specifies a drawing-units value for automatic scaling when inserting or attaching blocks, images, or xrefs. When both INSUNITS and PROPUNITS are on, length, area, volume and/or inertia properties will be formatted with their unit.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 24 |
| Default value: | 1 |
| Possible values: | 0: Unspecified (No units) 1: Inches 2: Feet 3: Miles 4: Millimeters 5: Centimeters 6: Meters 7: Kilometers 8: Microinches 9: Mils 10: Yards 11: Ångströms 12: Nanometers 13: Microns 14: Decimeters 15: Decameters 16: Hectometers 17: Gigameters 18: Astronomical Units 19: Light-years 20: Parsecs 21: US Survey Feet 22: US Survey Inch 23: US Survey Yard 24: US Survey Mile |



12.64 INSUNITSDEFSOURCE system variable

12.64.1 Insertion units default source

Specifies the source content units value. If INSUNITS in the source drawing is Unspecified, INSUNITSDEFSOURCE is used instead.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 24 |
| Default value: | 0 |
| Possible values: | 0: Unspecified (No units) 1: Inches 2: Feet 3: Miles 4: Millimeters 5: Centimeters 6: Meters 7: Kilometers 8: Microinches 9: Mils 10: Yards 11: Ångströms 12: Nanometers 13: Microns 14: Decimeters 15: Decameters 16: Hectometers 17: Gigameters 18: Astronomical Units 19: Light-years 20: Parsecs 21: US Survey Feet 22: US Survey Inch 23: US Survey Yard 24: US Survey Mile |

12.65 INSUNITSDEFTARGET system variable

12.65.1 Insertion units default target

Specifies the target drawing units value if INSUNITS is zero. Values between 0 and 24 are accepted.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 24 |
| Default value: | 0 |
| Possible values: | 0: Unspecified (No units) 1: Inches 2: Feet 3: Miles 4: Millimeters 5: Centimeters 6: Meters 7: Kilometers 8: Microinches 9: Mils 10: Yards 11: Ångströms 12: Nanometers 13: Microns 14: Decimeters 15: Decameters 16: Hectometers 17: Gigameters 18: Astronomical Units 19: Light-years 20: Parsecs 21: US Survey Feet 22: US Survey Inch 23: US Survey Yard 24: US Survey Mile |

12.66 INSUNITSSCALING system variable

12.66.1 Insertion units scaling

Specifies how INSUNITS scaling is applied when inserting, importing and pasting data.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|------------------|---|
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 1: Enable INSUNITS scaling. When inserting or attaching Xrefs, Blocks or images the inserted content is scaled with respect to the value of INSUNITS in the target and source drawing. If INSUNITS in the source drawing is Unspecified, INSUNITSDEFSOURCE is used instead. If INSUNITS in the target drawing is Unspecified, INSUNITSDEFTARGET is used instead. 2: Use paper size unit instead of INSUNITS for insertions in paper space. |

12.67 INTERFERECOLOR system variable

12.67.1 Interference color

Specifies the color of interference entities.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | ByLayer |

12.68 INTERFERELAYER system variable

12.68.1 Interference layer

Specifies the layer of interference entities.

BricsCAD only

| | |
|----------------|-----------------|
| Type: | String |
| Saved in: | Registry |
| Range: | |
| Default value: | "Interferences" |

12.69 INTERFERENCELEVEL system variable

12.69.1 Interference Check Level

Controls the degree to which interferences between copied details and between details and the rest of the model are checked.



BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: No interference checking 1: Check overlap of detail volumes 2: Full interference checking without considering background spatial elements 3: Full interference checking |

12.70 INTERFEREOBJVS system variable

12.70.1 Interference object visual style

Specifies the interference object visual style.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | |

12.71 INTERFEREVPVS system variable

12.71.1 Interference viewport visual style

Specifies the interference checking visual style for the viewport.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | |



12.72 INTERIORELEVATIONMINLENGTH system variable

12.72.1 Interior Elevation Minimum Length

Minimum length of a wall for an Interior Elevation to be generated.

BricsCAD only

| | |
|----------------|--|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 20 for MEASUREMENT=0 (inches) 500 for MEASUREMENT=1 (millimeters) |

12.73 INTERIORELEVATIONOFFSET system variable

12.73.1 Interior Elevation Offset Distance

Interior Elevation volume box offset distance from wall surfaces.

BricsCAD only

| | |
|----------------|--|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 2 for MEASUREMENT=0 (inches) 50 for MEASUREMENT=1 (millimeters) |

12.74 INTERSECTEDENTITIES system variable

Resolve intersection.

Determines how to modify entities that intersect with the extruded/revolved entity when the **Auto** option of the EXTRUDE or REVOLVE command is selected.

The INTERSECTEDENTITIES system variable is one of the four system variables found under the **Extrude mode** group.

BricsCAD only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |



| | |
|-------------------|--|
| Default value: | 0 - for Workspaces Drafting and Modeling 1 - for Workspaces Mechanical and BIM |
| Possible options: | 0: Do not modify the parent entity. 1: Subtract the created entity from the parent entity. 2: Unite the created entity with the parent entity. |

12.75 INTERSECTIONCOLOR system variable

12.75.1 Intersection color

Specifies the polyline color at the intersection of 3D surfaces in 2D Wireframe views if INTERSECTIONDISPLAY is on. (Not supported yet)

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 257 |
| Default value: | 257 |
| Possible values: | 0: ByBlock 1 - 255: index 256: ByLayer 257: ByEntity |

12.76 INTERSECTIONDISPLAY system variable

12.76.1 Intersection display

Toggles the display of polylines at the intersection of 3D surfaces in 2D Wireframe views. (Not supported yet)

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display intersection polylines On (1): Display intersection polylines |



12.77 ISAVEBAK system variable

12.77.1 Incremental save backup

Specifies the creation of a backup file (BAK). Improves the speed of incremental saves if switched off, especially for large drawings.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't create BAK file On (1): Create BAK file |

12.78 ISAVEPERCENT system variable

12.78.1 Save percent

Specifies the amount of wasted space tolerated in a drawing file expressed as a percentage of the total file size. If the estimate of wasted space exceeds the value set by ISAVEPERCENT, the next save will be a full save, which resets the wasted space estimate to 0. If set to zero, each save is a full save. Values between 0 and 100 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 100 |
| Default value: | 50 |

12.79 ISOLINES system variable


12.79.1 Isolines

Specifies the number of isolines (contour lines) on curved surfaces. To view changes on existing entities, perform a REGEN.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |



| | |
|----------------|-----------|
| Range: | 0 to 2047 |
| Default value: | 4 |

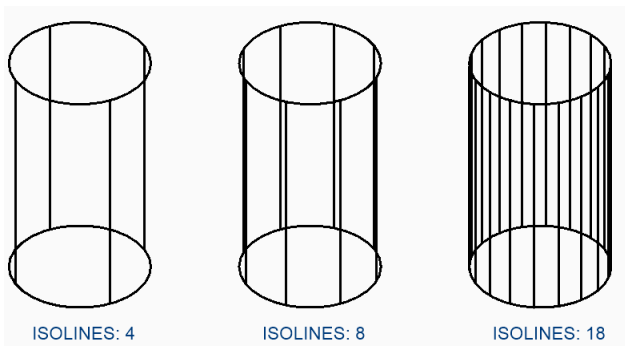



13. J



14. K



15. L

15.1 LASTANGLE system variable

15.1.1 Last angle

Specifies the end angle of the last arc drawn.

Read-only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

15.2 LASTPOINT system variable

15.2.1 Last point

Specifies the coordinates of the last point entered. This is the value which is used when entering the '@' symbol at the Command line. Expressed as a UCS coordinate for the current space.

| | |
|-----------|-----------|
| Type: | 3D point |
| Saved in: | Not saved |

15.3 LASTPROMPT system variable

15.3.1 Last prompt

Shows the last string echoed to the Command line.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

15.4 LATITUDE system variable

15.4.1 Latitude

Specifies the latitude of the drawing in decimal format. Positive values represent northern latitudes and negative values represent southern latitudes.

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|---------------|
| Saved in: | Drawing |
| Range: | -90.0 to 90.0 |
| Default value: | 37.795 |

15.5 LAYERFILTEREXCESS system variable

15.5.1 Layer Filter Excess

Specifies the maximum number of layer filters allowed in a drawing before suggesting some be removed. You can create any number of layer filters. However, if the number of layer filters exceeds this value and exceeds the number of layers, a message dialog displays the next time you open the drawing. It recommends deleting all layer filters to improve performance. When set to 0, the message is never displayed.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 250 |

15.6 LAYERPMODE system variable

15.6.1 Layer previous mode

Specifies tracking of changes made to layer settings.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | On |
| Possible values: | Off (0): Doesn't allow tracking of layer settings modification and enables LAYERP command On (1): Allows tracking of layer settings modification and enables LAYERP command |



15.7 LAYLOCKFADECTL system variable

15.7.1 Locked layer fade control

Specifies the fading level for entities on locked layers to contrast them with entities on unlocked layers and reduces the visual complexity of a drawing. Entities on locked layers are still visible for reference and for object snapping. Non-positive values disable fading.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -90 to 90 |
| Default value: | 50 |

15.8 LAYOUTREGENCTL system variable

15.8.1 Layout regeneration control

Specifies how the display of the Model tab and layout tabs is updated. If performance is poor in general or when switching between tabs, setting LAYOUTREGENCTL to 1 or 0 might improve performance.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Always regenerate 1: Suppress regeneration for Model tab and last layout made current 2: Regenerate first time only |

15.9 LAYOUTTAB system variable

15.9.1 Layout and model tabs

Specifies the display of Layout and Model tabs.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Don't show layout and model tabs On (1): Show layout and model tabs |

15.10 LEGACYCODESEARCH system variable

15.10.1 Legacy code search mode

Specifies how BricsCAD searches for executable code in drawing folders.

Read-only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Disable unsafe searching for executable code On (1): Enable unsafe searching for executable code |

15.11 LENGTHSAMPLINGINTERVAL system variable

15.11.1 Sampling interval for straight segments

Defines the length of the sampling interval which is used for the sampling of straight segments.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.00 |

15.12 LENGTHUNITS system variable

15.12.1 Length units

Specifies a list of units used for displaying lengths when the length bit of PROPUNITS is on. If empty, all lengths are displayed in the current drawing unit.

BricsCAD only



| | |
|----------------|--------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | "in ft mi µm mm cm m km" |

15.13 LENSLENGTH system variable

15.13.1 Lens length

Specifies the current viewport's lens length (in millimeters) used in perspective viewing.

Read-only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | |
| Default value: | 50.0 |
| Unit | mm |

15.14 LEVELOFDETAIL system variable

15.14.1 Length units

Controls the level of detail.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Low. Composition plies do not display. 2: High. Composition plies display. |



15.15 LICFLAGS system variable

15.15.1 Licensed components

Specifies whether certain components are licensed or not. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

Read-only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 7 |
| Default value: | 0 |
| Possible options: | 0: No components licensed 1: VBA is licensed 2: Acis editing is licensed 4: Pro |

15.16 LIGHTGLYPHCOLOR system variable

15.16.1 Color for light glyph

Specifies the color for light glyphs. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 30 |

15.17 LIGHTGLYPHDISPLAY system variable

15.17.1 Light glyph display

Specifies the display of light glyphs. A light glyph is a graphic symbol that represents point, spot, and web lights.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't display light glyphs On (1): Display light glyphs |

15.18 LIGHTINGUNITS system variable

15.18.1 Lighting units

Specifies if generic or photometric lighting is used, and sets the lighting units type.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Generic lighting - this obsolete option can no longer be set but may exist in older drawings 1: Photometric lighting using American units (foot-candles) 2: Photometric lighting using International units (lux) |

15.19 LIGHTWEBGLYPHCOLOR system variable

15.19.1 Color for web light glyph

Specifies the color for web light glyph. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 1 |



15.20 LIMCHECK system variable

15.20.1 Limits check

Specifies whether entities can be created outside the drawing limits or not.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Can create entities outside limits On (1): Cannot create entities outside limits |

15.21 LIMMAX system variable

15.21.1 Limits maximum

Specifies the upper-right corner of the drawing limits, expressed in world coordinates.

| | |
|----------------|----------|
| Type: | 2D point |
| Saved in: | Drawing |
| Default value: | 12,9 |

15.22 LIMMIN system variable

15.22.1 Limits minimum

Specifies the lower-left corner of the drawing limits, expressed in world coordinates.

| | |
|----------------|----------|
| Type: | 2D point |
| Saved in: | Drawing |
| Default value: | 0,0 |



15.23 LINEARBRIGHTNESS system variable

15.23.1 Linear brightness

Specifies a scaling factor for the intensity of lights. A value between -10 and 10 is accepted. The default value of 0 results in no scaling. Smaller values decrease light intensity and bigger values increase light intensity. This setting can be specified per viewport.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -10 to 10 |
| Default value: | 0 |

15.24 LINEARCONTRAST system variable

15.24.1 Linear contrast

Specifies ambient light intensity. A value between -10 and 10 is accepted. A value of -10 results in maximum ambient light. A value of 10 results in no ambient light. This setting only has effect on materials that have a non-black ambient color. This setting can be specified per viewport.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -10 to 10 |
| Default value: | 0 |

15.25 LISPINIT system variable

15.25.1 LISP init

Specifies whether LISP variables and functions are preserved between drawings.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |



| | |
|------------------|--|
| Default value: | 1 |
| Possible values: | 0: Preserved from drawing to drawing 1: Valid in current drawing only |

15.26 LOADMECHANICAL2D system variable

15.26.1 Mechanical 2D enablers

Specifies whether or not demand loading of Mechanical 2D enablers is permitted.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Loading of Mechanical 2D enablers is not permitted On (1): Loading of Mechanical 2D enablers is permitted |

Note: Changing the value of this variable will take effect after restarting the application.

15.27 LOCALE system variable

15.27.1 Locale

Shows the ISO language code of the current BricsCAD version.

Read-only

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | "en_US" |

15.28 LOCALROOTPREFIX system variable

15.28.1 Local root prefix

Stores the full path to the root folder where local files for the current user, such as templates, were installed. The Template and Textures folders are in this location, and you can add any customizable



files that you do not want to roam on the network. See ROAMABLEROOTPREFIX for the location of the roamable files.

Read-only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

15.29 LOCKUI system variable

15.29.1 Lock user interface elements

Specifies which user interface elements are locked to prevent accidental dragging. To override press the Ctrl (Windows) or Cmd (Mac) key while dragging. The value is stored as a bitcode using the sum of the values of all selected options.



| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | -7 to 7 |
| Default value: | 0 |
| Possible options: | 1: Lock docked toolbars 2: Lock docked panels 4: Lock floating panels and toolbars |

15.30 LOFTANG1 system variable

15.30.1 Loft angle 1

Specifies the draft angle through a loft operation's first cross section.

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0.0 to 360.0 |
| Default value: | 90.0 |

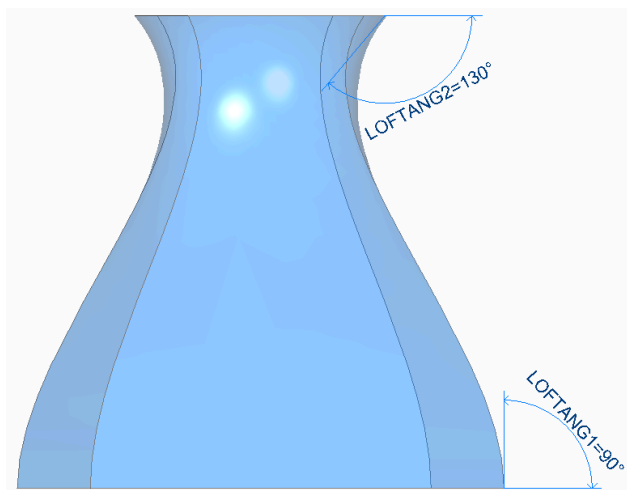
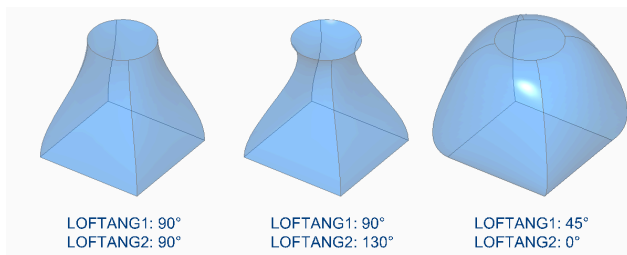


15.31 LOFTANG2 system variable

15.31.1 Loft angle 2

Specifies the draft angle through a loft operation's ending cross section.

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0.0 to 360.0 |
| Default value: | 90.0 |

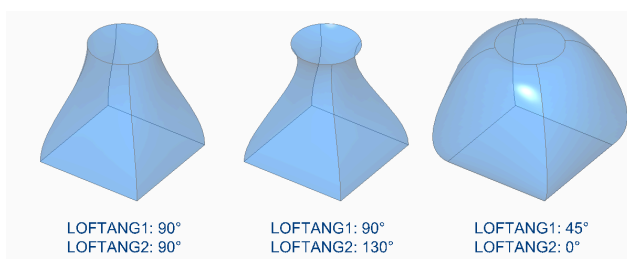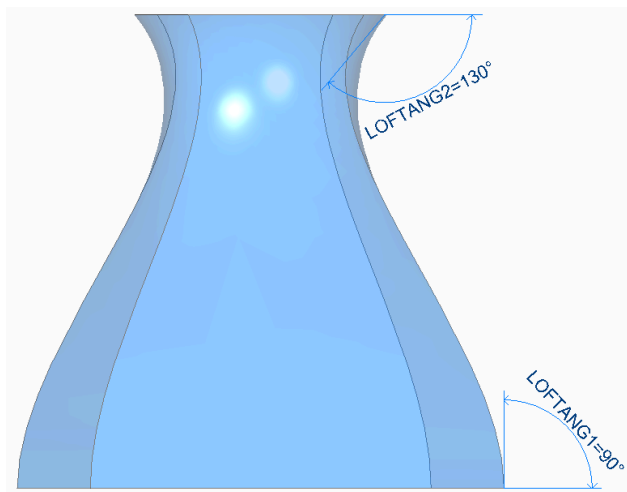


15.32 LOFTMAG1 system variable

15.32.1 Loft magnitude 1

Specifies the draft angle magnitude through a loft operation's first cross section.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

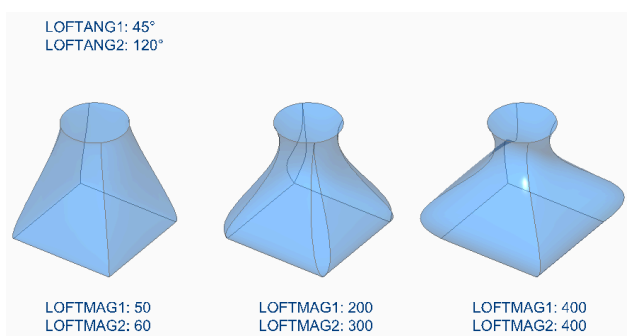




15.33 LOFTMAG2 system variable

15.33.1 Loft magnitude 2

Specifies the draft angle magnitude through a loft operation's second cross section.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

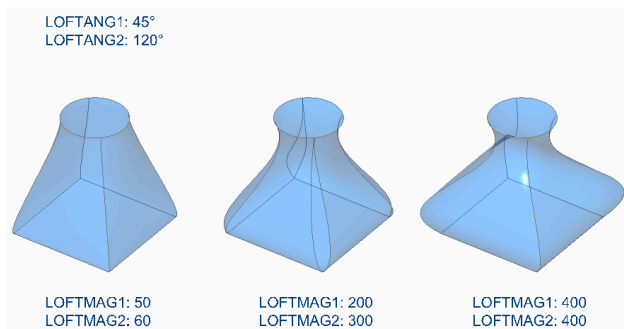

15.34 LOFTNORMALS system variable

15.34.1 Loft normals

Specifies the normals of lofted entities as they pass through cross sections.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 6 |
| Default value: | 1 |
| Possible values: | 0: Ruled surface 1: Smooth surface 2: Surface is normal to the first cross section 3: Surface is normal to the last cross section 4: Surface is normal to the first and last cross sections 5: Surface is normal to all cross sections 6: Surface uses draft angle and magnitude |



15.35 LOFTPARAM system variable

15.35.1 Loft param

Specifies the shape of lofted surfaces and solids. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 15 |
| Default value: | 7 |
| Possible options: | 0: No parameters 1: No twist between cross sections 2: Align directions of cross sections 4: Create simple surfaces and solids 8: Close between the starting and ending cross sections |

15.36 LOGFILEMODE system variable

15.36.1 Log file mode

Specifies whether a logfile is maintained or not. A logfile contains each executed command. These logfiles are saved in the folder specified by the LOGFILEPATH system variable.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't maintain log file On (1): Maintain log file |

15.37 LOGFILENAME system variable

15.37.1 Log file name

Specifies the name of the log file.

Read-only



| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

15.38 LOGFILEPATH system variable

15.38.1 Log file path

Specifies the path of the log file.

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

15.39 LOGGEDIN system variable

15.39.1 Logged in

Specifies if you are logged in to your Bricsys account.

BricsCAD only

Read-only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |

15.40 LOGINNAME system variable

15.40.1 Login name

Shows the Windows login name which is saved with the file properties statistics of the drawing.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

15.41 LONGITUDE system variable

15.41.1 Longitude

Specifies the longitude of the drawing in decimal format. Positive values represent east longitudes.



| | |
|----------------|-----------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | -180.0 to 180.0 |
| Default value: | -122.394 |


15.42 LOOKFROMDIRECTIONMODE system variable

15.42.1 LookFrom direction mode

Specifies how many view directions can be selected in isometric mode. Holding the Ctrl (Windows) or Cmd (Mac) key switches from top-down to bottom-up directions.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: orthogonal only (6 directions) 1: no flat view at corners (14 directions) 2: 4 top/down corners(18 directions) 3: 8 top/down corners(26 directions) |

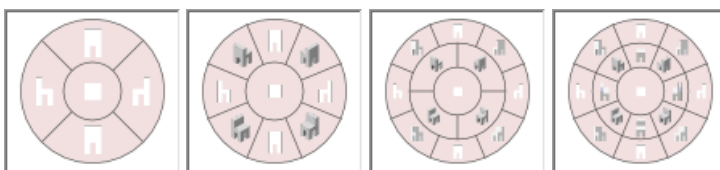

15.43 LOOKFROMFEEDBACK system variable

15.43.1 LookFrom feedback

Specifies whether the LookFrom control displays messages in tooltips or on the status bar.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Preference |
| Range: | |
| Default value: | 1 |
| Possible values: | 0: No tooltips 1: Tooltips next to the Look From control 2: Tooltips in the status bar |

15.44 LOOKFROMZOOMEXTENTS system variable

15.44.1 LookFrom zoom extents

Specifies whether LookFrom will zoom extents whenever a view direction is selected.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Range: | On |
| Possible values: | Off (0): Zoom extents off On (1): Zoom extents on |

15.45 LTGAPSELECTION system variable

15.45.1 Linetype gap selection

Specifies whether selection or snapping to the gaps on entities defined with non-continuous linetype is possible.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | Off (0): No selection or snapping within gaps (legacy behavior) On (1): Selection or snapping within gaps |



15.46 LTSCALE system variable

15.46.1 Linetype scale

Stores the global linetype scale factor.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |

15.47 LUNITS system variable

15.47.1 Linear unit type

Specifies linear units for creating entities.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 5 |
| Default value: | 2 |
| Possible values: | 1: Scientific 2: Decimal 3: Engineering 4: Architectural 5: Fractional |

15.48 LUPREC system variable

15.48.1 Linear unit precision

Specifies the number of decimal places displayed for linear units.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 8 |



| | |
|------------------|--|
| Default value: | 4 |
| Possible values: | 0 1: 0.0 2: 0.00 3: 0.000 4: 0.0000 5: 0.00000 6: 0.000000 7: 0.0000000 |

15.49 LWDEFAULT system variable

15.49.1 Default lineweight

Specifies the default lineweight (in hundredths of millimeters).

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 211 |
| Default value: | 25 |
| Possible values: | -3: Default (defined by LWDEFAULT) -2: ByBlock -1: ByLayer 0 - 211: Lineweight value in hundredths of millimeters |

15.50 LWDISPLAY system variable

15.50.1 Lineweight display

Specifies whether or not lineweights display in the Model or Layout tab.

| | |
|-----------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't display lineweight On (1): Display lineweight |
|------------------|---|

15.51 LWDISPSCALE system variable

15.51.1 Lineweight display scale

Specifies the display scale of lineweights in the Model tab.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Registry |
| Range: | 0.0 to 1.0 |
| Default value: | 0.55 |

15.52 LWUNITS system variable

15.52.1 Lineweight units

Specifies the unit in which lineweights are displayed: inches or millimeters.

| | |
|------------------|-----------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Inches 1: Millimeters |



16. M

16.1 MACROREC system variable

16.1.1 Macro recording

Specifies whether a macro is being recorded.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Macro is not being recorded On (1): Macro is being recorded |

16.2 MAKEBAK system variable

16.2.1 Make backup (Obsolete)

Replaced by ISAVEBAK. Has no effect except to preserve the integrity of scripts. Removed 02/12/2010.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |

16.3 MANIPULATOR system variable

16.3.1 Manipulator

Specifies the display of the Manipulator upon selection of items.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |



| | |
|------------------|---|
| Possible values: | 0: Manipulator is not displayed upon selection of items. The manipulator can be displayed manually through the Quad. 1: Display Manipulator automatically whenever entities are selected 2: Display Manipulator if left mouse button was pressed longer than MANIPULATORDURATION. |
|------------------|---|



16.4 MANIPULATORCOLORTHEME system variable

16.4.1 Color theme of Manipulator

Specifies the color theme of the Manipulator.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Monochrome color theme 1: Classic color theme |

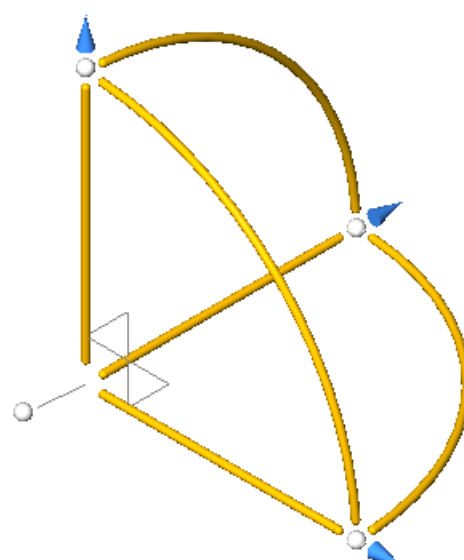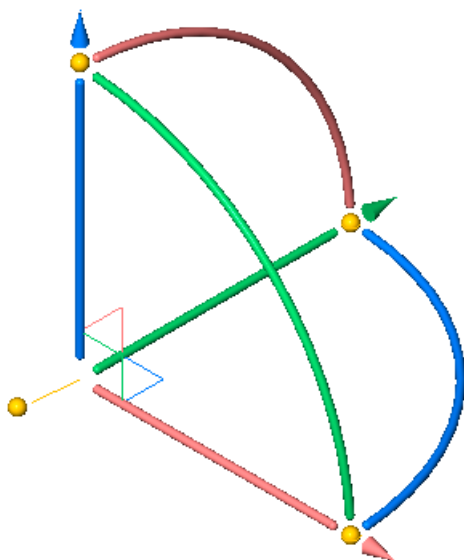



16.5 MANIPULATORDURATION system variable

16.5.1 Manipulator duration

Specifies how long (in milliseconds) the left mouse button should be pressed during entity selection to trigger the display of the Manipulator.

BricsCAD only

| | |
|----------------|--------------|
| Type: | Long |
| Saved in: | Registry |
| Range: | 100 to 10000 |
| Default value: | 250 |

16.6 MANIPULATORHANDLE system variable

16.6.1 Manipulator handle

Specifies the behavior of the anchor handle of the Manipulator. The handle can be used for unconstrained move and copy operations. Unconstrained meaning: not along an axis or constrained to a plane.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Handle moves the Manipulator itself 1: Handle moves the selected entities unrestricted |

16.7 MANIPULATORSIZE system variable

16.7.1 Size of Manipulator

Specifies the size of the Manipulator relative to the default. Acceptable range is [0.5 - 2.0]. Initial value is 1.0.

BricsCAD only



| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.5 to 2 |
| Default value: | 1 |

16.8 MASSPREC system variable

16.8.1 Mass precision

Specifies the number of decimal places displayed for masses when the mass bit of PROPUNITS is on. If negative, LUPREC (Linear Unit Precision) is used.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | -1 to 8 |
| Default value: | -1 |
| Possible values: | -1: Use LUPREC 0: 0 1: 0.0 2: 0.00 3: 0.000 4: 0.0000 5: 0.00000 6: 0.000000 7: 0.0000000 8: 0.00000000 |

16.9 MASSPROPACCURACY system variable

16.9.1 Mass properties calculation relative accuracy

Specifies the accuracy to be used for mass properties calculations. This accuracy is relative: the accuracy of the result depends on the magnitude of the calculated value. Acceptable value Range: 2 - 12 (0.01 to 0.000000000001, or 1.e-2 to 1.e-12).

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 2 to 12 |
| Default value: | 2 |
| Possible values: | 2: 0.01 3: 0.001 4: 0.0001 5: 0.00001 6: 0.000001 7: 0.0000001 8: 0.00000001 9: 0.000000001 10: 0.0000000001 11: 0.00000000001 12: 0.000000000001 |

16.10 MASSUNITS system variable

16.10.1 Mass units

Specifies a list of units used for displaying mass when the mass bit of PROPUNITS is on. If empty, all masses are displayed without units.

The MASSUNITS setting affects the mass values only. Other mass properties such as density or moments of inertia are formatted in SI units for the metric system and in imperial units for the imperial system, regardless of the MASSUNITS setting.

BricsCAD only

| | |
|----------------|--------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | oz lb st mg g kg t |

16.11 MAXACTVP system variable

16.11.1 Maximum active viewports

Specifies the maximum number of viewports that can be active simultaneously in a layout. Has no effect on the number of viewports that are plotted.



| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 64 |

16.12 MAXHATCH system variable

16.12.1 Maximum hatch dashes

Specifies the maximum number of dashes in a hatch pattern. Hatches of which the number of dashes exceeds the maximum number of dashes cannot be created. Values between 100 and 10000000 are accepted.

BricsCAD only

| | |
|----------------|-----------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 100 to 10000000 |
| Default value: | 100000 |

16.13 MAXSORT system variable

16.13.1 Maximum sort

Specifies the maximum number of symbol names, file names, block names or layer names in listing commands. If the number of items exceeds this value, the items are not sorted into alphabetical order.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 200 |

16.14 MAXTHREADS system variable

16.14.1 Maximum number of threads

Specifies the maximum number of threads used for display and loading of drawings, in case one of the Multi-Threading flags has been set. Value 0 means the program will choose the optimal number of threads.



BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 16 |
| Default value: | 0 |

16.15 MBSTATE system variable

16.15.1 Mechanical browser state

Specifies whether the mechanical browser is visible or not.

BricsCAD only

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Mechanical browser is invisible 1: Mechanical browser is visible |

16.16 MBUTTONPAN system variable

16.16.1 Middle button pan

Specifies how the middle mouse button or wheel responds.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |



| | |
|------------------|--|
| Possible values: | 0: Support action defined in menu file 1: Support panning |
|------------------|--|

16.17 MEASUREINIT system variable

16.17.1 Measurement initial

Specifies drawing units as Imperial or metric for new drawings. It also controls whether ANSI or ISO hatch pattern and linetype files are used.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Imperial (use ANSI Hatch and ANSI Linetype) 1: Metric (use ISO Hatch and ISO Linetype) |

16.18 MEASUREMENT system variable

16.18.1 Measurement

Sets drawing units as Imperial or Metric for the current drawing. It also controls whether ANSI or ISO hatch pattern and linetype files are used.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Imperial (use ANSI Hatch and ANSI Linetype) 1: Metric (use ISO Hatch and ISO Linetype) |

16.19 MECH2DSAVEFORMAT system variable

16.19.1 Mechanical 2D save format

Specifies the save format of Mechanical 2D entities.



BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 2013 to 2018 |
| Default value: | 2018 |
| Possible values: | 2013: 2013 Mechanical 2D 2014: 2014 Mechanical 2D 2015: 2015 Mechanical 2D 2016: 2016 Mechanical 2D 2018: 2018 Mechanical 2D |

16.20 MECHANICALBLOCKS system variable

16.20.1 Mechanical blocks (experimental)

Enables or disables mechanical blocks (experimental feature) as an alternative to mechanical components.

BricsCAD only

| | |
|----------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| | Off (0): Disables mechanical blocks On (1): Enables mechanical blocks |

16.21 MECHANICALBROWSERSETTINGS system variable

16.21.1 Mechanical browser options

Sets default mechanical browser options.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|-------------------|---|
| Range: | 0 to 255 |
| Default value: | 51 |
| Possible options: | 1: Expressions of constraints 2: Components parameters 4: Expressions of components parameters 8: Sub-components of standard parts 16: Arrays 32: Block and External References 64: Always synchronize selection 128: Keep values list order |

16.22 MENUBAR (EXCEPT OS X) system variable

16.22.1 Menu bar

Specifies whether the menu bar is shown or hidden.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Workspace |
| Range: | 0 to 1 |
| Default value: | On |
| Possible values: | Off (0): Don't show menubar On (1): Show menubar |

16.23 MENUCTL system variable

16.23.1 Menu control

Specifies whether screen menu switches pages in response to keyboard command entry.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Screen menu doesn't switch pages in response to keyboard command entry On (1): Screen menu switches pages in response to keyboard command entry |
|------------------|---|

16.24 MENUCHO system variable

16.24.1 Menu echo

Specifies menu echo and prompt control. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 15 |
| Default value: | 0 |
| Possible options: | 1: Suppress menu item echo 2: Suppress system prompts during menu 4: Disable ^P toggle 8: Display input/output strings (DIESEL macros debugging) |

16.25 MENUNAME system variable

16.25.1 Menu name

Shows path and name of the menu file.

Read-only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

16.26 MESHTYPE system variable

16.26.1 Mesh type

Specifies the type of mesh that is created by REVSURF, TABSURF, RULESURF and EDGESURF. (Not yet supported)



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Create legacy polygon or polyface mesh 1: Create full-featured mesh entities (recommended) |

16.27 MIDDLECLICKCLOSE system variable

16.27.1 Middle click close (Mac & Linux)

Allows a tab to be closed by middle button click on tab bar On/Off

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | true |

16.28 MILLISECS system variable

16.28.1 Milliseconds

Counts the number of milliseconds that have passed since system startup.

Read-only

| | |
|-----------|-----------|
| Type: | Long |
| Saved in: | Not saved |

16.29 MIRR Hatch system variable

16.29.1 Hatch pattern mirroring

Determines whether the MIRROR command mirrors hatch patterns.

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|




| | |
|------------------|---|
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't mirror hatch patterns On (1): Mirror hatch patterns |

16.30 MIRRTEXT system variable

16.30.1 Mirror text

Specifies whether text is mirrored by the MIRROR command or not.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | On |
| Possible values: | Off (0): Don't mirror text On (1): Mirror text |

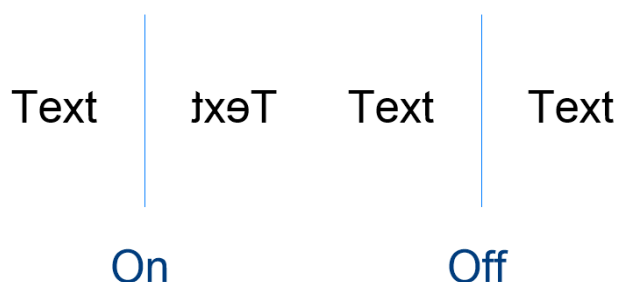

16.31 MLEADERSCALE system variable

16.31.1 Multileader scale

Specifies the overall width scale factor for multileaders. The scale must have a positive value.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |



16.32 MODEMACRO system variable

16.32.1 Mode macro

Displays a text string on the status line, such as the name of the current drawing, time/date stamp or special modes. Used to help debug Diesel programming.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

16.33 MSLTSCALE system variable

16.33.1 Model space linetype scale

Scales linetypes displayed on the model tab by the annotation scale. When changing MSLTSCALE, REGEN or REGENALL is needed to update the display.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: No special linetype scaling by the annotation scale 1: Linetypes are scaled by the annotation scale |

16.34 MSOLESCALE system variable

16.34.1 Model space OLE scale

Specifies the size of an OLE (Object Linking & Embedding) object containing text when pasted into model space. This only affects the initial size, entities already placed in the drawing are not affected when MSOLESCALE is modified. If set to zero, scales by DIMSCALE value.

| | |
|----------------|----------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0.0 or greater |
| Default value: | 1.0 |



16.35 MTEXTCOLUMN system variable

16.35.1 Multiline text column setting

Specifies default column setting for multi-line text.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No columns 1: Dynamic columns with auto height 2: Dynamic columns with manual height |

16.36 MTEXTDETECTSPACE system variable

16.36.1 Space detection for creating lists in mtext editor

Recognize spaces from the keyboard spacebar in a special meaning (like a tabulation) for creating lists in the mtext editor.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | On |
| Possible values: | Off (0): Don't allow spaces for mtext editor lists On (1): Allow spaces for mtext editor lists |

16.37 MTEXTED system variable

16.37.1 Multiline text editor

Specifies the primary and secondary text editors to use for multiline text entities.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |



16.38 MTEXTFIXED system variable

16.38.1 Multiline text fixed

Specifies whether BricsCAD zooms, rotates and/or pans the view to fit the multiline text being edited.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Do nothing when mtext editor is opened 1: Do nothing when mtext editor is opened 2: Rotate / zoom / pan view to fit multiline text |

16.39 MTEXTTOOLBAR system variable

16.39.1 MText Formatting toolbar

Specifies displaying of the Text Formatting toolbar in the mtext editor.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | On |
| Possible values: | Off (0): Don't show formatting toolbar On (1): Show formatting toolbar |

16.40 MTFLAGS system variable

16.40.1 Multi-Threading Flags

Bit flags for parallel processing of display and loading. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|-------------------|---|
| Range: | 0 to 4095 |
| Default value: | 3015 |
| Possible options: | 0: No parallel processing 1: Parallelized regeneration of display. 2: Parallelized redraw of display. 4: Parallelized loading of drawings. 8: Parallelized calculation of hidden line removal. 16: Parallelized generation of BIM sections to separate destination files. 32: Parallelized generation of BIM sections to the same destination file. 64: Parallelized computations in Direct Modeling commands and operations. 128: Parallelized computations in Assembly commands and operations. 256: Parallelized computations in Sheet Metal commands and operations. 512: Parallelized interference checking 1024: Delayed XREF loading 2048: Parallelized point cloud operations |

16.41 MULTISELECTANGULARTOLERANCE system variable

16.41.1 BimMultiSelect angular tolerance

Specifies the maximum angle between two linear solids' axes at which these solids are still considered parallel.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 90 |
| Default value: | 3 |

16.42 MYDOCUMENTSPREFIX system variable

16.42.1 MyDocuments root prefix

Stores the full path to the user documents root folder.

Read-only

| | |
|-------|-----------------|
| Type: | String Standard |
|-------|-----------------|



| | |
|-----------|----------|
| Saved in: | Registry |
|-----------|----------|




17. N

17.1 NAVVCUBEDISPLAY system variable

17.1.1 LookFrom display

Specifies whether the LookFrom control is shown on the current viewport.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | On |
| Possible values: | Off (0): Don't display the LookFrom control On (1): Display the LookFrom control |

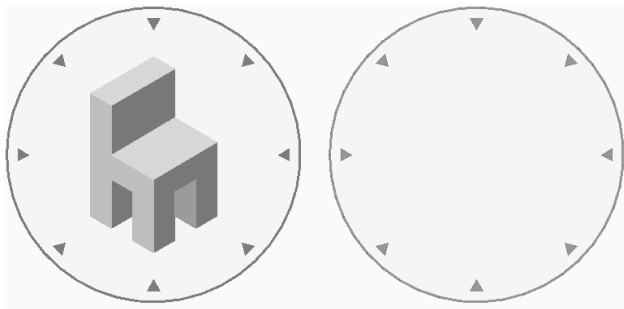

17.2 NAVVCUBELOCATION system variable

17.2.1 LookFrom location

Specifies where to display the LookFrom control.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |



| | |
|------------------|--|
| Possible values: | 0: Top right corner 1: Top left corner 2: Bottom left corner 3: Bottom right corner |
|------------------|--|

17.3 NAVVCUBEOPACITY system variable

17.3.1 LookFrom opacity

Specifies the opacity of the LookFrom control while inactive.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 100 |
| Default value: | 50 |

17.4 NAVVCUBEORIENT system variable

17.4.1 LookFrom orientation

Specifies whether the LookFrom control reflects the current WCS or UCS.

| | |
|------------------|------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: WCS 1: UCS |

17.5 NEARESTDISTANCE system variable


17.5.1 Nearest Distance

Specifies nearest distance dimension between pair of selected entities. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only



| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 15 |
| Default value: | 1 |
| Possible options: | 1: Show nearest distance dimension 2: Show OX aligned nearest distance dimension 4: Show OY aligned nearest distance dimension 8: Show OZ aligned nearest distance dimension |

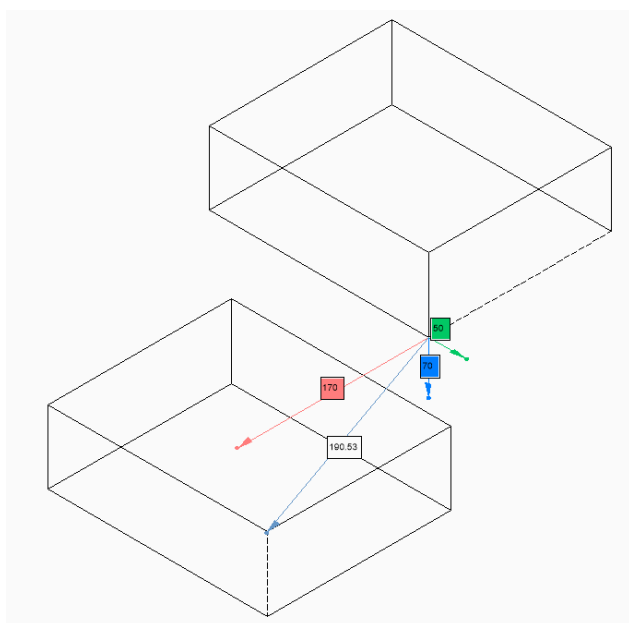

17.6 NOMUTT system variable

17.6.1 No muttering

Toggles the suppression of message display (muttering). When on, the Command line will stop prompting all the options and actions.

| | |
|----------------|-----------|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Don't suppress muttering On (1): Suppress muttering |
|------------------|---|

17.7 NORTHDIRECTION system variable

17.7.1 North direction

Specifies the angle of the sun from north, in the context of the world coordinate system (WCS).

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |



18. 0

18.1 OBJECTISOLATIONMODE system variable

18.1.1 Object Isolation Mode

Specifies whether entities that are temporarily hidden with HIDEOBJECTS or ISOLATEOBJECTS remain hidden after saving and reopening the drawing.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Entities are temporarily hidden for the current session. Interfered solids are selected together with the interference solids. 1: Entities remain hidden between sessions. Interfered solids are selected together with the interference solids. 2: Entities are temporarily hidden for the current session. Interfered solids are not selected together with the interference solids. 3: Entities remain hidden between sessions. Interfered solids are not selected together with the interference solids. |

18.2 OBSCUREDColor system variable

18.2.1 Obscured color

Specifies the color of obscured lines. This setting is visible only if OBSCUREDTYPE is set to a value other than 0.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 257 |
| Default value: | 257 |
| Possible values: | 0: ByBlock 1 - 255: index 256: ByLayer 257: ByEntity |



18.3 OBSCUREDLYTYPE system variable

18.3.1 Obscured linetype

Specifies the linetype of obscured lines. Unlike regular linetypes, obscured linetypes are zoom level independent.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 11 |
| Default value: | 0 |
| Possible values: | 0: Off 1: Solid 2: Dashed 3: Dotted 4: Short Dash 5: Medium Dash 6: Long Dash 7: Double Short Dash 8: Double Medium Dashsettings 9: Double Long Dash 10: Medium Long Dash 11: Sparse Dot |

18.4 OFFSETDIST system variable

18.4.1 Offset distance

Stores the last distance used with the OFFSET command.

| | |
|------------------|--|
| Type: | Real |
| Saved in: | Not saved |
| Range: | -1.0 |
| Possible values: | <0: draws a parallel copy of an entity through a specified point |



18.5 OFFSETERASE system variable

18.5.1 Offset erase

Specifies whether the OFFSET command erases the source entity or not.


| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | Off (0): Offset erase off On (1): Offset erase on |

18.6 OFFSETGAPTYPE system variable

18.6.1 Offset gap type

Specifies how possible gaps in parallel copies of closed polylines are filled.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Extend polyline segments 1: Filleted arc segments 2: Chamfered line segments |

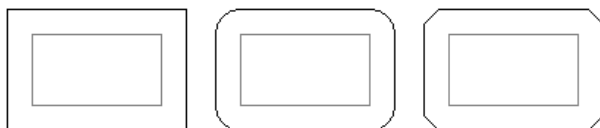

18.7 OLEFRAME system variable

18.7.1 OLE frame

Specifies the display of a frame around an OLE (Object Linking & Embedding) entity.



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: No OLE frames 1: Display and plot OLE frames 2: Display but do not plot OLE frames |

18.8 OLEHIDE system variable

18.8.1 OLE hide

Specifies the visibility of OLE (Object Linking & Embedding) entities for both screen display and plotting.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: All OLE entities are visible and plot 1: OLE entities are visible and plot in paper space only 2: OLE entities are visible and plot in model space only 3: No OLE entities are visible or plot |

18.9 OLEQUALITY system variable

18.9.1 OLE quality

Specifies the default plot quality of OLE (Object Linking & Embedding) entities. When set to 3 (Automatic), the quality level is assigned automatically depending on the entity e.g. photographs are set to High.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |



| | |
|------------------|---|
| Default value: | 3 |
| Possible values: | 0: Monochrome 1: Low graphics 2: High graphics 3: Automatically Select |

18.10 OLESTARTUP system variable

18.10.1 OLE startup

Specifies whether or not the OLE (Object Linking & Embedding) entity source application is launched when plotting.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | Off |
| Possible values: | Off (0): Don't load OLE source application when plotting On (1): Load OLE source application when plotting |

18.11 OPMSTATE system variable

18.11.1 Properties bar state

Specifies whether the properties bar is visible or not.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Properties bar is invisible 1: Properties bar is visible |



18.12 ORBITAUTOTARGET system variable

18.12.1 Orbit Auto Target

Specifies how the target point is acquired for the RTROT command.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Off. The target point is located where you clicked to start orbiting 1: On. The target point is located at the center of the entities displayed or selected on screen. |

18.13 ORTHOMODE system variable

18.13.1 Orthogonal mode

Specifies whether cursor movement is constrained to the perpendicular. When on, the cursor can be moved horizontally or vertically only, relative to the current UCS and grid rotation angle as defined by SNAPANG.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Orthogonal mode off On (1): Orthogonal mode on |

18.14 OSMODE system variable

18.14.1 Entity snap mode

Specifies running entity snap modes. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|-------------------|---|
| Saved in: | Registry |
| Range: | 0 to 32767 |
| Possible options: | 4135 |
| Possible values: | 0: None 1: Endpoint 2: Midpoint 4: Center 8: Node 16: Quadrant 32: Intersection 64: Insertion 128: Perpendicular 256: Tangent 512: Nearest 1024: Geometric center 2048: Apparent intersection 4096: Extension 8192: Parallel 16384: Turn off all snaps |

18.15 OSNAPCOORD system variable

18.15.1 Entity snap coordinates

Specifies whether running entity snaps override keyboard coordinate entry.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Entity snap settings override keyboard coordinate entry 1: Keyboard entry overrides entity snap settings 2: Keyboard entry overrides entity snap settings except in scripts |



18.16 OSNAPZ system variable

18.16.1 Ignore entity snap elevation

Replaces the Z coordinate of the entity snapping point with the current value of the ELEVATION system variable.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Don't replace Z value with current elevation On (1): Replace Z value with current elevation |

18.17 OSOPTIONS system variable

18.17.1 Entity snap options

Suppresses entity snaps on certain entity types: hatches and/or dimension extension lines or negative z-values in dynamic UCS mode. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 7 |
| Default value: | 7 |
| Possible options: | 1: Entity snap ignores hatches 2: Entity snap ignores negative Z values in Dynamic UCS mode 4: Entity snap ignores end points of dimension extension lines |

18.18 OVERKILLLAYER system variable

18.18.1 Duplicate Entities Layer

This is the layer to which entities are moved when using the option to Move duplicates to Duplicate Entities layer in the OVERKILL command.

BricsCAD only



| | |
|----------------|----------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | "Duplicate Entities" |



19. P

19.1 PANBUFFER system variable

19.1.1 Pan buffer

Specifies whether faster panning is enabled, especially in complex drawings.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable faster panning On (1): Enable faster panning |

19.2 PANELBUTTONSIZE system variable

19.2.1 Panelset icon button size

Preferred size of panelset icon buttons.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 1 |
| Default value: | 0 to 2 |
| Possible values: | 0: Small buttons 1: Large buttons 2: Extra-large buttons |

19.3 PAPERUPDATE system variable

19.3.1 Paper update

About automatic papersize adaption when switching printers in print dialog. If ON, existing papersize is maintained. If the printer has no close match, the size will be displayed as 'previous paper size'. On print,



user confirmation is required before substitution by default values. When OFF, always assigns the default papersize of the selected printer.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | Off (0): Retain papersize when switching printers On (1): Use configured paper size of the plotter configuration file |

19.4 PARAMETERCOPYMODE system variable

19.4.1 Parameter copy mode

Specifies copying of constraints and related parameters when entities are copied.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 4 |
| Default value: | 3 |
| Possible values: | 0: Do not copy 2D constraints 1: Replace all expressions with constants 2: Use existing parameters, if parameter is missing replace it with constant 3: Use existing parameters, create new parameter if it is missing 4: Use existing parameters, create new parameter if it is missing or has different value |

19.5 PARAMETRICBLOCKS2DPATH system variable

19.5.1 Parametric blocks 2D directory path

Specifies the folder(s) in which BricsCAD should look for user created Parametric Blocks 2D files.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|-----------|----------|
| Saved in: | Registry |
|-----------|----------|

19.6 PDFCACHE system variable

19.6.1 PDF cache

Enables/disables the pdf cache. A multi-resolution persistent image cache is used to display attached Pdf underlays, enabling (very) fast zoom and pan operations. The highest cached resolution is 5000 x 5000 pixels. Still, when zooming in very close, the display of the Pdf underlay will become pixelated. So a hybrid modus can be used which switches to real-time generation of crisp Pdf underlay display when zooming in very close. The initial generation of the image cache may take a few seconds, from then on processing gets (very) fast, and remains like that in subsequent sessions.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: No caching, always real time generation 1: Use pdf cache, only use real time generation when zooming in close 2: Always use pdf cache |

19.7 PDFEMBEDDEDTTF system variable

19.7.1 Pdf embedded fonts

Enable embedding of True Type fonts into PDF files.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable embedded TTF fonts On (1): Enable embedded TTF fonts |



19.8 PDFEXPORTHYPERLINKS system variable

19.8.1 Export hyperlinks

Enables export of entity hyperlinks.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disables export of entity hyperlinks On (1): Enables export of entity hyperlinks |

19.9 PDFFRAME system variable

19.9.1 PDF frame

Specifies the visibility of PDF underlay frames.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Hide PDF frames 1: Display and plot PDF frames 2: Display but do not plot PDF frames |

19.10 PDFIMAGEANTIALIAS system variable

19.10.1 Image anti-aliasing

Enables anti-aliasing for images that require upscaling when exporting.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|--|
| Default value: | On |
| Possible values: | Off (0): Disables anti-aliasing for images On (1): Enables anti-aliasing for images |

19.11 PDFIMAGECOMPRESSION system variable

19.11.1 Image compression

Compression used for exported images.

BricsCAD only

| | |
|------------------|--------------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: None 1: JPEG |

19.12 PDFIMAGEDPI system variable

19.12.1 Image DPI

When a raster image is exported this value controls the minimal resolution for the image. Cannot exceed PdfVectorResolutionDPI value.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 300 |

19.13 PDFIMPORTAPPLYLINEWEIGHT system variable

19.13.1 Apply lineweight properties

Retains or ignores the lineweight properties of the imported entities.

BricsCAD only



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Ignore the lineweight properties of the imported entities On (1): Retain the lineweight properties of the imported entities |

19.14 PDFIMPORTASBLOCK system variable

19.14.1 Import as block

Imports the PDF file as a block instead of directly into modelspace.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't import PDF files as a block On (1): Import PDF files as a block |

19.15 PDFIMPORTCHARSPACEFACTOR system variable

19.15.1 Inter-character space factor

Specifies the factor for the width of the space between characters in a word. If the distance between the text objects in the string is less than the width of the space taken from the font metric multiplied by this factor, the text objects are combined into one word. It is used only if the PDFIMPORTCOMBINETEXTOBJECTS system variable is turned on.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.6 |



19.16 PDFIMPORTCOMBINETEXTOBJECTS system variable

19.16.1 Combine text objects

Controls whether text objects that use the same font and are on the same line are combined.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Text objects are not combined. On (1): Text objects are combined. |

19.17 PDFIMPORTCONVERTSOLIDSTOHATCHES system variable

19.17.1 Convert solid fills to hatches

Converts 2D solid entities into solid-filled hatches.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't convert solid fills to hatches from imported PDF files On (1): Convert solid fills to hatches from imported PDF files |

19.18 PDFIMPORTIMAGEPATH system variable

19.18.1 Raster Images Folder

Location for saving raster images when importing a pdf file containing rasters. The path can be absolute or relative. If PDFIMPORTIMAGEPATH is relative the pdf raster image path will be calculated relative to the folder of the current drawing file. If the path is left empty the folder of the current drawing will be used. The default value is a subfolder "PDF Images" of the current drawing. If the drawing has not yet been saved, rasters will be placed next to the pdf file being imported.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|--------------|
| Saved in: | Registry |
| Default value: | "PDF Images" |

19.19 PDFIMPORTJOINLINEANDARCSEGMENTS system variable

19.19.1 Join line and arc segments

Joins contiguous segments into a polyline where possible.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Range: | On |
| Possible values: | Off (0): Don't join the line and arc segments from imported PDF files On (1): Join the line and arc segments from imported PDF files |

19.20 PDFIMPORTLAYERSUSETYPE system variable

19.20.1 Layers

Specifies to which layers the entities are imported. It's possible to import to layers which match the PDF layers, to create layers for each PDF entity type, or to just collect all imported entities on the current layer.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Use PDF Layers 1: Layer per Entity Type 2: Use current layer |



19.21 PDFIMPORTRASTERIMAGES system variable

19.21.1 Raster Images

Extract raster images to PNG files and attach these to the current drawing. The images are stored in a folder controlled by PDFIMPORTIMAGEPATH system variable.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Range: | Off |
| Possible values: | Off (0): Don't extract the raster images On (1): Extract the raster images |

19.22 PDFIMPORTSOLIDFILLS system variable

19.22.1 Solid fills

Ignore or import solid-filled areas. If these filled areas were originally exported into PDF format from AutoCAD, the solid areas would include solid-filled hatches, 2D solids, wipeout entities, wide polylines, and triangular arrowheads.

Note: Solid-filled hatches are assigned a 50% transparency so that entities on top or underneath can be easily seen.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Ignore solid-filled areas. On (1): Import solid-filled areas. |

19.23 PDFIMPORTSPACEFACTOR system variable

19.23.1 Inter-word space factor

Defines the factor for the width of the space between words on a line. If the distance between the text objects in the string is greater than the width of the space between characters in a word (specified by the



PDFIMPORTCHARSPACEFACTOR system variable), but less than the width of the space taken from the font metrics multiplied by this factor, the text objects are combined into one word. It is used only if the PDFIMPORTCOMBINETEXTOBJECTS system variable is turned on.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 1.5 |

19.24 PDFIMPORTTRUETYPETEXT system variable

19.24.1 TrueType text

Import TrueType text as TrueType text with its text style named after the font.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't import the TrueType text On (1): Import the TrueType text |

19.25 PDFIMPORTTRUETYPETEXTASGEOMETRY system variable

19.25.1 Import True Type text as geometry

Specifies whether to import True Type text from a PDF file as geometry.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't import TrueType text as geometry On (1): Import TrueType text as geometry |



19.26 PDFIMPORTUSECLIPPING system variable

19.26.1 Apply clipping

Controls whether clipping is applied to objects on import.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Clipping is not applied to objects on import. On (1): Clipping is applied to objects on import. |

19.27 PDFIMPORTUSEGEOMETRYOPTIMIZATION system variable

19.27.1 Import geometry with optimization

Specifies whether to optimize geometry when importing from a PDF file.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't import geometry with optimization On (1): Import geometry with optimization |

19.28 PDFIMPORTUSEIMAGECLIPPING system variable

19.28.1 Clip images

Controls whether images are clipped on import. Clipping means that the clipped part of the image becomes transparent. It has effect only if the PDFIMPORTUSECLIPPING system variable is on.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|---|
| Default value: | Off |
| Possible values: | Off (0): Images are not clipped on import. On (1): Images are clipped on import. |

19.29 PDFIMPORTUSEPAGEBORDERCLIPPING system variable

19.29.1 Apply clipping at page border

Controls whether clipping at page border is applied on import. It has effect only if the PDFIMPORTUSECLIPPING system variable is on.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Clipping at page border is not applied on import. On (1): Clipping at page border is applied on import. |

19.30 PDFIMPORTVECTORGEOMETRY system variable

19.30.1 Vector geometry

Ignore or Import vector geometry. PDF geometric data types include linear paths, Beziér curves, and solid-filled areas, which are imported as polylines, and 2D solids or solid-filled hatches. Within a tolerance, curves that resemble arcs, circles, and ellipses are interpolated as such. Patterned hatches are imported as many separate entities.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't import vector geometry On (1): Import vector geometry |



19.31 PDFLAYERSSETTING system variable

19.31.1 Pdf layer support

Specifies the use of layers in the target PDF document (PDF v1.5 feature).

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 1 |
| Possible values: | 0: Don't use layers 1: Use all layers with visible entities 2: Use all layers with entities, including OFF and FROZEN layers. |

19.32 PDFLAYOUTSTOEXPORT system variable

19.32.1 Pdf layouts to export

Define layout(s) to be exported.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Active 1: All in multi-sheet file 2: All in single-sheet files |

19.33 PDFMERGECONTROL system variable

19.33.1 Pdf Merge Control

Specifies the appearance of lines that cross.

Lines Overwrite Uses the last plotted line to obscure the lines under it. Only the topmost line is visible at the intersection.

Lines Merge Merges the colors of crossing lines.



BricsCAD only

| | |
|------------------|--------------------------------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 0 |
| Possible values: | 0: Lines Overwrite 1: Lines Merge |

19.34 PDFNOTIFY system variable

19.34.1 PDF notify

Enables/disables the notification about missing or modified PDF documents when opening the parent drawing.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Disable PDF notification On (1): Enable PDF notification |

19.35 PDFOSNAP system variable

19.35.1 PDF entity snap

Enable snapping to entities in the PDF underlay files.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Disable PDF entity snap On (1): Enable PDF entity snap |



19.36 PDFPAPERHEIGHT system variable

19.36.1 Pdf overridden paper height

Paper height to use in the papersize override, in millimeters.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 297 |

19.37 PDFPAPERSIZEOVERRIDE system variable

19.37.1 Pdf papersize override

Enables papersize override. If On, the papersize as defined in the BricsCAD Print settings is overridden. The papersize width and height defined by **PdfPaperWidth** and **PdfPaperHeight** are used instead.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Disable papersize override On (1): Enable papersize override |

19.38 PDFPAPERWIDTH system variable

19.38.1 Pdf overridden paper width

Paper width to use in the papersize override, in millimeters.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 210 |



19.39 PDFPRCCOMPRESSION system variable

19.39.1 PRC Compression

Specifies the compression for PRC 3D data.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No compression 1: Medium compression 2: High compression |

19.40 PDFPRCEXPORT system variable

19.40.1 PRC Export Mode

Specifies the export mode for PRC 3D data. **Export as BREP** is an experimental mode which may work incorrectly. We recommend using **Export as Mesh** mode.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No export 1: Export as BREP (Experimental) 2: Export as Mesh |

19.41 PDFPRCPROJECTION system variable

19.41.1 PRC Projection

PRC Projection for PRC 3D data.



BricsCAD only

| | |
|------------------|---------------------------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 0 |
| Possible values: | 0: Orthogonal 1: Perspective |

19.42 PDFPRCVIEWMODE system variable

19.42.1 PRC View mode

PRC view mode for export of PRC 3D data controls whether the 2D entities are exported separate from 3D entities as standard PDF or whether all entities are exported using PRC. In addition the setting allows to export 3D entities as separate 3D objects or as one unified 3D object.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: All entities in single view 1: Only 3D entities in single view 2: Only 3D entities in multiple views |

19.43 PDFSHXTEXTASGEOMETRY system variable

19.43.1 Pdf SHX text as geometry

Enable the conversion of SHX font text to geometry. This might be necessary if the receiving party does not have the same SHX fonts on their computer.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|---|
| Default value: | Off |
| Possible values: | Off (0): Don't convert SHX text to geometry On (1): Convert SHX text to geometry |

19.44 PDFSIMPLEGEOMOPTIMIZATION system variable

19.44.1 Pdf simple geometry optimization

Enable simple geometry optimization (separate segments to one polyline, use of Bezier curve control points).

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable simple geometry optimization On (1): Enable simple geometry optimization |

19.45 PDFTTFTEXTASGEOMETRY system variable

19.45.1 Pdf TTF text as geometry

Enable the conversion of True Type font text to geometry. This is useful for when the TTF files are covered by a license that prohibits sharing, or you want to make it harder to extract text.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't convert TTF text to geometry On (1): Convert TTF text to geometry |



19.46 PDFUSEPLOTSTYLES system variable

19.46.1 Pdf use plotstyles

Enables usage of plotstyles. If On, the plotstyle of the layout controls the color and lineweight in the PDF export.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disables usage of plotstyles On (1): Enables usage of plotstyles |

19.47 PDFVECTORRESOLUTIONDPI system variable

19.47.1 Vector Resolution DPI

Resolution of vector graphics when exporting. Values between 72 and 40000 are accepted.

BricsCAD only

| | |
|----------------|-------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 72 to 40000 |
| Default value: | 2400 |

19.48 PDFZOOMTOEXTENTSMODE system variable

19.48.1 Pdf zoom to extents mode

If exporting model space, zoom to extents first, if the current model space view is zoomed in/out. This zooms the layout geometry to the papersize. When Off (0): use scale and papersize from page setup data instead.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|




| | |
|------------------|---|
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't zoom to extents On (1): Zoom to extents |

19.49 PDMODE system variable

19.49.1 Point display mode

Specifies the display style for point entities. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| | 0 to 100 |
| Default value: | 0 |
| Possible options: | 1: none 0: . 2: + 3: x 4: ' 32: circle 64: square |

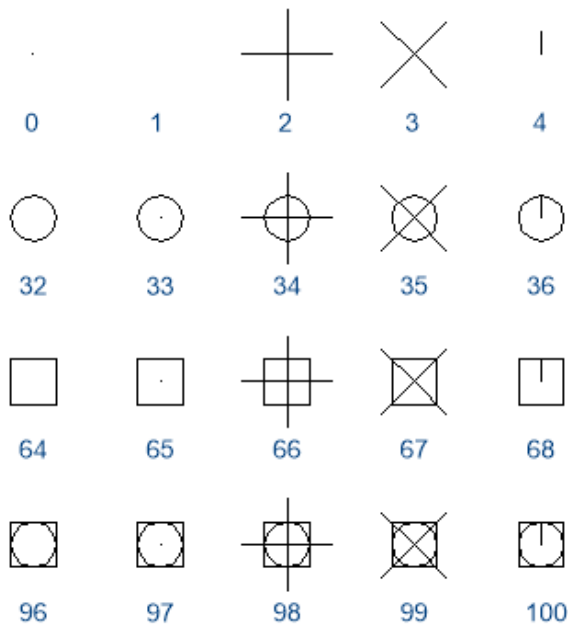

19.50 PDSIZE system variable

19.50.1 Point display size

Specifies the display size for point entities.

| | |
|------------------|---|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |
| Possible values: | 0: 5 percent of the drawing area height >0: Absolute size <0: Percentage of the viewport size |

19.51 PEDITACCEPT system variable

19.51.1 Polyline edit accept

Specifies the display of the 'Entity Selected Is Not a Polyline' prompt in PEDIT. When the prompt is suppressed, the selected entity is automatically converted to a polyline.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |




| | |
|------------------|--|
| Default value: | 0 |
| Possible values: | Off (0): Display prompt On (1): Suppress prompt |

19.52 PELLIPSE system variable

19.52.1 Polyline ellipse

Specifies the entity type created with the ELLIPSE command real ellipses or polyline representations of an ellipse.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Create real ellipses On (1): Create polyline representations of an ellipse |

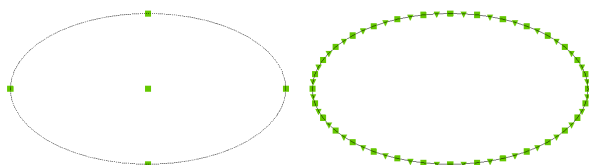

19.53 PERIMETER system variable

19.53.1 Last perimeter

Specifies the last perimeter calculated by AREA, LIST, or DBLIST.

Read-only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

19.54 PERSPECTIVE system variable

19.54.1 Perspective

Specifies whether the current viewport is displayed in perspective view.



| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Perspective view off On (1): Perspective view on |

19.55 PFACEVMAX system variable

19.55.1 Polyface mesh maximum vertices

Specifies the maximum number of vertices for each face.

Read-only

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 3 or greater |
| Default value: | 4 |

19.56 PICKADD system variable

19.56.1 Pick add

When Off (0): the most recently selected entities become the selection set. Press and hold SHIFT to add entities.

When On newly selected entities are added to the selection set. Press and hold SHIFT to remove entities.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | |
| Default value: | On |
| Possible values: | Off (0): Don't add selected entities to current selection set On (1): Add selected entities to current selection set |



19.57 PICKAUTO system variable

19.57.1 Pick automatic

Specifies automatic window selection (inside or crossing) while selecting entities. The value is stored as a bitcode using the sum of the values of all the selected options. A negative value is the same as 0, but helps storing the earlier value.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | -7 to 7 |
| Default value: | 5 |
| Possible options: | Negative: disables window selection 1: Draws a selection window if the mouse is not over any entity when clicked 2: Draws a selection window if the mouse is clicked and dragged over an entity 4: Draws a selection lasso if the mouse is not over any entity when clicked |

19.58 PICKBOX system variable

19.58.1 Pick box

Specifies the size (in pixels) of the small square at the end of the selection cursor (the entity selection target) . If you select an entity by clicking, the Pick Box must touch or overlap the entity. Values between 0 and 50 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 50 |
| Default value: | 4 |
| Unit | pixels |



19.59 PICKDRAG system variable

19.59.1 Pick drag

Specifies the drawing method for the selection window.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Draw selection window using two points On (1): Draw selection window using dragging |

19.60 PICKFIRST system variable

19.60.1 Pick first

Allows to select entities first, then issue a command or vice versa.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | Off (0): First issue a command, then select entities On (1): First select entities, then issue a command |

19.61 PICKSTYLE (EXCEPT OS X) system variable

19.61.1 Pick style

Specifies the selection of groups and associative hatches. The value of PICKSTYLE is stored as a bitcode using the sum of the values of all selected options.

Ctrl-H toggles PICKSTYLE 0/1 if 0 or 1 and 2/3 if 2 or 3.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |



| | |
|-------------------|--|
| Default value: | 1 |
| Possible options: | 0: No group selection or associative hatch selection 1: Group selection if a member of a selectable group is selected, all members of the group are selected 2: Associative hatch selection the hatch and its boundary are selected, no matter what is picked (the hatch or the boundary). 3: Group selection and associative hatch selection |

19.62 PICTUREEXPORTSCALE system variable

19.62.1 Picture format export scale factor

This is the scaling factor that controls the output resolution for exporting to picture formats (WMF, EMF, BMP). The output view size is current viewsize (in pixels) multiplied by this factor.

Used in commands EXPORT, WMFOUT, COPYCLIP, CUTCLIP and in COM/VBA function

AcadDocument.Export. WARNING scale values of 10 or more may cause slow system response.

BricsCAD only

| | |
|----------------|----------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.0 or greater |
| Default value: | 1.0 |

19.63 PLACESBARFOLDER1 system variable

19.63.1 First folder (Windows)

Specifies the first folder in the places bar of the nonstandard open file dialog. This enables you to place shortcuts to your favorite drawing folders on your desktop or in your Favorites folder.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 5 |
| Default value: | 0 |



| | |
|------------------|---|
| Possible values: | 0: Desktop 1: My Computer 2: My Documents 3: Favorites 4: Network 5: My Recent Documents |
|------------------|---|

19.64 PLACESBARFOLDER2 system variable

19.64.1 Second folder (Windows)

Specifies the second folder in the places bar of the nonstandard open file dialog. This enables you to place shortcuts to your favorite drawing folders on your desktop or in your Favorites folder.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 5 |
| Default value: | 1 |
| Possible values: | 0: Desktop 1: My Computer 2: My Documents 3: Favorites 4: Network 5: My Recent Documents |

19.65 PLACESBARFOLDER3 system variable

19.65.1 Third folder (Windows)

Specifies the third folder in the places bar of the nonstandard open file dialog. This enables you to place shortcuts to your favorite drawing folders on your desktop or in your Favorites folder.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 5 |



| | |
|------------------|---|
| Default value: | 3 |
| Possible values: | 0: Desktop 1: My Computer 2: My Documents 3: Favorites 4: Network 5: My Recent Documents |

19.66 PLACESBARFOLDER4 system variable

19.66.1 Fourth folder (Windows)

Specifies the fourth folder in the places bar of the nonstandard open file dialog. This enables you to place shortcuts to your favorite drawing folders on your desktop or in your Favorites folder.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 5 |
| Default value: | 5 |
| Possible values: | 0: Desktop 1: My Computer 2: My Documents 3: Favorites 4: Network 5: My Recent Documents |

19.67 PLATFORM system variable

19.67.1 Platform

Displays the current version of the Operating System.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |



19.68 PLINECACHE system variable

19.68.1 Polyline cache

Specifies creation of a cache of polyline vertices when a database file is opened.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Disable polyline cache On (1): Enable polyline cache |

19.69 PLINECONVERTMODE system variable

19.69.1 Polyline convert mode


Specifies how to convert splines to polylines.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Create polylines with linear segments 1: Create polylines with arc segments |


19.70 PLINEGEN system variable

19.70.1 Polyline generation

Linetypes are normally generated from vertex to vertex (0). Polyline of which the vertices are very close together might be rendered as a continuous line, if the ltype pattern does not fit between two subsequent vertices. When set to 1, the ltype is drawn from one end of the polyline to the other end, instead of from vertex to vertex.

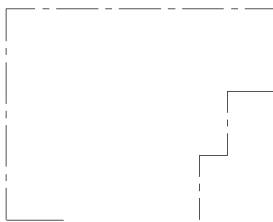

Polyline starts and ends with a dash at each vertex. The linetype will not display on parts that are too small.

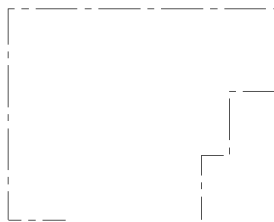

The linetype displays in a continuous pattern around the polyline vertices.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Polylines start and end with a dash at each vertex On (1): Linetype in a continuous pattern around the polyline vertices |

19.71 PLINETYPE system variable

19.71.1 Polyline type

Specifies the usage of optimized 2D polylines when creating polylines and the conversion of polylines in older drawings. It saves disk space and memory by using the optimized format.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Polylines in older drawings are not converted; PLINE creates old-format polylines 1: Polylines in older drawings are not converted; PLINE creates optimized polylines 2: Polylines in older drawings are converted; PLINE creates optimized polylines |



19.72 PLINEWID system variable

19.72.1 Polyline width

Specifies the default width for new polylines.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

19.73 PLOTFCGPATH system variable

19.73.1 Plotter configuration path

Specifies the paths to the Plotter configuration folders. When printing a layout, the available paper size settings are controlled by a Plotter Configuration File. The Printer/Plotter Configuration list is composed of all printer drivers that are installed on your computer. The Printer Configuration are the files in the folder which is specified by the Plotter Configuration Path. If this is set to a large folder with many files and subfolders, then the entire folder and subfolders are searched for appropriate files. This might cause the print dialog to take a long time to open.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

19.74 PLOTID system variable

19.74.1 Plot id (Obsolete)

Has no effect except to preserve the integrity of old scripts and LISP routines.

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

19.75 PLOTOUTPUTPATH system variable

19.75.1 Plot output path

Specifies the default path for creation of plot files.

BricsCAD only



| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

19.76 PLOTSTYLEPATH system variable

19.76.1 Plot styles path

Specifies the path to the Plot styles folders.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

19.77 PLOTTER system variable

19.77.1 Plotter (Obsolete)

Has no effect except to preserve the integrity of older scripts and LISP routines.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |

19.78 PLOTTRANSPARENCYOVERRIDE system variable

19.78.1 Plot transparency override

Specifies whether transparencies are enabled when printing.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Transparencies are disabled 1: Value from page setup dialog is used 2: Transparencies are enabled |



19.79 PLQUIET system variable

19.79.1 Plot quiet

Specifies whether optional dialog boxes and nonfatal errors display when batch plotting or running scripts.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Display plot dialog boxes and nonfatal errors On (1): Log nonfatal errors and don't display plot-related dialog boxes |

19.80 POINTCLOUD2DVSDISPLAY system variable

19.80.1 Point cloud toggle show/hide bounding box in 2D wireframe mode

Point clouds are only displayed in 3D visual style. Otherwise, a bounding box and a warning message are displayed in 2D wireframe mode. This setting provides a way to hide this bounding box and message.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Display point cloud bounding box and warning message that point clouds are not displayed in 2D wireframe visual style 1: Hide bounding box and warning message |

19.81 POINTCLOUDADAPTIVEDISPLAY system variable

19.81.1 Point cloud toggle adaptive vs. fixed point sizes

Point clouds are by default displayed using adaptive point sizes (visually more realistic). However, for point snapping, fixed point sizes are sometimes better.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Use fixed point sizes (all points have the same size) 1: Use adaptive point sizes (point sizes are adjusted for a better visual appearance) |

19.82 POINTCLOUDBOUNDARY system variable

19.82.1 Point cloud point boundary

Show the edges of the point cloud bounding box.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Don't show 1: Only when selected 2: Always show |

19.83 POINTCLOUDCACHEFOLDER system variable

19.83.1 Point Cloud disk cache folder

Specifies the folders where point cloud cache files are stored. Multiple paths are supported. The first one will be used for adding new cached/preprocessed data.

BricsCAD only

| | |
|----------------|--|
| Type: | String Standard |
| Saved in: | Preference |
| Default value: | {User}AppData/Local/Temp/PointCloudCache |



19.84 POINTCLOUDHSPC system variable

19.84.1 Point Cloud format (hspc/bcad)

Specifies the format used for processing point clouds (hspc or bcad).

Uwaga: The HSPC file format (Hexagon Smart Point Cloud) is a proprietary format developed by Hexagon VCH (Visual Computing Hub). Using this format enables storing per point information which will be used to have more point cloud functionalities (in the future).

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Use bcad format. On (1): Use HSPC format |

19.85 POINTCLOUDIGNOREGEOTAGS system variable

19.85.1 Point Cloud ignore geo tags in source data

Specifies whether geo tags should be ignored in source data or not.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't ignore geo tags in source data On (1): Ignore geo tags in source data |

19.86 POINTCLOUDPOINTMAX system variable

19.86.1 Point cloud max points

Maximum number of points displayed per point cloud. Values between 500 000 and 50 000 000 are accepted. This is independent of the number of points present in the dataset, which can be hundreds of billions.



| | |
|----------------|---------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 500000 to 500000000 |
| Default value: | 4000000 |

19.87 POINTCLOUDPOINTSIZ system variable

19.87.1 Point cloud point size

Point cloud point display size.


| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 10 |
| Default value: | 2 |

19.88 POLARADDANG system variable

19.88.1 Polar add angles

Contains a list of user-defined polar snap angles. Up to 10 angles, up to 25 characters each, separated with semicolons (;). Requires POLARMODE flag 0x04 to be set (Use additional polar tracking angles). The AUNITS system variable sets the format for display of angles. Unlike POLARANG, POLARADDANG angles do not result in multiples of their values.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | |

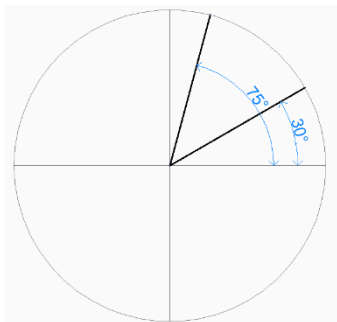

19.89 POLARANG system variable

19.89.1 Polar angle

Specifies the increment for polar angles (in degrees).

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 90.0 |
| Unit | degrees |

19.90 POLARDIST system variable

19.90.1 Polar distance

Specifies the snap increment for polar snap (SNAPTTYPE set to 1).

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.0 |

19.91 POLARMODE system variable

19.91.1 Polar mode

Specifies the settings for entity snap tracking and polar snap tracking. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|-------------------|---|
| Saved in: | Registry |
| Range: | 0 to 15 |
| Default value: | 1 |
| Possible options: | 1: Relative 2: Use polar tracking settings in entity snap tracking 4: Use additional polar tracking angles 8: Press SHIFT to acquire entity snap tracking points |

19.92 POLYSIDES system variable

19.92.1 Polygon sides

Stores the number of sides last used with the POLYGON command. Values between 3 and 1024 are accepted.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 3 to 1024 |
| Default value: | 4 |

19.93 POPUPS system variable

19.93.1 Popups

Shows the status of the currently configured display driver.

Read-only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Don't support dialog boxes, the menu bar, and icon menus On (1): Support dialog boxes, the menu bar, and icon menus |



19.94 PREVIEWDELAY system variable

19.94.1 Delay to preview selection

Specifies how many milliseconds to wait before highlighting the (sub)entity(ies) under the cursor.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1000 |
| Default value: | 30 |

19.95 PREVIEWEFFECT system variable

19.95.1 Selection preview effect

Specifies how selection preview is displayed. (Not yet supported)

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Dashed lines 1: Thickened lines 2: Dashed and thickened lines |

19.96 PREVIEWFILTER system variable

19.96.1 Selection preview filter

Specifies which entity types are excluded from selection previewing. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|-------------------|---|
| Range: | to 63 |
| Default value: | 1 |
| Possible options: | 1: Exclude entities on locked layers 2: Exclude entities in xrefs 4: Exclude tables 8: Exclude multiline text entities 16: Exclude hatch entities 32: Exclude entities in groups |

19.97 PREVIEWTYPE system variable

19.97.1 Preview type

Specifies which view is used for drawing preview thumbnails. (Not yet supported)

| | |
|------------------|------------------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Last saved view 1: Home view |

19.98 PREVIEWWNDINOPENDLG system variable

19.98.1 Preview window in open dialog

Specifies if the the preview pane is displayed in the Open dialog box.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Range: | On |
| Possible values: | Off (0): Don't display preview in the Open dialog box On (1): Display preview in the Open dialog box |



19.99 PRINTFILE system variable

19.99.1 Print file

Specifies the alternate name for plot files.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | . |

19.100 PRINTPDFPREVIEW system variable

19.100.1 Print As PDF Preview

Specifies whether Print As PDF preview uses a system default PDF viewer or an internal program window.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Use BricsCAD window 1: Use external viewer |

19.101 PRODUCT system variable

19.101.1 Product

Displays the product name.

Read-only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | "BricsCAD" |



19.102 PROFILEOFFSETBEHAVIOR system variable

19.102.1 Profile offset behavior

Allows to keep the position of the solid or its axis when changing the profile offset.

BricsCAD only

| | |
|------------------|-------------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Keep axis 1: Keep solid |

19.103 PROGBAR system variable

19.103.1 Progress bar

Specifies the display of the progress bar.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Don't show progress bar On (1): Show progress bar |

19.104 PROGRAM system variable

19.104.1 Program

Displays the program name.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |



| | |
|----------------|------------|
| Default value: | "BricsCAD" |
|----------------|------------|



19.105 PROJECTIONTYPE system variable


19.105.1 Drawing views position scheme

Switches between first and third angle projection types. These angle projections are a way to represent 3D entities in 2D drawing views. These projection types will show the same views but the difference between the two types is the position of these views (top, right, left, bottom). See Generated drawing views to learn more about it.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: First angle projection type (Europe). 1: Third angle projection type (United States, Canada, Australia). |

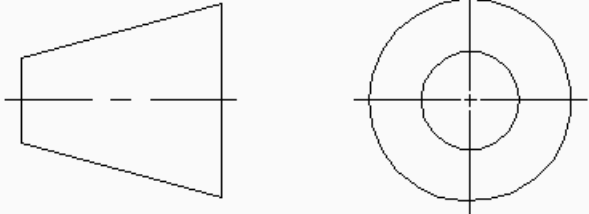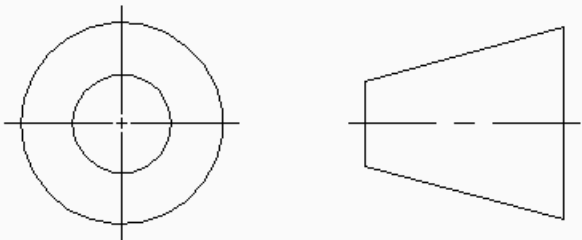

| Projection | Symbol |
|-------------|--|
| First angle |  |
| Third angle |  |

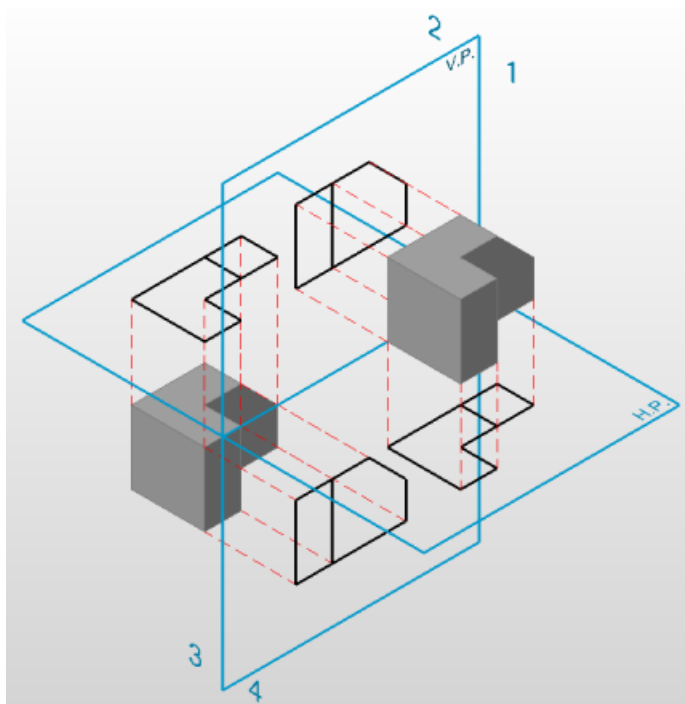



19.106 PROJECTNAME system variable

19.106.1 Project name

Gives a project name to the current drawing. Project names help to keep track of Xrefs and images easier by assigning additional support paths specific to the project only.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | |

19.107 PROJECTSEARCHPATHS system variable

19.107.1 Project search paths

Stores a list of project names, each holding a list of folders to be searched. If external references and images are not found in the saved path, the project search paths are used to find the external references and images.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

19.108 PROJMODE system variable

19.108.1 Projection mode

Specifies the projection mode for the TRIM and EXTEND commands. If the cutting entity is not in the same plane as the entity you want to TRIM/EXTEND, this system variable defines how the intersection is to be calculated.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |



| | |
|------------------|--|
| Possible values: | 0: True 3D mode (no projection) 1: Project to the XY plane of the current UCS 2: Project to the current view plane |
|------------------|--|

19.109 PROMPTMENU system variable

19.109.1 Prompt menu

Specifies the command prompt menu mode.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 5 |
| Default value: | 0 |
| Possible values: | 0: Don't display prompt menu 1: Display prompt menu 2: Display prompt menu at top left corner 3: Display prompt menu at top right corner 4: Display prompt menu at bottom left corner 5: Display prompt menu at bottom right corner |

19.110 PROMPTMENUFLAGS system variable

19.110.1 Prompt menu flags

Options to finetune the behavior of prompt menus. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 7 |
| Default value: | 0 |



| | |
|-------------------|---|
| Possible options: | 1: Show hidden options. Hidden options display in italics. 2: Hide prompt menu during selection 4: Disable selection options in the prompt menu |
|-------------------|---|

19.111 PROMPTOPTIONFORMAT system variable

19.111.1 Prompt option format

Specifies how command options are displayed in the Command line prompt. A command option has a keyword, a description and a shortcut. The shortcut is the keyword without lower case characters (a-z).

e.g. the third option of the CIRCLE command:

Keyword = TanTanRad

Description = Tangent-Tangent-Radius

Shortcut = TTR

Note: The PROMPTOPTIONTRANSLATEKEYWORDS user preference controls whether translations of command option keywords are loaded or not. If disabled, the local keyword will be a copy of the global (English) keyword. As a result global shortcuts can be used without an underscore.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 4 |
| Default value: | 0 |



| | |
|------------------|---|
| Possible values: | <p>0: Show description only, adjust casing to mark shortcut Select center of circle or [2 Point/3 Point/Tangent-Tangent-Radius/turn Arc into circle/Multiple circles]: This is the default prompt option format in the English version. In other versions the default prompt option format depends on local standards.</p> <p>1: Show keyword only Select center of circle or [2Point/3Point/TanTanRad/Arc/Multiple]:</p> <p>2: Show description and keyword in brackets Select center of circle or [2 Point(2Point)/3 Point(3Point)/Tangent-Tangent-Radius(TanTanRad)/Turn arc into circle(Arc)/Multiple circles(Multiple)]:</p> <p>3: Show description and shortcut in brackets Select center of circle or [2 Point(2P)/3 Point(3P)/Tangent-Tangent-Radius(TTR)/Turn arc into circle(A)/Multiple circles(M)]:</p> <p>4: Show local keyword and global keyword in brackets (relevant in localized versions only) Select center of circle or [2Point/3Point/TanTanRad/Arc/Multiple]:</p> |
|------------------|---|

19.112 PROMPTOPTIONTRANSLATEKEYWORDS system variable

19.112.1 Prompt option translate keywords

Specifies whether translations of command option keywords are loaded or not. If disabled, the local keyword will be a copy of the global (English) keyword. As a result global shortcuts can be used without underscore.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't load translations of keywords On (1): Load translations of keywords |

19.113 PROPAGATESEARCHSPACE system variable

19.113.1 Search space

Controls an extra prompt in which propagates ask for a search space. With this search space selection, the places that will be propagated to can be limited.

BricsCAD only



| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 (OFF) |

19.114 PROPAGATETOLERANCE system variable

19.114.1 Position tolerance

The tolerance with which propagate evaluates the equality of positions when mapping details on a target location. Expressed in drawing units.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.00001 |

19.115 PROPERTYPREVIEW system variable

19.115.1 Property preview

Specifies whether selected entities will immediately show property changes when hovering combobox list values in the Properties panel.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Selected entities won't show property changes when hovering combobox list values in the Properties panel On (1): Selected entities will show property changes when hovering combobox list values in the Properties panel |

19.116 PROPERTYPREVIEWDELAY system variable

19.116.1 Property Preview Delay

Specifies how many milliseconds to wait before preview the hovered property value.



BricsCAD only

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 100 to 10000 |
| Default value: | 500 |

19.117 PROPERTYPREVIEWOBJLIMIT system variable

19.117.1 Property Preview Object Limit

Specifies the maximum number of entities for Property Preview (no Property Preview if more is selected).

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 30000 |
| Default value: | 500 |

19.118 PROPPREVTIMEOUT system variable

19.118.1 Property Preview Timeout

Specifies the time (in seconds) allowed for Property Preview generation, before it is canceled.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 5 |
| Default value: | 1 |



19.119 PROPUNITS system variable

19.119.1 Property units

Specifies whether certain types of property values are automatically formatted (e.g. mm²/cm²/m² for areas), when INSUNITS is not zero.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 255 |
| Default value: | 47 |
| Possible values: | 1: Format length properties 2: Format area properties 4: Format volume properties 8: (Reserved) 16: Format dynamic dimensions 32: Format mass properties |

19.120 PROXYGRAPHICS system variable

19.120.1 Proxy graphics

Specifies whether images of proxy entities are saved in the drawing. If switched off, a bounding box displays instead.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't save images with the drawing On (1): Save images with the drawing |

19.121 PROXYNOTICE system variable

19.121.1 Proxy notice

Displays a notice when you open a drawing containing custom entities created by an application that is not present.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display proxy warning On (1): Display proxy warning |

19.122 PROXYSHOW system variable

19.122.1 Proxy show

Specifies how proxy entities display in a drawing.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Proxy entities are not displayed 1: Graphic images are displayed for all proxy entities 2: Only the bounding box is displayed for all proxy entities |

19.123 PROXYWEBSEARCH system variable

19.123.1 Proxy web search

Specifies whether the program checks for object enablers.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Prevent checking for object enablers 1: Check for object enablers only if a live Internet connection is present |



19.124 PSLTSCALE system variable

19.124.1 Paper space linetype scale

Specifies the linetype scaling in paper space. If On or 1, the length of the dashes is based on paper space drawing units. Linetypes display identically, in various viewports which are scaled differently. This means that the linetype scaling is independent from the viewport scale. When changing PSLTSCALE, REGEN or REGENALL is needed to update the display.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: No special linetype scaling 1: Viewport scaling governs linetype scaling |

19.125 PSOLHEIGHT system variable

19.125.1 Polysolid height

Specifies the default height, in drawing units, used by the POLYSOLID command, for swept solid entities.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 80.0 |

19.126 PSOLWIDTH system variable

19.126.1 Polysolid width

Specifies the default width, in drawing units, used by the POLYSOLID command, for swept solid entities.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 5.0 |



19.127 PSTYLEMODE system variable

19.127.1 Plot style mode

Indicates the plot style mode of the current drawing: Color-Dependent or Named-Plot-Style. To convert the current drawing to use named or color-dependent plot styles, use CONVERTPSTYLES.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Named plot style tables 1: Color-dependent plot style tables |

19.128 PSTYLEPOLICY system variable

19.128.1 Plot style policy

Specifies whether the color of an entity is associated with its plot style. If PSTYLEPOLICY is 0, the plot style for new entities is set to the default, defined in DEFPLSTYLE and the plot style for new layers is set to the default, defined in DEFLPLSTYLE.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: No association between color and plot style 1: Associate an entity's plot style with its color |

19.129 PSVPSCALE system variable

19.129.1 Paper space viewport scale

Specifies the scale factor for new viewports. The view scale factor is used with the VPORTS command. The view scale factor is defined by comparing the ratio of units in paper space to the units in newly created



model space viewports. The view scale factor you set is used with the VPORTS command. A value of 0 means the scale factor is Scaled to Fit.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

19.130 PUBLISHALLSHEETS system variable

19.130.1 Publish all sheets

Specifies whether to load the contents of the active document or of all open documents in the Publish dialog box.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Only the contents of the current document automatically load On (1): The contents of all open documents automatically load |

19.131 PUBLISHCOLLATE system variable

19.131.1 Collate published sheets

Specifies whether to combine published sheets with equal output configurations into single multi-page plot job.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 (OFF) |

19.132 PUCSBASE system variable

19.132.1 Paper space UCS base

Specifies the name of the UCS that defines the orthographic UCS in paper space.



Read-only

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

19.133 PDFANIMATIONFPS system variable

19.133.1 Frames per second

Frames per second for an animation.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 24 |



20. Q

20.1 QAFLAGS system variable

20.1.1 Quality Assurance flags

Internal system variable with flags for Quality Assurance and testing. The value is stored as a bitcode using the sum of the values of all selected options.

Attention: this is subject to change, and not intended for regular use. Some of these options could have unpredictable or unwanted side-effects.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 32767 |
| Default value: | 0 |
| Possible options: | <ul style="list-style-type: none">1: Red device: no low quality draw2: No pause during text screen listings4: No 'alert' dialogs (text display instead)8: Have Warnings act as Errors and stop scripts16: Minimal audit report32: Disable window recreation on switch between 2d and rendered visual styles.64: Enable various performance measurements printed as info prompts128: Parallel vectorization: EnableSchedulerLogOutput256: Cmd message enable512: Dcl take screenshot1024: Print time on statusbar2048: No crash dump file4096: Create assert log file8192: Create RED files during rendering16384: Parallel vectorization performance measurement |

20.2 QTEXTMODE system variable

20.2.1 Quick text mode

Specifies how text entities are displayed. When On: this turns on quick text mode, rendering all text – text, mtext, attributes, dimension text, and so on—as rectangles. When Off (0): this turns off quick text mode, returning text to its normal display. This is useful when drawings contain much text, thereby slowing down







the display of the drawing, but you still need to see the location of the text. The rectangles display the color of the text as well. To view changes on existing entities, perform a REGEN.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Range: | Off |
| Possible values: | Off (0): Don't display box in place of text On (1): Display box in place of text |



ZONE 1 is smaller than ZONE 2

The area of ZONE 3 is equal
to the area of ZONE 1

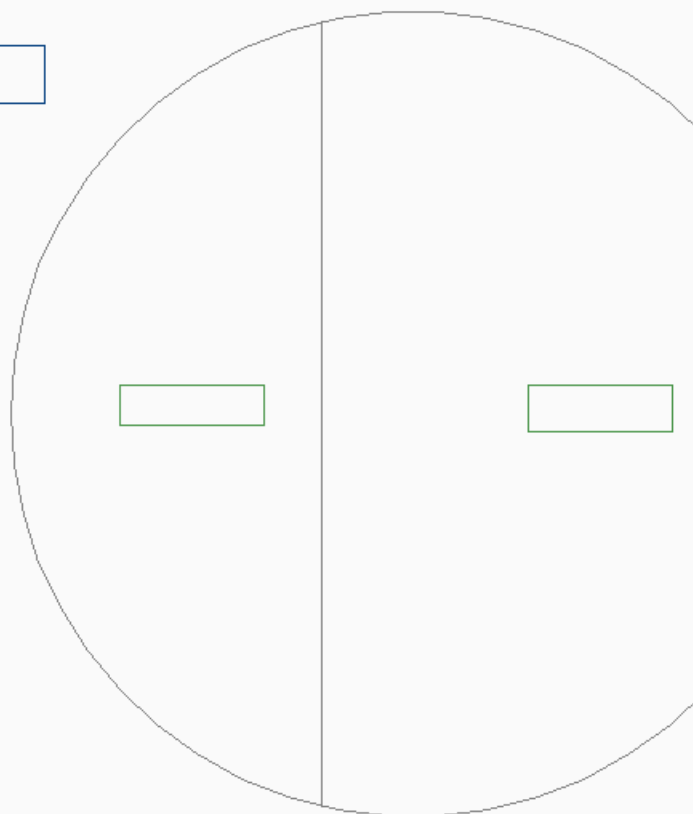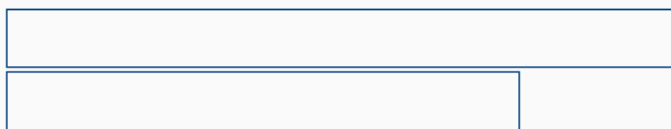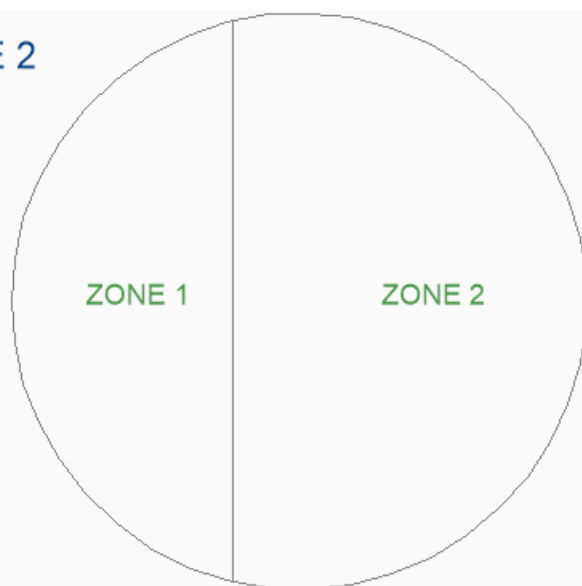



20.3 QUADCOMMANDLAUNCH system variable

20.3.1 Quad default command launch

Enables launching the default quad command without requiring to click on the button. The default quad command depends on which command from the quad is used last.

When 0: hover over an entity to see the quad and click on the command button to launch the command.

When 1: hover over an entity to see the quad and right-click on the entity to launch the command, instead of clicking on the command button first.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Launch default quad command only by pressing button 1: Launch default quad command on mouse right-click when quad is displayed |

20.4 QUADDISPLAY system variable

20.4.1 Quad display

Specifies when to display the quad. When the value is 8: suppress the quad when hovering over entities that are not in the current selection set; set **Show Quad on right-click**ON to display the Quad. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -15 to 15 |
| Default value: | 5 |



| | |
|-------------------|--|
| Possible options: | negative: Switch off quad 1: Display the quad when the cursor hovers on an entity 2: Display the quad when entities are selected 4: Display the quad on right click 8: Suppress the quad on hover when entities are selected |
|-------------------|--|

20.5 QUADEXPANDDELAY system variable

20.5.1 Quad expand delay

Specifies the delay after which the quad will expand after mouse-enter.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 160 |

20.6 QUADEXPANDTABDELAY system variable

20.6.1 Quad expand tab delay

Specifies the delay after which hovering over a quad tab will expand the underlying buttons.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 50 |

20.7 QUADGOTRANSSPARENT system variable

20.7.1 Quad go transparent

Specifies if the quad starts should go transparent while the mouse is moving away from it.

BricsCAD only

| | |
|-----------|------------|
| Type: | Boolean |
| Saved in: | Preference |



| | |
|------------------|---|
| Default value: | Off |
| Possible values: | Off (0): Don't go transparent On (1): Go transparent |

20.8 QUADHIDEDELAY system variable

20.8.1 Quad hide delay

Specifies how many milliseconds to wait before the quad is hidden as soon as the mouse stops moving while it's in the QuadHideMargin zone.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 350 |

20.9 QUADHIDEMARGIN system variable

20.9.1 Quad hide margin

Specifies the width of a margin around the quad. As long as the mouse keeps moving inside this margin, the quad will stay visible. It will gradually go transparent if QuadGoTransparent is on. As soon as the mouse movement stops, or when the mouse is moved beyond the margin, the quad will disappear.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 50 |

20.10 QUADICONSIZE system variable

20.10.1 Quad icon size

Specifies the size of the quad tool buttons.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Workspace |
| Default value: | 1 |
| Possible values: | 0: Small icons 1: Large icons 2: Extra-large icons |


Small Icons



Large Icons



Extra Large Icons

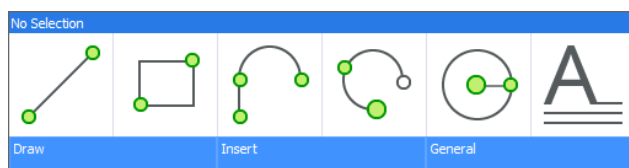

20.11 QUADICONSPACE system variable

20.11.1 Quad icon space

Specifies the margin around the icons.

Narrow



Normal





Wide



BricsCAD only

| | |
|------------------|-----------------------------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Narrow 1: Normal 2: Wide |

20.12 QUADMOSTRECENTITEMS system variable

20.12.1 Quad most recent items

Specifies how many most recent items should be displayed in the top bar of the quad. The remaining slots are filled with intelligent suggestions depending on the user context.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 16 |
| Default value: | 4 |

20.13 QUADPOPUPCORNER system variable

20.13.1 Quad popup corner

Specifies where the quad will popup relative to the current cursor position.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Upper right 1: Middle right 2: Lower right |

20.14 QUADROLLOVERDELAY system variable

20.14.1 Quad rollover delay

Specifies the delay after which rollover properties appear on the quad.

Note: This is ignored in rollover-only mode (when QUADDISPLAY is off and ROLLOVERTIPS is on - in that case, the rollover properties are always shown immediately)

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 10000 |
| Default value: | 0 |

20.15 QUADSHOWDELAY system variable

20.15.1 Quad show delay

Specifies how many milliseconds to wait before the quad is shown when highlighting a (sub)entity.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 150 |



20.16 QUADWIDTH system variable

20.16.1 Quad width

Specifies in how many columns the quad icons are arranged.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 4 to 16 |
| Default value: | 6 |



21. R

21.1 R12SAVEACCURACY system variable

21.1.1 R12 Save accuracy

Specifies the number of segments between spline control segments or on 90 degrees elliptical arcs for saving ellipses and splines to R12.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 8 |

21.2 R12SAVEDEVIATION system variable

21.2.1 R12 Save deviation

Specifies the deviation for saving ellipses and splines to R12.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.0 |

21.3 RASTERPREVIEW system variable

21.3.1 Raster preview

Specifies whether or not a preview image is saved with the drawing. This image is displayed by file managers and other programs.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't create preview image On (1): Create preview image |
|------------------|---|

21.4 RE_INIT system variable

21.4.1 Reinitialize Aliases

Reinitializes the digitizer, digitizer port and/or reloads PGP file (command aliases). The value is stored as a bitcode using the sum of the values of all selected options.

Read-only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 21 |
| Default value: | 0 |
| Possible options: | 1: Digitizer input/output port reinitialization 4: Digitizer reinitialization 16: PGP file reinitialization (reload) |

21.5 REALTIMESPEEDUP system variable

21.5.1 Realtime speedup

Specifies the number of mouse messages that are skipped during Realtime Pan operations.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 10 |
| Default value: | 5 |

21.6 REALWORLDSCALE system variable

21.6.1 Real world scale

Specifies the rendering of materials with units set to real-world scale.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't render real-world scale materials On (1): Render real-world scale materials |

21.7 RECENTFILES system variable

21.7.1 Recent file list max count

Specifies the maximum number of files shown in the "Recent Files" section in the File menu (MRU's). Values between 0 and 60 are accepted.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 60 |
| Default value: | 12 |

21.8 RECENTPATH system variable

21.8.1 Recent path

Shows the most recently used path.

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

21.9 REDHILITE_DUCSLOCKED_FACE_ALPHA system variable

21.9.1 Face opacity

Specifies the transparency of the highlighted face to which the Dynamic UCS has been locked by pressing the Shift key. 0 is fully transparent and 100 is fully opaque.

BricsCAD only



| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 25 to 100 |
| Default value: | 25 |

21.10 REDHILITE_DUCSLOCKED_FACE_COLOR system variable

21.10.1 Face color

Specifies the highlight color of a face to which the Dynamic UCS has been locked by pressing the Shift key.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | #007AFF |

21.11 REDHILITE_HIDDENEDGE_ALPHA system variable

21.11.1 Edge opacity

Specifies the transparency of the edge. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 50 |

21.12 REDHILITE_HIDDENEDGE_COLOR system variable

21.12.1 Edge color

Specifies the color of the edge.

BricsCAD only



| | |
|----------------|---|
| Type: | String |
| Saved in: | Preference |
| Default value: | White (Settings dialog) #FFFFFF (Command line) |

21.13 REDHILITEFULL_EDGE_ALPHA system variable

21.13.1 Edge opacity

Specifies the transparency of the edge. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 100 |

21.14 REDHILITEFULL_EDGE_COLOR system variable

21.14.1 Edge color

Specifies the color of the edge.

BricsCAD only

| | |
|----------------|---|
| Type: | String |
| Saved in: | Preference |
| Default value: | 0, 122, 255 (Settings dialog) #007AFF (Command line) |

21.15 REDHILITEFULL_EDGE_SHOWHIDDEN system variable

21.15.1 Hidden edges

Specifies whether hidden edges should be displayed.

BricsCAD only



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't show hidden edges On (1): Show hidden edges |

21.16 REDHILITEFULL_EDGE_SMOOTHING system variable

21.16.1 Edge smoothing

Specifies whether to display smooth (anti-aliased) lines.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Smooth edges off On (1): Smooth edges on |

21.17 REDHILITEFULL_EDGE_THICKNESS system variable

21.17.1 Edge thickness

Specifies the thickness of the edge (in pixels).

BricsCAD only

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.0 to 20.0 |
| Default value: | 2.0 |



21.18 REDHILITEFULL_FACE_ALPHA system variable

21.18.1 Face opacity

Specifies the transparency of the face. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 10 |

21.19 REDHILITEFULL_FACE_COLOR system variable

21.19.1 Face color

Specifies the color of the face.

BricsCAD only

| | |
|------------------|---|
| Type: | String |
| Saved in: | Preference |
| Possible values: | 0, 122, 255 (Settings dialog) #007AFF (Command line) |

21.20 REDHILITEPARTIAL_SELECTEDEDGE_ALPHA system variable

21.20.1 Edge opacity

Specifies the transparency of the edge. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 100 |



21.21 REDHILITEPARTIAL_SELECTEDEDGE_COLOR system variable

21.21.1 Edge color

Specifies the color of the edge.

BricsCAD only

| | |
|----------------|---|
| Type: | String |
| Saved in: | Preference |
| Default value: | 255, 128, 0 (Settings dialog) #FF8000 (Command line) |

21.22 REDHILITEPARTIAL_SELECTEDEDGE_SHOWGLOW system variable

21.22.1 Glow

Specifies whether a second line below the primary line is shown, which can be used for glow effect.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't show glow On (1): Show glow |

21.23 REDHILITEPARTIAL_SELECTEDEDGE_SMOOTHING system variable

21.23.1 Edge smoothing

Specifies whether to display smooth (anti-aliased) lines.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |



| | |
|------------------|--|
| Possible values: | Off (0): Smooth edges off On (1): Smooth edges on |
|------------------|--|

21.24 REDHILITEPARTIAL_SELECTEDEDGE_THICKNESS system variable

21.24.1 Edge thickness

Specifies the thickness of the edge (in pixels).

BricsCAD only

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.0 to 20.0 |
| Default value: | 2.0 |

21.25 REDHILITEPARTIAL_SELECTEDEDGE_GLOW_ALPHA system variable

21.25.1 Glow opacity

Specifies the transparency of the glow. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 75 |

21.26 REDHILITEPARTIAL_SELECTEDEDGE_GLOW_COLOR system variable

21.26.1 Glow color


Specifies the color of the glow.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|---|
| Saved in: | Preference |
| Default value: | White (Settings dialog) #FFFFFF (Command line) |

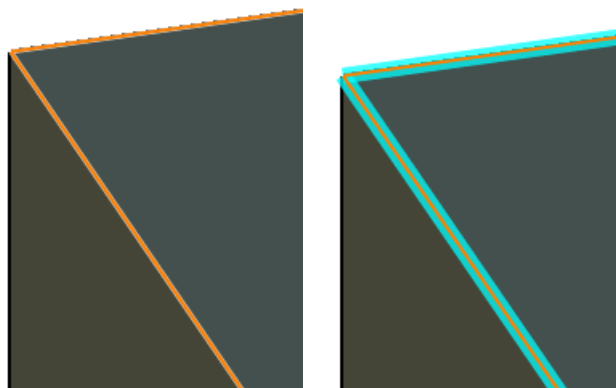

21.27 REDHILITEPARTIAL_SELECTEDEDGEGLOW_SMOOTHING system variable

21.27.1 Glow smoothing

Specifies whether to display smooth (anti-aliased) lines for glow.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Smooth glow lines off On (1): Smooth glow lines on |

21.28 REDHILITEPARTIAL_SELECTEDEDGEGLOW_THICKNESS system variable

21.28.1 Glow thickness


Specifies the thickness of the glow (in pixels).

BricsCAD only

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|-------------|
| Saved in: | Preference |
| Range: | 0.0 to 20.0 |
| Default value: | 3.0 |

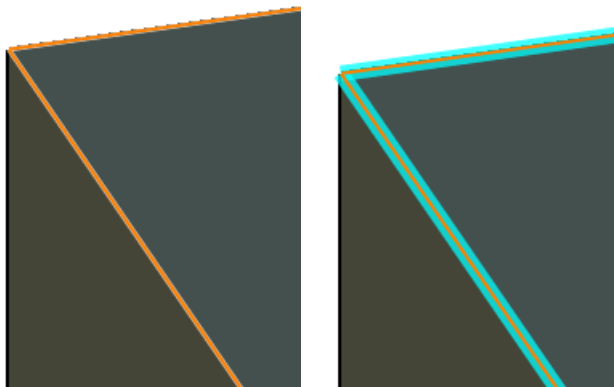

21.29 REDHILITEPARTIAL_SELECTEDFACE_ALPHA system variable

21.29.1 Face opacity

Specifies the transparency of the face. 0 is fully transparent and 100 is fully opaque.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 100 |
| Default value: | 10 |

21.30 REDHILITEPARTIAL_SELECTEDFACE_COLOR system variable

21.30.1 Face color

Specifies the color of the face.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|------------|
| Saved in: | Preference |
| Default value: | #007AFF |

21.31 REDHILITEPARTIAL_UNSELECTEDEGE_SHOWHIDDEN system variable

21.31.1 Hidden edges

Specifies whether hidden edges should be displayed.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't show hidden edges On (1): Show hidden edges |

21.32 REDSDKLINESMOOTHING system variable

21.32.1 Line smoothing

Specifies whether line smoothing is enabled for 3d rendering modes. Has no effect if anti-aliasing is on.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Line smoothing off On (1): Line smoothing on |

21.33 REDUCELENGTHTYPE system variable

21.33.1 Reduce Length Type

Defines the default flow fitting reduce length type.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | (0): Profile Width Ratio (1): Absolute Value |

21.34 REDUCELENGTHVALUE system variable

21.34.1 Reduce Length Value

Defines the default flow fitting reduce length value.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.5 |

21.35 REFEDITLOCKNOTINWORKSET system variable

21.35.1 Refedit lock

Specifies whether entities that are not in the working set will be locked during the **RefEdit** command.

Locked entities are seen, but cannot be edited.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Lock entities not in working set off On (1): Lock entities not in working set on |



21.36 REFEDITNAME system variable

21.36.1 Refedit name

Shows the name of the currently edited reference.

Read-only

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | |

21.37 REFPATHTYPE system variable

21.37.1 Default path type of reference files

Controls whether reference files store a full, relative or no path upon attachment.

| | |
|----------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 1 |
| | 0: No path 1: Relative path 2: Full path |

Uwaga: Reference files that are already attached are not affected.

21.38 REGENMODE system variable

21.38.1 Regeneration mode

Toggles the automatic regeneration of the drawing On/Off. BricsCAD will regenerate the display automatically when REGENMODE is On, but in a few cases a forced regeneration of the drawing might be necessary. This is done by the REGEN command.

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |



| | |
|------------------|--|
| Possible values: | Off (0): Turn off REGENAUTO command On (1): Turn on REGENAUTO command |
|------------------|--|

21.39 REGEXPAND system variable

21.39.1 Registry paths expanding type

Specifies type of storing paths in a registry (absolute or expandable). The new value is applied after application re-start.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't store paths in a portable format using environment variables On (1): Store paths in a portable format using environment variables |

21.40 REMEMBERFOLDERS system variable

21.40.1 Remember folders

Specifies the default path for the standard file selection dialog boxes.

When 0: When you start the program by double-clicking a shortcut icon, if a Start In path is specified for the icon, that path is used as the default for all standard file selection dialog boxes.

When 1: The default path in each standard file selection dialog box is the last path used in that dialog box. The Start In folder specified for the shortcut icon is not used.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Use Start In path 1: Use last path used |



21.41 RENDERCOMPOSITIONMATERIAL system variable

21.41.1 Render composition material

Controls whether composition materials in a BIM model are rendered or not in the **BIM, Modeling, Realistic** or **X-Ray** visual style.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0-1 (On-Off) |
| Default value: | 0 |
| Possible values: | 0: Do not render the materials of compositions and their plies. 1: Render the materials of compositions and their plies. |

Uwaga:

The RENDERCOMPOSITIONMATERIAL system variable is only available for BIM and Ultimate license levels.

21.42 RENDERMATERIALDOWNLOAD system variable

21.42.1 Download missing resources for render materials

Specifies whether some missing resources for render materials are downloaded automatically.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't download missing resources for render materials On (1): Download missing resources for render materials |

21.43 RENDERMATERIALSPATH system variable

21.43.1 Render materials directory path

Specifies the folder(s) in which BricsCAD should look for user created render material files.



BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

21.44 RENDERUSINGHARDWARE system variable

21.44.1 Render using hardware

Specifies if rendering should use the hardware. Switch this off if you encounter rendering problems caused by graphic card or driver. The application might need to be restarted after changing this setting.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: Use software only (slower) 1: Prefer hardware (faster) 2: Prefer software (only for testing purposes) 3: Use hardware only (only for testing purposes) |

21.45 REPORTPANELMODE system variable

21.45.1 Report panel mode

Specifies the mode of report panel. Applicable only for commands which support it.

- Classic: Report panel has its classic appearance as dockable window.
- Modern: Report panel is a transparent window.
- Hidden: Report panel is a transparent window that is hidden into the status bar.

BricsCAD only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |



| | |
|------------------|--------------------------------------|
| Default value: | 2 |
| Possible values: | 0: Classic 1: Modern 2: Hidden |

21.46 REPOSITORYFOLDER system variable

21.46.1 Repository folder

Specifies the path to the current repository.

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

21.47 RESTORECONNECTIONS system variable

21.47.1 Restore Connections

Controls the restoring of structural connections after commands.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |

21.48 RESTORELOSTFOCUS system variable

21.48.1 Restore lost focus (Linux)

Specifies whether to restore a lost focus. Depending on window manager, focus may be lost by using short-lived windows like quad, tipsto.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Possible values: | Off (0): Do not try to recover from focus loss. On (1): Attempt automatic recovery from focus loss. |



21.49 RETAINEDGRAPHICS system variable

21.49.1 Retained Graphics

Toggle the use of retained graphics. Retained graphics can improve the performance of certain operations (for example rotating and panning the camera).


| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | 1 |
| Possible values: | Off (0): Don't use retained graphics. On (1): Use retained graphics |

21.50 REVCLLOUDARCSTYLE system variable


21.50.1 Revision cloud default arc style

Specifies the default arc style for revision clouds: Normal or Calligraphy.

| | |
|------------------|-----------------------------|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Normal 1: Calligraphy |

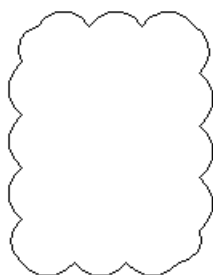

Normal

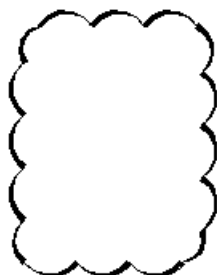

Calligraphy




21.51 REVCLLOUDCREATEMODE system variable


21.51.1 Revision cloud creation mode

Specifies the default mode for creating revision clouds.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Freehand 1: Rectangular 2: Polygonal |

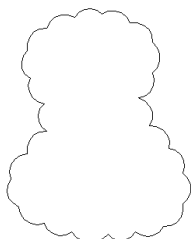

Freehand

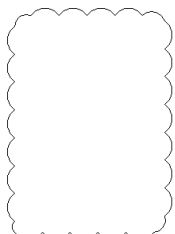

Rectangular



Polygonal

21.52 REVCLLOUDGRIPS system variable

21.52.1 Revision cloud grips

Specifies how grips are displayed for revision cloud entities.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Displays grips on every arc segment On (1): Displays only the most relevant grips |



21.53 REVCLLOUDMAXARCLENGTH system variable

21.53.1 Revision cloud default maximum arc length

Specifies the default maximum arc length for revision clouds. The maximum arc length is multiplied by the value of the DIMSCALE variable.

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.375 |

21.54 REVCLLOUDMINARCLENGTH system variable

21.54.1 Revision cloud default minimum arc length

Specifies the default minimum arc length for revision clouds. The minimum arc length is multiplied by the value of the DIMSCALE variable.

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.375 |

21.55 RHINOVERSION system variable

21.55.1 Rhino version

Version of the 3dm file (open-source 3D modal format).

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 2 to 60 |
| Default value: | 60 |



| | |
|------------------|--|
| Possible values: | 2: Rhino 2 3: Rhino 3 4: Rhino 4 50: Rhino 5 60: Rhino 6 |
|------------------|--|

21.56 RIBBONDOCKEDHEIGHT system variable

21.56.1 Ribbon docked height

Stores the preferred height of the ribbon bar. The height can have values between 0 and 500. For automatic height calculation set value to 0.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 500 |
| Default value: | 0 |

21.57 RIBBONPANELMARGIN system variable

21.57.1 Panel margin

Size, in pixels, of blank space at ribbon panel edges.

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 50 |
| Default value: | 8 |

21.58 RIBBONSTATE system variable

21.58.1 Ribbon state

Indicates whether the ribbon bar is shown or not. The ribbon can be closed with the RIBBONCLOSE command and can be displayed with the RIBBON command.

Read-only



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Don't show ribbon bar Registry On (1): Show ribbon bar |

21.59 RIBBONTOOLSIZE system variable

21.59.1 Ribbon tool size

Specifies the size of the ribbon tool buttons.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Small buttons 1: Large buttons 2: Extra-large buttons |

21.60 ROAMABLEROOTPREFIX system variable

21.60.1 Roamable root prefix

Stores the full path to the root folder where roamable files for the current user, such as menus and plotstyles, were installed.

Read-only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |



21.61 ROLLOVEROPACITY system variable

21.61.1 Rollover opacity

Specifies a degree of opacity for the quad when it's in rollover state. Between 10 (very transparent) and 100 (fully opaque).

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 10 to 100 |
| Default value: | 100 |

21.62 ROLLOVERSELECTIONSET system variable

21.62.1 Rollover selection set

Specifies if/how the rollover tips show properties of hovered selection set. (setting the value to 2 can be slow on large selection sets).

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: No selection set properties 1: General selection set properties 2: Properties shared by all selected entities |

21.63 ROLLOVERTIPS system variable

21.63.1 Rollover tips

Specifies whether entity properties are displayed in the quad while hovering.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Don't show properties on hover On (1): Show properties on hover |

21.64 RTDISPLAY system variable

21.64.1 Realtime display

Specifies whether raster images and OLE entities fully display during Realtime ZOOM or PAN or as outlines only.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Display raster images and OLE content 1: Display outlines only |

21.65 RTROTATIONSPPEEDFACTOR system variable

21.65.1 Realtime Rotation Speed Factor

Specifies the rotation speed for the Look and Walk tools (rtlook and rtwalk commands) [0.01 - 100].

BricsCAD only

| | |
|----------------|--------------|
| Type: | Real |
| Saved in: | Preference |
| Range: | 0.01 to 100. |
| Default value: | 1 |

21.66 RUBBERBANDCOLOR system variable

21.66.1 Rubberband color

Specifies the color for the Rubberband line. Values between 1 and 255 are accepted.



BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 40 |

21.67 RUBBERBANDSTYLE system variable

21.67.1 Rubberband dashed style

Enables or disables the dashed visualization for the rubberband.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Dashed style off On (1): Dashed style on |

21.68 RUBBERSHEET (for OS X) system variable

21.68.1 Rubbersheet Touchpad

Specifies whether to allow simultaneous zoom/rotate/pan by dual finger move on touchpad.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Dual finger touch simultaneously zooms/rotates/pans off On (1): Dual finger touch simultaneously zooms/rotates/pans on |



21.69 RUBBERSHEETSENSIBILITY (FOR OS X) system variable

21.69.1 Rubbersheet gesture activation sensibility

Specifies how easy touchpad gestures are activated.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 10 |
| Default value: | 5 |

21.70 RULERDISPLAY system variable

21.70.1 Ruler Display

Specifies the display of the ruler when moving objects using the manipulator or the DMPUSHPULL command.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Do not display ruler On (1): Display ruler when objects are moved using the manipulator or the DMPUSHPULL command. |

21.71 RULERTEXTCOLOR system variable

21.71.1 Ruler Text Color

Specifies the color of the text on the ruler if the RULERDISPLAY system variable is on.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #c8c8c8 |



| | |
|------------------|--|
| Possible values: | RGB color code Hex color code Index color code |
|------------------|--|

A new value for the variable can be entered in the command bar.

21.72 RUNASLEVEL system variable

21.72.1 Run as license level

Specifies at which license level to run BricsCAD. The new level will be in use after restarting. If the purchased license level is lower than RUNASLEVEL, RUNASLEVEL is ignored.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 5 |
| Default value: | 5 |
| Possible values: | 0: Lite 1: Pro 2: Platinum (Obsolete) 3: BIM 4: Mechanical 5: Ultimate |

21.73 RVTRFALEVELOFDETAIL system variable

21.73.1 Level of detail

Specifies the level of detail for RVT and RFA Import.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 3 |
| Default value: | 3 |



| | |
|------------------|-----------------------------------|
| Possible values: | 1: Coarse 2: Medium 3: Fine |
|------------------|-----------------------------------|

21.74 RVTVALIDATEBREP system variable

21.74.1 Validate BREP geometry

Disabling this may import more geometry without checking its integrity.

BricsCAD only

| | |
|------------------|------------------------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 1 |
| Possible values: | 0: Off (Disable) 1: ON (Enable) |



22. S

22.1 SAFEMODE system variable

22.1.1 Safe mode

Specifies if executable code can be loaded and executed in the current session. Starting in a clean environment can help to eliminate potential causes of a crash.

Read-only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |
| Possible values: | Off (0): Allows executable code run On (1): Does not allow executable code to run |

22.2 SAVECHANGETOLAYOUT system variable

22.2.1 Save changes to layout

Specifies whether to save changes the user makes in print dialog to the layout.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |

22.3 SAVEFIDELITY system variable

22.3.1 Save fidelity

Specifies whether the drawing is saved with visual fidelity. Controls whether the current display of the drawing is preserved when opened in a program that does not support annotative entities.

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|---|
| Range: | 0 to 1 |
| Default value: | On |
| Possible values: | Off (0): Don't save with visual fidelity On (1): Save with visual fidelity |

22.4 SAVEFILE system variable

22.4.1 Save file name

Specifies the current automatic save file name.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

22.5 SAVEFILEPATH system variable

22.5.1 Save file path

Specifies the path to the folder where automatic saves and temporary files are stored.

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

22.6 SAVEFORMAT system variable

22.6.1 Save format

Specifies the default save format for a drawing.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 39 |
| Default value: | 4 |



| | |
|------------------|--|
| Possible values: | 1: DWG 2018 2: DXF 2018 3: Binary DXF 2018 4: DWG 2013 5: DXF 2013 6: Binary DXF 2013 7: DWG 2010 8: DXF 2010 9: Binary DXF 2010 10: DWG 2007 11: DXF 2007 12: Binary DXF 2007 13: DWG 2004 14: DXF 2004 15: Binary DXF 2004 16: DWG 2000 17: DXF 2000 18: Binary DXF 2000 19: DWG R14 20: DXF R14 21: Binary DXF R14 22: DWG R13 23: DXF R13 24: Binary DXF R13 25: DWG R11/R12 26: DXF R11/R12 27: Binary DXF R11/R12 28: DXF R10 29: Binary DXF R10 30: DXF R9 |
|------------------|--|

22.7 SAVELAYERSNAPSHOT system variable

22.7.1 Save Layer Snapshot with view

Specifies whether to save the layer settings with newly created views.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |



22.8 SAVENAME system variable

22.8.1 Saved drawing name

Shows the file name and folder path of the current drawing.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

22.9 SAVEONDOCSWITCH system variable

22.9.1 Save on document switch

Specifies whether the drawing is saved automatically when another document is activated.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't save on doc switch On (1): Save on doc switch |

22.10 SAVEROUNDTRIP system variable

22.10.1 Save roundtrip

Specifies the saving of information in a database file to allow round-tripping of entity types not supported in the save file format.

BricsCAD only

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



22.11 SAVETIME system variable

22.11.1 Save time interval

Specifies the interval, in minutes, for automatic saves. If set to zero, automatic saves are turned off. Values between 0 and 240 are accepted.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 240 |
| Default value: | 60 |
| Possible values: | 0: Turn off automatic saving 1 - 240: Saves the drawing at intervals specified (in minutes) |

22.12 SCREENBOXES system variable

22.12.1 Screen menu boxes

Contains the number of boxes displayed in the screen menu. If the screen menu is turned off the value is zero.

Read-only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |

22.13 SCREENMODE system variable

22.13.1 Screen mode

Stores the graphic/text state of the program display.

Read-only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 3 |



| | |
|------------------|---|
| Possible values: | 0: Text screen is displayed 1: Drawing area is displayed 2: Dual-screen display is configured |
|------------------|---|

22.14 SCREENSIZE system variable

22.14.1 Screen size

Shows the size of the current viewport in pixels (width x height).

Read-only

| | |
|-----------|-----------|
| Type: | 2D point |
| Saved in: | Not saved |

22.15 SCRLHIST system variable

22.15.1 Scroll history

Specifies the number of Command lines to track in the Command line.

BricsCAD only

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 or greater |
| Default value: | 256 |

22.16 SDI system variable

22.16.1 Single-document interface (Windows)

Specifies whether a drawing is opened in a new BricsCAD instance or an existing instance. Partially implemented: SDI variable controls double-click behavior for drawings but it is still possible to open multiple documents in each BricsCAD instance. SDI setting 2 and 3 are Not saved. If SDI is set to 3, the program switches it back to 1 when the application that doesn't support multiple drawings is unloaded.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|------------------|---|
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Multiple-drawing interface 1: Single-drawing interface 2: (Read-only) Multiple-drawing interface is disabled because an application has been loaded that does not support multiple drawings 3: (Read-only) Multiple-drawing interface is disabled because the user has set SDI to 1 and the program has loaded an application that does not support multiple drawings. (SDI was set to 1 before the application was loaded) |

22.17 SECTIONRESULTINTERVAL system variable

22.17.1 Section result interval

The distance between generated section blocks in model space.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 10000 |

22.18 SECTIONSCALE system variable

22.18.1 Section scale

Scale of the viewport created as the result of section generation.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.02 |



22.19 SECTIONSETTINGSSEARCHPATH system variable

22.19.1 Section settings search path

Specifies the folder(s) in which BricsCAD® should look for BIM section styles, BIM tag styles and drawing customizations. Search paths are separated by a semicolon (;).

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | " " |

22.20 SECTIONSHEETSETTEMPLATEIMPERIAL system variable

22.20.1 Section sheet set template imperial

Sets the sheetset file (dst) that will be used as a template when a new sheetset is created on generating sections when MEASUREMENT is 0 (imperial). The default file is BIM-section-imperial.dst, which can be found in the {SheetSetTemplatePath} folder.

BricsCAD only

| | |
|----------------|--------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | BIM-section-imperial.dst |

Uwaga: The SECTIONSHEETSETTEMPLATEIMPERIAL system variable is only available for **BIM** and **Ultimate** license levels.

22.21 SECTIONSHEETSETTEMPLATEMETRIC system variable

22.21.1 Section sheet set template metric

Sets the sheetset file (dst) that will be used as template when a new sheetset is created on generating sections when MEASUREMENT is 1 (metric). The default file is BIM-section-metric.dst, which can be found in the {SheetSetTemplatePath} folder.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|------------------------|
| Saved in: | Registry |
| Default value: | BIM-section-metric.dst |

Uwaga: The SECTION SHEET SET TEMPLATE METRIC system variable is only available for **BIM** and **Ultimate** license levels.

22.22 SECURELOAD system variable

22.22.1 Executable file security policy

Specifies security policy for loading executable files.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No security policy 1: Warn if loading from untrusted location 2: Load only from trusted locations |

22.23 SELECTIONANNODISPLAY system variable

22.23.1 Show all annotation scales on selection

Specifies if all scale representations for selected annotative entities are displayed.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Disable annotation scales display On (1): Enable annotation scales display |



22.24 SELECTIONAREA system variable

22.24.1 Selection area

Specifies the display of selection area effects.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't show selection area effects On (1): Show selection area effects |

22.25 SELECTIONAREAOPACITY system variable

22.25.1 Selection area opacity

Specifies the transparency of the selection area (lower value = more transparent). This is only in effect when SELECTIONAREA setting is On.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 100 |
| Default value: | 25 |

22.26 SELECTIONMODES system variable

22.26.1 Selection modes

Specifies which subentities or detected boundaries, should be highlighted in selection preview. The value is stored as a bitcode using the sum of the values of all selected options. While in selection preview, you can use the TAB key to cycle through the included subentity types and detected boundaries.

BricsCAD only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 15 |



| | |
|-------------------|---|
| Default value: | 0 |
| Possible options: | 1: Select edges 2: Select faces 4: Select detected boundaries 8: Select vertices |

22.27 SELECTIONPREVIEW system variable

22.27.1 Selection preview display

Specifies in which cases entities are highlighted when the pickbox cursor hovers over them: when no commands are active or when a command prompts for entity selection. The value is stored as a bitcode using the sum of the values of all selected options.

When QUADDISPLAY is on, the value of the SELECTIONPREVIEW option 'When no commands are active' will be overruled, and treated as 'ON'.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible options: | 1: When no commands are active 2: When a command prompts for entity selection |

22.28 SELECTSIMILARMODE system variable

22.28.1 Match options for SELECTSIMILAR

Specifies which properties must match for an entity of the same type to be selected with SELECTSIMILAR. For this command to operate as intended, at least one property must be turned on. When all properties are turned off, this command selects only the entity(ies) you pick at the 'Select entities' prompt. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 255 |



| | |
|-------------------|---|
| Default value: | 130 |
| Possible options: | 0: Object type 1: Color 2: Layer 4: Linetype 8: Linetype scale 16: Lineweight 32: Plot style 64: Object style 128: Name |

22.29 SETBYLAYERMODE system variable

22.29.1 Options for SETBYLAYERMODE

Specifies which layer properties would be applied by SETBYLAYER command.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 255 |
| Default value: | 255 |
| Possible values: | 0: None 1: Color 2: Linetype 4: Lineweight 8: Material 16: Plot style 32: ByBlock 64: Blocks 128: Transparency |

22.30 SHADEDGE system variable

22.30.1 Shading edges

Specifies how faces and edges display in rendered views.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 3 |
| Possible values: | 0: Faces shaded, edges not highlighted 1: Faces shaded, edges drawn in background color 2: Faces not filled, edges in entity color 3: Faces in entity color, edges in background color |

22.31 SHADEDIF system variable

22.31.1 Shading diffusion

Specifies the ratio of diffuse reflective light to ambient light as a percentage of diffuse reflective light when SHADEDGE is set to 0 or 1.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 100 |
| Default value: | 70 |

22.32 SHEETNUMBERLEADINGZEROES system variable

22.32.1 Sheet number leading zeroes

Specifies how to format the 'Number' value of new sheets.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 8 |
| Default value: | 1 |



| | |
|------------------|--|
| Possible values: | 1: 1 (1, 2, 3, ...) 2: 2 (01, 02, 03, ...) 3: 3 (001, 002, 003, ...) 4: 4 (0001, 0002, 0003, ...) 5: 5 (00001, 00002, 00003, ...) 6: 6 (000001, 000002, 000003, ...) 7: 7 (0000001, 0000002, 0000003, ...) 8: 8 (00000001, 00000002, 00000003, ...) |
|------------------|--|

22.33 SHEETSETAUTOBACKUP system variable

22.33.1 Sheet set automatic backup

Specifies whether a backup file is created whenever a sheet set file is opened. The backup files have the same name as the sheet set file but with a '*.ds\$' extension.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't create backup files On (1): Create backup files |

22.34 SHEETSETTEMPLATEPATH system variable

22.34.1 Sheet Set template path

Specifies the path to the Sheet Set Templates folder. The default path is: `\Users\<user name>\AppData\Local\Bricsys\BricsCAD\V23x64\en_US\Templates`

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

22.35 SHORTCUTMENU system variable

22.35.1 Shortcut menus

Specifies the status of the DEFAULT, EDIT and COMMAND shortcut menus. The value is stored as a bitcode using the sum of the values of all selected options.



| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 31 |
| Default value: | 19 |
| Possible options: | 0: Disable all Default, Edit, and Command mode shortcut menus 1: Enable Default mode shortcut menus 2: Enable Edit mode shortcut menus 4: Enable Command mode shortcut menus (available whenever a command is active) 8: Enable Command mode shortcut menus only when command options are currently available from the Command line 16: Enable display of a shortcut menu when the right button on the pointing device is held down longer |

22.36 SHORTCUTMENUDURATION system variable

22.36.1 Shortcut menu duration

Specifies how long the right button on a pointing device must be pressed to display a shortcut menu.

| | |
|----------------|--------------|
| Type: | Long |
| Saved in: | Registry |
| Range: | 100 to 10000 |
| Default value: | 250 |

22.37 SHOWDOCTABS system variable

22.37.1 Tabs visibility

Toggles showing of the document tabs On/Off. You can make the drawing area larger by hiding the document tabs from the user interface.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Don't make tabs visible On (1): Make tabs visible |

22.38 SHOWFULLPATHINTITLE system variable

22.38.1 Display full path in title

Specifies whether the title bar displays the full path of a drawing, or only the file name.

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |

22.39 SHOWLAYERUSAGE system variable

22.39.1 Layer Usage

Shows information about layer usage in the layer presentation panel. In the column **Current**, the **Layer Usage** icons indicate when viewport settings for the current layout and paper space viewport are different from model space settings:

 Current layer with viewport overrides.

 Layer with viewport overrides.

 Empty layer with viewport overrides.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Do not display Layer Usage On (1): Display Layer Usage |

22.40 SHOWSCROLLBUTTONS system variable

22.40.1 Scroll buttons (Mac & Linux)

With this style, left and right scroll buttons are displayed On/Off.



BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't show scroll buttons On (1): Show scroll buttons |

22.41 SHOWTABCLOSEBUTTON system variable

22.41.1 Close button on tabs (Mac & Linux)

Toggles showing of close button on the tab bars On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't show close button on tabs On (1): Show close button on tabs |

22.42 SHOWTABCLOSEBUTTONACTIVE system variable

22.42.1 Close button on active tab (Mac & Linux)

Toggles showing of close button on the active tab only On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't show close button on the active tab only On (1): Show close button on the active tab only |



22.43 SHOWTABCLOSEBUTTONALL system variable

22.43.1 Close button on all tabs (Mac & Linux)

Toggles showing of close button on all tabs On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't show close button on all tabs On (1): Show close button on all tabs |

22.44 SHOWWINDOWLISTBUTTON system variable

22.44.1 Window list button (Mac & Linux)

With this style, a drop-down list of windows is available On/Off.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Don't show window list button On (1): Show window list button |

22.45 SHPNAME system variable

22.45.1 Shape name

Stores a default shape name according to naming conventions. Type a period (.) to set no default. Shapes are an early version of blocks that were efficient, but difficult to code. Shapes are rarely used anymore.

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | |



22.46 SIGWARN system variable

22.46.1 Signature warning

Controls display of dialog with signature content when drawing with digital signature is opened.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): Dialog is displayed only if drawing has invalid signature On (1): Dialog is displayed if drawing has a signature |

22.47 SINGLETONMODE system variable

22.47.1 Singleton mode

Switch to control whether one or more instances of BricsCAD can run simultaneously. When set to Off, only a single instance of BricsCAD can run. When set to On, you can launch two or more copies of BricsCAD at the same time.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Singleton mode off On (1): Singleton mode on |

22.48 SKETCHINC system variable

22.48.1 Sketch increment

Stores the record increment for the SKETCH command.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |




22.49 SKPOLY system variable

22.49.1 Sketch poly

Specifies the entity type (lines or polylines) created by the SKETCH command.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | Off (0): Generate lines On (1): Generate polylines |

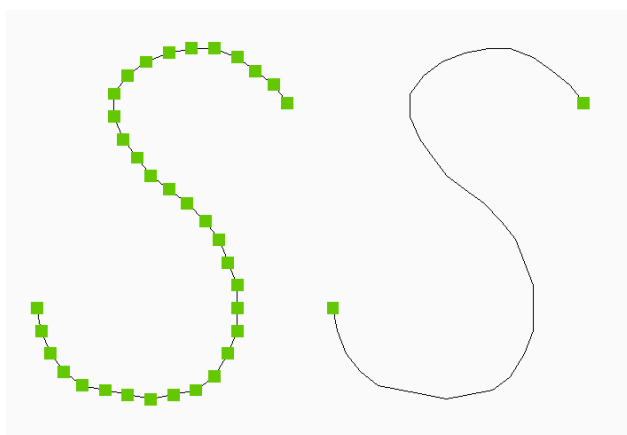

22.50 SKYSTATUS system variable

22.50.1 Sky status

Specifies whether sky illumination is computed at render time. (Not yet supported)

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: No sky 1: Sky background 2: Sky background and illumination |



22.51 SMASSEMBLYEXPORTMODE system variable

22.51.1 Modification of exported assemblies

Specifies whether the original assembly is modified after running the SMASSEMBLYEXPORT command.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Possible values: | 0: Do not change external components 1: Keep recognized features on sheet metal/poor sheet metal parts |

22.52 SMASSEMBLYEXPORTREPORTPATHTYPE system variable

22.52.1 Report file path type

Determines whether absolute or relative path to files will be used in the reports generated by the command.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Relative paths 1: Absolute paths |

22.53 SMASSEMBLYEXPORTSOLIDTYPESINREPORTS system variable

22.53.1 Solid types in reports

Determines which types of solids will be present in command reports. Each solid belongs to one of four types: sheet metal, poor sheet metal, non sheet metal or standard part component solid. Sheet metal and poor sheet metal solids are always present in the reports.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|--|
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 1: Non sheet metal solids 2: Standard part component solids |

22.54 SMATTRIBUTESLAYERCOLOR system variable

22.54.1 Color of the attributes layer

Defines a color which will be assigned to layer containing attributes after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 7 |

22.55 SMATTRIBUTESLAYERTEXTHEIGHT system variable

22.55.1 Height of the text

Height of the text from Attributes Layer.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.01 |

22.56 SMATTRIBUTESLAYERTEXTHEIGHTTYPE system variable

22.56.1 Type of the text height

Determines type of the text height: bounding box ratio or absolute value.

BricsCAD only



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Bounding box ratio 1: Absolute value |

22.57 SMBENDANNOTATIONSLAYERCOLOR system variable

22.57.1 Color of the bend annotations text layer

Defines a color which will be assigned to layer containing bend annotations after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 5 |

22.58 SMBENDANNOTATIONSLAYERTEXTHEIGHT system variable

22.58.1 Height of the text

Height of the text from Bend Annotation Text Layer.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Default value: | 0.01 |



22.59 SMBENDANNOTATIONSLAYERTEXTHEIGHTTYPE system variable

22.59.1 Type of the text height

Determines type of the text height: bounding box ratio or absolute value.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Bounding box ratio 1: Absolute value |

22.60 SMBENDLINESDOWNLAYERCOLOR system variable

22.60.1 Color of the bend down lines layer

Defines a color which will be assigned to layer containing bend down lines after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 1 |

22.61 SMBENDLINESDOWNLAYERLINETYPE system variable

22.61.1 Linetype of the bend down lines layer

Determines the linetype of the bend down lines layer entities.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|------------|
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.62 SMBENDLINESDOWNLAYERLINEWEIGHT system variable

22.62.1 Lineweight of the bend down layer

Determines the lineweight of the bend down layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | -3 |

22.63 SMBENDLINESUPLAYERCOLOR system variable

22.63.1 Color of the bend up lines layer

Defines a color which will be assigned to layer containing bend up lines after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 1 |

22.64 SMBENDLINESUPLAYERLINETYPE system variable

22.64.1 Linetype of the bend up lines layer

Determines the linetype of the bend up lines layer entities.

BricsCAD only



| | |
|----------------|------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.65 SMBENDLINESUPLAYERLINEWEIGHT system variable

22.65.1 Lineweight of the bend up layer

Determines the lineweight of the bend up layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | -3 |

22.66 SMBEVELFEATURECOLOR system variable

22.66.1 Color of the bevel features layer

Defines a color which will be assigned to layer containing bevel features after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 6 |

22.67 SMCOLORBEND system variable

22.67.1 Bend relief feature color

Visual color of entities related to bend reliefs.

BricsCAD only



| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #FFDC50 |

22.68 SMCOLORBENDRELIEF system variable

22.68.1 Bend relief feature color

Visual color of entities related to bend reliefs.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #64D296 |

22.69 SMCOLORBEVEL system variable

22.69.1 Bevel feature color

Visual color of entities related to bevels.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #64D296 |

22.70 SMCOLORCORNERRELIEF system variable

22.70.1 Corner relief feature color

Visual color of entities related to corner reliefs.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |



| | |
|----------------|---------|
| Default value: | #64D296 |
|----------------|---------|

22.71 SMCOLORFLANGE system variable

22.71.1 Flange feature color

Visual color of entities related to flanges.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #90A4AE |

22.72 SMCOLORFLANGEREFERENCESIDE system variable

22.72.1 Flange feature reference side color

Visual color of entities related to faces on reference side of flange.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #68A4AE |

22.73 SMCOLORFORM system variable

22.73.1 Form feature color

Visual color of entities related to forms.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #8791E1 |



22.74 SMCOLORHEM system variable

22.74.1 Hem feature color

Visual color of entities related to hems.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #FCAED6 |

22.75 SMCOLORJOG system variable

22.75.1 Jog feature color

Visual color of entities related to jogs.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #CC7722 |

22.76 SMCOLORJUNCTION system variable

22.76.1 Junction feature color

Visual color of entities related to junctions.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #FF6E40 |

22.77 SMCOLORLOFTEDBEND system variable

22.77.1 Lofted bend feature color

Visual color of entities related to lofted bends.



BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #A0DCFA |

22.78 SMCOLORMITER system variable

22.78.1 Miter feature color

Visual color of entities related to miters.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #AF46D8 |

22.79 SMCOLORROLLEDEGE system variable

22.79.1 Rolled edge feature color

Visual color of entities related to rolled edges.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #8791E1 |

22.80 SMCOLORTAB system variable

22.80.1 Tab feature color

Visual color of entities related to tabs.

BricsCAD only

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|----------------|----------|
| Saved in: | Registry |
| Default value: | #FDA542 |

22.81 SMCOLORWRONGBEND system variable

22.81.1 Wrong bend feature color

Visual color of entities related to wrong bends.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #FF3300 |

22.82 SMCOLORWRONGFLANGE system variable

22.82.1 Wrong flange feature color

Visual color of entities related to wrong flange.

BricsCAD only

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Registry |
| Default value: | #A82000 |

22.83 SMCONTOURSLAYERCOLOR system variable

22.83.1 Color of the contour layer

Defines a color which will be assigned to layer in 2D dxf containing unfolded geometry after SmUnfold and SmExport2d.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|----------------|----------|
| Range: | 1 to 255 |
| Default value: | 7 |

22.84 SMCONTOURSLAYERLINETYPE system variable

22.84.1 Linetype of the contour layer

Determines the linetype of the contour layer entities.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.85 SMCONTOURSLAYERLINEWEIGHT system variable

22.85.1 Lineweight of the contour layer

Determines the lineweight of the Contour layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | 30 |

22.86 SMCONVERTMAXIMALBEVELANGLE system variable

22.86.1 Maximal angle of bevel

Determines maximal angle of bevel.

BricsCAD only

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|---------|
| Saved in: | Drawing |
| Range: | 0 to 90 |
| Default value: | 80 |

22.87 SMCONVERTMINIMALBEVELANGLE system variable

22.87.1 Minimal angle of bevel

Determines minimal angle of bevel.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 90 |
| Default value: | 1 |

22.88 SMCONVERTPREFERFORMFEATURES system variable

22.88.1 Prefer form features to flanges and bends

Controls which set of features has to be recognized on solid faces if they can be described by single form feature or set of flanges and bends (i.e. bridge-like insert on large flange).

BricsCAD only

| | |
|------------------|-----------------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | 0: Off 1: On |



22.89 SMCONVERTPREFERHEMFEATURES system variable

22.89.1 Prefer hem features to flanges and bends

Controls which set of features has to be recognized on solid faces if they can be described by single hem feature or by bend and flange.

BricsCAD only

| | |
|------------------|-----------------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | 0: Off 1: On |

22.90 SMCONVERTPREFERZEROBENDFEATURES system variable

22.90.1 Prefer zero bend features to wrong bends

Controls which set of features has to be recognized on solid faces if they can be described by zero bend feature or by wrong bend feature.

BricsCAD only

| | |
|------------------|-----------------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | 0: Off 1: On |

22.91 SMCONVERTRECOGNIZEHOLES system variable

22.91.1 Recognize holes

If turned on, holes on the flanges will be recognized as features.

BricsCAD only

| | |
|-------|---------|
| Type: | Boolean |
|-------|---------|



| | |
|------------------|-----------------|
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | 0: Off 1: On |

22.92 SMCONVERTRECOGNIZERIBCONTROLCURVES system variable

22.92.1 Recognize rib control curves

Controls recognition of 2D control curves for rib features.

BricsCAD only

| | |
|------------------|-----------------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | 0: Off 1: On |

22.93 SMCONVERTWRONGFEATURETHICKNESSDEVIATIONTYPE system variable

22.93.1 Type of deviation of wrong feature thickness

Determines whether deviation value is treated as ratio to model thickness or absolute value.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |



22.94 SMCONVERTWRONGFEATURETHICKNESSDEVIATIONVALUE system variable

22.94.1 Deviation value of wrong feature thickness

Determines allowed deviation between model thickness of given wrong feature.

BricsCAD only

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 1e6 |
| Default value: | 0.2 |

22.95 SMDEFAULTBENDLINEEXTENTTYPE system variable

22.95.1 Bend line extent type

Determines if bend line extent is thickness ratio or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 1: Thickness ratio 2: Absolute value |

22.96 SMDEFAULTBENDLINEEXTENTVALUE system variable

22.96.1 Bend line extent value

Controls how much bend lines stretch out of contour (if the value is positive), do not reach it (if the value is negative), or just touch it (if the value is zero). Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|---------------------|
| Saved in: | Drawing |
| Range: | -1000000 to 1000000 |
| Default value: | 0.25 |

22.97 SMDEFAULTBENDRADIUSTYPE system variable

22.97.1 Bend radius type

Determines whether bend radius value is to be treated as ratio to thickness or absolute value. The first switch toggles Thickness ratio/Absolute value. The second switch controls whether Sheet Metal context bend radius setting has to be taken from SMDEFAULTBENDRADIUSVALUE or from the recognized model.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 3 |
| Default value: | 2 |
| Possible values: | 1: Absolute value 2: Override bend radius in SMCONVERT |

22.98 SMDEFAULTBENDRADIUSVALUE system variable

22.98.1 Bend radius value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1 |



22.99 SMDEFAULTBENDRELIEFWIDTHTYPE system variable

22.99.1 Bend relief type

Determines whether the bend relief width value will be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.100 SMDEFAULTBENDRELIEFWIDTHVALUE system variable

22.100.1 Bend relief width value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.5 |

22.101 SMDEFAULTBEVELFEATUREUNFOLDMODE system variable

22.101.1 Bevel unfolding mode

Determines appearance of bevels in unfolded part. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 2 |



| | |
|------------------|-------------------------------------|
| Possible values: | 0: Keep 1: Remove 2: Annotate |
|------------------|-------------------------------------|

22.102 SMDEFAULTCORNERRELIEFDIAMETERVALUE system variable

22.102.1 Corner relief diameter value

Set to -1.0 for automatic determination of least feasible for given corner relief. The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | -1.0 |

22.103 SMDEFAULTFLANGESPLITEXTENSIONTYPE system variable

22.103.1 Miter extension type

Determines whether miter extension will be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.104 SMDEFAULTFLANGESPLITEXTENSIONVALUE system variable

22.104.1 Miter extension value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |

22.105 SMDEFAULTFLANGESPLITGAPTYPE system variable

22.105.1 Miter gap type

Determines whether miter gap is to be treated as ratio to thickness or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.106 SMDEFAULTFLANGESPLITGAPVALUE system variable

22.106.1 Miter gap value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |



22.107 SMDEFAULTFORMFEATUREUNFOLDMODE system variable

22.107.1 Form feature unfolding mode

Determines appearance of form features in unfolded part. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 4 |
| Possible values: | 0: Keep 1: Remove 2: Project 3: Contour 4: Symbol 5: Project without center mark 6: Contour without center mark |

22.108 SMDEFAULTGUSSETDEPTHVALUE system variable

22.108.1 Gusset depth value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 8 |

22.109 SMDEFAULTGUSSETDEPTHTYPE system variable

22.109.1 Gusset depth type

Determines whether the gusset depth value is to be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.110 SMDEFAULTGUSSETFILLETRADIUSVALUE system variable

22.110.1 Gusset fillet radius value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1 |

22.111 SMDEFAULTGUSSETFILLETRADIUSTYPE system variable

22.111.1 Gusset fillet radius type

Determines whether the gusset fillet radius value is to be treated as ratio to thickness or absolute value.

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |



22.112 SMDEFAULTGUSSETTYPE system variable

22.112.1 Gusset type

Determines whether the gusset will be round or flat. The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 1 to 2 |
| Default value: | 1 |
| Possible values: | 1: Round 2: Flat |

22.113 SMDEFAULTGUSSETWIDTHVALUE system variable

22.113.1 Gusset width value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 6 |

22.114 SMDEFAULTGUSSETWIDTHTYPE system variable

22.114.1 Gusset width type

Determines whether the gusset width value is to be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |



| | |
|------------------|---|
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.115 SMDEFAULTHEMGAPTYPE system variable

22.115.1 Open Hem gap type

Determines whether the corresponding hem feature gap is to be treated as ratio to thickness or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.116 SMDEFAULTHEMGAPVALUE system variable

22.116.1 Open Hem gap value (in addition to the thickness)

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0.1 |



22.117 SMDEFAULTHEMRELATIVEBENDDEDUCTION system variable

22.117.1 Hem relative bend deduction value

Sets relative to thickness bend deduction value used for closed hem unfolding. Value ranges from 0 which leads to hem lengthening to 10 which means shortening bend zone by a value equal to $8 * \text{thickness}$. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 10 |
| Default value: | 2.4 |

22.118 SMDEFAULTJUNCTIONALIGNMENTTORELIEF system variable

22.118.1 Junction alignment to relief

Forces junction faces to align adjacent relief faces. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Disabled 1: Enabled |

22.119 SMDEFAULTJUNCTIONGAPTYPE system variable

22.119.1 Junction gap type

Determines whether junction gap is to be treated as ratio to thickness or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.120 SMDEFAULTJUNCTIONGAPVALUE system variable

22.120.1 Junction gap value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.001 |

22.121 SMDEFAULTKFACTOR system variable

22.121.1 K-Factor value

Sets location ratio of the neutral surface, for example surface not stretched or squeezed when the sheet is bent, to the material thickness. Value ranges from 0 for internal bend radius to 1 for the external bend radius. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0.27324 |



22.122 SMDEFAULTLOFTEDBENDNUMBERSAMPLES system variable

22.122.1 Lofted bend subdivisions

Sets the default value for lofted bend subdivisions. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 10 |

22.123 SMDEFAULTRELIEFEXTENSIONTYPE system variable

22.123.1 Relief extension type

Determines whether bend relief width value will be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.124 SMDEFAULTRELIEFEXTENSIONVALUE system variable

22.124.1 Relief extension value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |



22.125 SMDEFAULTRIBFILLETTRADIUSTYPE system variable

22.125.1 Bead fillet radius type

Determines whether bead fillet radius to be treated as ratio to profile radius or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Profile radius ratio 1: Absolute value |

22.126 SMDEFAULTRIBFILLETTRADIUSVALUE system variable

22.126.1 Bead fillet radius value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 5 |

22.127 SMDEFAULTRIBPROFILERADIUSTYPE system variable

22.127.1 Bead profile radius type

Determines whether bead profile radius to be treated as ratio to thickness or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |



| | |
|------------------|---|
| Possible values: | 0: Thickness ratio 1: Absolute value |
|------------------|---|

22.128 SMDEFAULTRIBPROFILERADIUSVALUE system variable

22.128.1 Bead profile radius value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 2 |

22.129 SMDEFAULTRIBROUNDRADIUSTYPE system variable

22.129.1 Bead round radius type

Determines whether bead round radius to be treated as ratio to thickness or absolute value. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.130 SMDEFAULTRIBROUNDRADIUSVALUE system variable

22.130.1 Bead round radius value

Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|---------|
| Saved in: | Drawing |
| Default value: | 1 |

22.131 SMDEFAULTSHARPBENDRADIUSLIMITRATIO system variable

22.131.1 Sharp bend radius limit ratio

The default sharp bend radius limit ratio to the thickness. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 5 |

22.132 SMDEFAULTTABCHAMFERDISTANCETYPE system variable

22.132.1 Tab chamfer distance type

Determines whether tab chamfer distance will be treated as ratio to profile radius or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.133 SMDEFAULTTABCHAMFERDISTANCEVALUE system variable

22.133.1 Tab chamfer distance value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |

22.134 SMDEFAULTTABCLEARANCETYPE system variable

22.134.1 Tab clearance type

Determines whether tab clearance will be treated as ratio to profile radius or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.135 SMDEFAULTTABCLEARANCEVALUE system variable

22.135.1 Tab clearance value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |

22.136 SMDEFAULTTABDISTANCETYPE system variable

22.136.1 Tab distance type

Determines whether tab distance will be treated as ratio to profile radius or absolute value. The value will be used to initialize sheet metal settings in the document.



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.137 SMDEFAULTTABDISTANCEVALUE system variable

22.137.1 Tab distance value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 20 |

22.138 SMDEFAULTTABEDGETYPE system variable

22.138.1 Tab edge type

Determines whether tab will have sharp, round or chamfer edges. Value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Sharp edges 1: Fillet edges 2: Chamfer edges |



22.139 SMDEFAULTTABFILLETTRADIUSTYPE system variable

22.139.1 Tab fillet radius type

Determines whether tab fillet radius will be treated as ratio to thickness or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.140 SMDEFAULTTABFILLETTRADIUSVALUE system variable

22.140.1 Tab fillet radius value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.1 |

22.141 SMDEFAULTTABHEIGHTTYPE system variable

22.141.1 Tab height type

Determines whether tab height will be treated as ratio to profile radius or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |



| | |
|------------------|---|
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.142 SMDEFAULTTABHEIGHTVALUE system variable

22.142.1 Tab height value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1 |

22.143 SMDEFAULTTABLENGTHTYPE system variable

22.143.1 Tab length type

Determines whether tab length will be treated as ratio to profile radius or absolute value. The value will be used to initialize sheet metal settings in the document.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Thickness ratio 1: Absolute value |

22.144 SMDEFAULTTABLENGTHVALUE system variable

22.144.1 Tab length value

The value will be used to initialize sheet metal settings in the document.

BricsCAD only



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 4 |

22.145 SMDEFAULTTABSLOTNUMBER system variable

22.145.1 Tab slot number

The value will be used to initialize sheet metal settings in the document.

BricsCAD only

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 2 |

22.146 SMDEFAULTTHICKNESS system variable

22.146.1 Thickness value

Value will be used to initialize sheet metal settings in the document. Value is given in units of current document (see INSUNITS).

BricsCAD only

| | |
|----------------|--|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 2.0 for INSUNITS=4 0.07874 for INSUNITS=1 |

22.147 SMEXPORTOSMAPPROXIMATIONACCURACY system variable

22.148 SMEXPORTOSMMINIALEDGELENGTH system variable

22.149 SMFORMFEATURESDOWNCOLOR system variable

22.149.1 Color of the form features down layer

Defines a color which will be assigned to layer containing form features after SmUnfold and SmExport2d.



BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 6 |

22.150 SMFORMFEATURESDOWNLAYERLINETYPE system variable

22.150.1 Linetype of the form features down layer

Determines the linetype of the form feature layer entities.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.151 SMFORMFEATURESDOWNLAYERLINEWEIGHT system variable

22.151.1 Lineweight of the form features down layer

Determines the lineweight of form feature layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | -3 |

22.152 SMFORMFEATURESUPCOLOR system variable

22.152.1 Color of the form features up layer

Defines a color which will be assigned to layer containing form features after SmUnfold and SmExport2d.



BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 6 |

22.153 SMFORMFEATURESUPPLAYERLINETYPE system variable

22.153.1 Linetype of the form features up layer

Determines the linetype of the form feature layer entities.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.154 SMFORMFEATURESUPPLAYERLINEWEIGHT system variable

22.154.1 Lineweight of the form features up layer

Determines the lineweight of form feature layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | -3 |

22.155 SMJUNCTIONCREATEHEALCOINCIDENT system variable

22.155.1 Heal coincident junction faces

Controls recognition of junction design with coincident faces and its conversion to regular junctions



BricsCAD only

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |

22.156 SMOOTHMESHCONVERT system variable

22.156.1 Mesh conversion mode

Specifies mesh to 3d solid or surface conversion mode, used by commands CONVTOSOLID or CONVTOSURFACE. Currently we support conversion only to faceted models, so values 0 and 1, corresponding to conversion to smooth models, are not accessible.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 2 to 3 |
| Default value: | 2 |
| Possible values: | 2: Conversion result is faceted and optimized 3: Conversion result is faceted and not optimized |

22.157 SMOVERALLANNOTATIONSLAYERCOLOR system variable

22.157.1 Color of the overall dimensions annotations layer

Defines a color which will be assigned to layer containing overall dimensions annotations after SmUnfold and SmExport2d.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |
| Default value: | 3 |



22.158 SMOVERALLANNOTATIONSLAYERLINETYPE system variable

22.158.1 Linetype of the overall annotation layer

Determines the linetype of the overall annotation layer entities.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | CONTINUOUS |

22.159 SMOVERALLANNOTATIONSLAYERLINEWEIGHT system variable

22.159.1 Lineweight of the overall annotation layer

Determines the lineweight of bend annotation layer. Values between -3 and 211 are accepted. -1=ByLayer, -2=ByBlock, -3=Default

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 211 |
| Default value: | -3 |

22.160 SMPARAMETRIZEHOLESPARAMETRIZATION system variable

22.160.1 Hole parametrization

Controls parametrization for straight holes. If **Convert holes to array** is on, holes on flanges will be checked to be grouped into parametric rectangular array. If **Parametrize holes** is on, holes which are not included to arrays will be constrained.

BricsCAD only

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |
| | 0 to 3 |



| | |
|------------------|--|
| Default value: | 3 |
| Possible values: | 0: Does not parametrize holes 1: Parametrize holes 2: Convert holes to array |

22.161 SMREPAIRLOFTEDBENDMERGE system variable

22.161.1 Merge lofted bends

If turned on, adjacent lofted bends with tangential connection will be merged to single lofted bend.

BricsCAD only

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |

22.162 SMSMARTFEATURES system variable

22.162.1 Automatically update sheet metal features

Controls whether sheet metal features are rebuilt automatically when sheet metal commands have been executed. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 7 |
| Default value: | 3 |
| Possible options: | 1: Allow rebuilding sheet metal features 2: Allow automatic edges imprint after rebuild 4: Allow automatic creation of junctions after creating bends |



22.163 SMSPLITAMBIGUOUSINPUT system variable

22.163.1 Ambiguous input behavior

Controls command behavior to resolve situations when command can't unequivocally deduce face or entity to which input point or 2D curve relates to.

BricsCAD only

| | |
|------------------|-----------------------------------|
| Type: | Short |
| Saved in: | Drawing |
| | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Prompt user 1: Command fail |

22.164 SMSPLITCONVERTBENDTOJUNCTION system variable

22.164.1 Convert bend to junction

If enabled, split turns corner residue bend after split to junction.

BricsCAD only

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |

22.165 SMSPLITHEALCOINCIDENT system variable

22.165.1 Heal coincident miter faces

Controls appearance of coincident miter faces healing option in command prompt.

BricsCAD only

| | |
|-----------|---------|
| Type: | Boolean |
| Saved in: | Drawing |



| | |
|----------------|-----|
| Default value: | Off |
|----------------|-----|

22.166 SMSPLITORTHOGONALBENDSPLIT system variable

22.166.1 Orthogonal bend split

Determines split behavior when split curve touches bend. If enabled, split direction for bend will be orthogonal to bend axis. If disabled, split direction will be tangential to split curve.

BricsCAD only

| | |
|----------------|---------|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |

22.167 SMTARGETCAM system variable

22.167.1 Target CAM

Defines a target CAM system for processing sheet metal parts unfolded with BricsCAD using SmUnfold command.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

22.168 SNAPANG system variable

22.168.1 Snap angle

Specifies the rotation of snap, grid and crosshairs for the current viewport relative to the current UCS.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |



22.169 SNAPBASE system variable

22.169.1 Snap base

Specifies the origin point of snap and grid in the current viewport relative to the current UCS.

| | |
|----------------|----------|
| Type: | 2D point |
| Saved in: | Drawing |
| Default value: | 0,0 |

22.170 SNAPCOLOR system variable

22.170.1 Snap color (Obsolete)

Replaced by SNAPMARKERCOLOR.

BricsCAD only


| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |

22.171 SNAPISOPAIR system variable

22.171.1 Snap isometric pair

Specifies the current viewport's isometric plane (left, top or right), used if SNAPSTYL is isometric. Press **F5** function key to set the appropriate drawing plane: **Left**, **Top** or **Right**.

| | |
|------------------|-------------------------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Left 1: Top 2: Right |

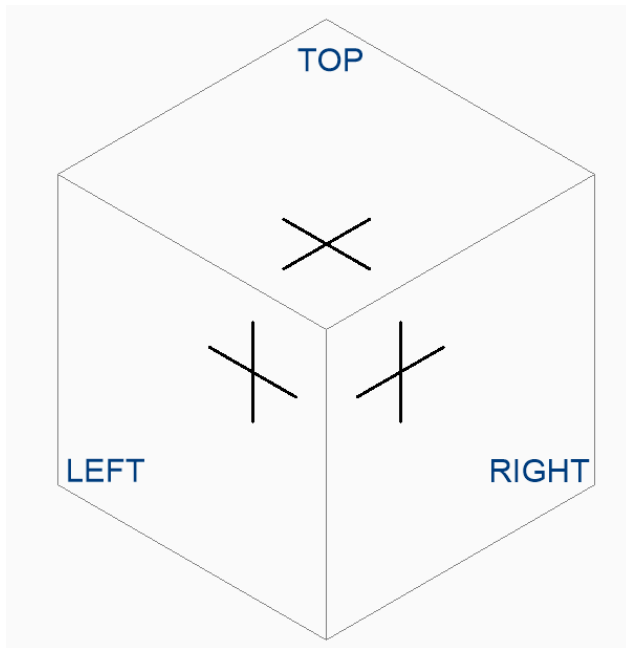

22.172 SNAPMARKERCOLOR system variable

22.172.1 Snap marker color

Specifies the color of the snap marker. Values between 1 and 255 are accepted.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 1 to 255 |
| Default value: | 20 |

22.173 SNAPMARKERSIZE system variable

22.173.1 Snap marker size

Specifies the size of the snap marker.

BricsCAD only

| | |
|-----------|------------|
| Type: | Short |
| Saved in: | Preference |



| | |
|----------------|---|
| Default value: | 6 |
|----------------|---|

22.174 SNAPMARKERTHICKNESS system variable

22.174.1 Snap marker thickness

Specifies the thickness of the snap marker.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 2 |

22.175 SNAPMODE system variable

22.175.1 Snap mode

Toggles snap On or Off for the current viewport. This setting is overridden when SNAPTTYPE is set to **Adaptive Grid Snap**.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Snap off (for current viewport) On (1): Snap on (for current viewport) |

22.176 SNAPSIZ system variable

22.176.1 Snap size (Obsolete)

Replaced by SNAPMARKERSIZE.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



22.177 SNAPSTYL system variable

22.177.1 Snap style

Specifies whether the snap style for the current viewport is rectangular or isometric.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Rectangular snap 1: Isometric snap |

22.178 SNAPTHICKNESS system variable

22.178.1 Snap thickness (Obsolete)

Replaced by SNAPMARKERTHICKNESS.

BricsCAD only

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |

22.179 SNAPTYPE system variable

22.179.1 Snap type

Specifies the snap type for the current viewport: grid snap, polar snap or adaptive grid snap.

During **Adaptive Grid Snap**, the snap spacing is calculated depending on the ratio of the current drawing units per displayed pixel and the AdaptiveGridStepSize setting. This option overrides SNAPMODE.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |



| | |
|------------------|--|
| Possible values: | 0: Grid snap 1: Polar snap 2: Adaptive Grid Snap |
|------------------|--|

22.180 SNAPUNIT system variable

22.180.1 Snap unit

Specifies the current viewport's snap spacing and specifies the spacing between snap points. If SNAPSTYL is 1 (isometric snap), the SNAPUNIT X value will adjust itself automatically to reflect the isometric snap. There is no snap in the Z direction.

| | |
|----------------|----------|
| Type: | 2D point |
| Saved in: | Drawing |
| Default value: | 0.5,0.5 |

22.181 SOLIDCHECK system variable

22.181.1 Solid check

Toggles the 3D solid validation for the current BricsCAD session.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Solid validation off On (1): Solid validation on |

22.182 SORTENTS system variable

22.182.1 Sort entities

Specifies the entity display sort order. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-----------|---------|
| Type: | Short |
| Saved in: | Drawing |



| | |
|-------------------|--|
| Range: | 0 to 127 |
| Default value: | 127 |
| Possible options: | 0: Off 1: Entity selection 2: Entity snap 4: Redraws 8: Mslide slide creation 16: Regens 32: Plotting 64: PostScript output |

22.183 SPAADJUSTMODE system variable

22.183.1 Adjust mode

The adjustment mode is used for triangle smoothing. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: None (Leave everything alone) 1: Non grid (Adjust points surrounded by triangles by moving nodes in the center of surrounding nodes) 2: All (Also adjusts grid nodes) |

22.184 SPACHECKLEVEL system variable

22.184.1 Check level

Check level used in AUDIT and SOLIDEDIT for checking ACIS entities. Value 10 is the lowest, used for fast checking. Value 70 is the maximum, used for comprehensive time consuming check. Audit is used to repair drawings that are open. SolidEdit edits the faces, edges and bodies of 3D solids and 2D regions. Spa is short for Spatial, the maker of ACIS.

BricsCAD only



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 70 |
| Default value: | 10 |
| Possible values: | 0: Basic transformation consistency, basic pointer and fatal topology checks. 10: Basic geometry checks. Cellular topology checks. 20: Data sharing checks. Face area and loop orientation check. Medium checks of curve geometry. 30: General surface checks. Check for sliver faces. 40: Degenerate spline surface check. Compatibility check between surface and pcurve's surface. Check that COEDGE has a partner on a single-sided face. 50: Body containment checks. Compatibility check between pcurve location and (non-tolerant) coedge location. 60: Convexity points check. 70: Lump and shell containment checks. Face-face intersection checks. Curve parametrization check. |

22.185 SPAGRIDASPECTRATIO system variable

22.185.1 Grid aspect ratio

Grid aspect ratio specifies the approximate aspect ratio of each cell in the grid. If the value is close to 1, then the cell is close to a square. This does not guarantee the aspect ratio of the facet, which may consist of only a part of a cell. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |



22.186 SPAGRIDMODE system variable

22.186.1 Grid mode

Specifies how grids are used in the mesh process. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: No grids at all 1: Grids in interior 2: Allow grid to divide model edges 3: Grid only in one direction, u or v |

22.187 SPAMAXFACETEDGELENGTH system variable

22.187.1 Maximum facet edge length

Specifies the maximum length of a facet side. The recommended, and default, value of 0 allows the software to determine and use an optimal value. Specifying a length that is too small can lead to high memory consumption and poor performance. This variable is ignored if SPAUSEFACETRES is used.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.188 SPAMAXNUMGRIDLINES system variable

22.188.1 Maximum number of grid lines

The maximum grid lines specifies the maximum number of grid subdivisions. This prevents the facet data of a face from getting too big. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only



| | |
|----------------|------------|
| Type: | Long |
| Saved in: | Preference |
| Default value: | 512 |

22.189 SPAMINUGRIDLINES system variable

22.189.1 Minimum number of U grid lines

Specifies the minimum number of U grid lines. At least this number of grid lines are generated in U direction. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Long |
| Saved in: | Preference |
| Default value: | 0 |

22.190 SPAMINVGRIDLINES system variable

22.190.1 Minimum number of V grid lines

Specifies the minimum number of V grid lines. At least this number of grid lines are generated in V direction. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Long |
| Saved in: | Preference |
| Default value: | 0 |

22.191 SPANORMALTOL system variable

22.191.1 Normal tolerance

The normal tolerance specifies the maximum normal deviation allowed between two normals on two adjacent facet nodes in degrees. The proper value is usually independent of the model size. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only



| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 15.0 |

22.192 SPASURFACETOL system variable

22.192.1 Surface tolerance

The surface tolerance specifies the maximum distance between a facet edge and the true surface. The proper value is dependent on the model size. This variable is ignored for output to STL and PDF if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | -1.0 |

22.193 SPATRIANGMODE system variable

22.193.1 Triangulation mode

Triangulation mode identifies what portion of the mesh is to be triangulated. This variable is ignored if FACETRES is used. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 5 |
| Default value: | 1 |



| | |
|------------------|---|
| Possible values: | 0: No triangulation 1: Triangulate everywhere 2: Triangulate against the boundary 3: Also triangulate first grid level 4: Triangulate to 3 levels of fringe 5: Triangulate to 4 levels of fringe |
|------------------|---|

22.194 SPAUSEFACETRES system variable

22.194.1 Use FACETRES system variable

Specifies whether the FACETRES system variable will be used instead of normal tolerance. Spa is short for Spatial, the maker of ACIS.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |

22.195 SPLFRAME system variable

22.195.1 Spline frame

Specifies whether the control frame for helixes.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't display control frame for helixes. On (1): Display control frame for helixes. |

22.196 SPLINESEGS system variable

22.196.1 Spline segments

Specifies how many line segments are to be generated for each spline-fit polyline (spline option of the PEDIT command). Values between -32768 and 32768 are accepted. With a negative value a fit-type curve



is applied. A fit-type curve is composed of arc-segments, which yields a smoother curve, but it takes longer to generate.


| | |
|----------------|-----------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -32768 to 32767 |
| Default value: | 8 |

22.197 SPLINETYPE system variable

22.197.1 Spline type

Specifies the curve type to be generated by the Spline option of the PEDIT command: Quadratic B-spline or Cubic B-spline.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 5 to 6 |
| Default value: | 6 |
| Possible values: | 5: Quadratic B-spline 6: Cubic B-spline |

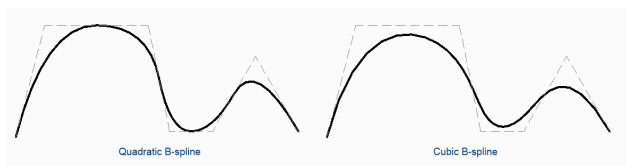

22.198 SRCHPATH system variable

22.198.1 Support file search path

Specifies the folder(s) in which BricsCAD should look for text fonts, customization files, plug-ins, drawings to insert, linetypes, and hatch patterns that are not in the current folder. Search paths are separated by semicolons (;).

BricsCAD only



| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

22.199 SSAUTOSAVE system variable

22.199.1 Sheet set autosave

Specifies whether changes to sheet sets should be autosaved.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Doesn't autosave changes to sheet sets. On (1): Autosaves changes to sheet sets. |

22.200 SSFOUND system variable

22.200.1 Sheet set found

Displays the sheet set file name and path that is associated with the current drawing file (if it is currently open).

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

22.201 SSLOCATE system variable

22.201.1 Sheet set locate

Specifies whether BricsCAD will try to locate and open a sheet set for the drawing that is being opened.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't open a drawing's sheet set with the drawing On (1): Open a drawing's sheet set with the drawing |
|------------------|---|

22.202 SSMAUTOOPEN system variable

22.202.1 Sheet set manager auto open

Specifies whether or not BricsCAD displays the Sheet Set Manager when a drawing is opened that is associated with a sheet set. SSMAUTOOPEN and SSLOCATE must both be switched on to display the sheet set automatically.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Workspace |
| Default value: | On |
| Possible values: | Off (0): Don't open sheet set panel automatically On (1): Open sheet set panel automatically |

22.203 SSMPOLLTIME system variable

22.203.1 Sheet set manager poll time

Specifies the time interval between automatic refreshes of the status data in a sheet set. SSMSHEETSTATUS must be set to 2 for the timer to operate.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 10 to 600 |
| Default value: | 15 |

22.204 SSMSHEETSTATUS system variable

22.204.1 Sheet set manager status

Specifies how the status data in a sheet set is refreshed.

| | |
|-------|-------|
| Type: | Short |
|-------|-------|



| | |
|------------------|---|
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Don't automatically refresh status 1: Refresh status when sheet set is loaded or updated 2: Refresh status when sheet set is loaded or updated, and at time interval by SSM POLLTIME |

22.205 SSMSTATE system variable

22.205.1 Sheet set manager state

Specifies if the Sheet Set Manager is active or not.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Sheet Set Manager is not active 1: Sheet Set Manager is active |

22.206 STACKPANELTYPE system variable

22.206.1 Stack panel type

Style of stacked docking panel containers.

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 1 |
| Default value: | 0 to 2 |



| | |
|------------------|--|
| Possible values: | 0: Fixed resizable panelset with horizontal text tab buttons 1: Flyout panelset with an icon tab strip 2: Collapsible panelset with vertical icon tab buttons (unless docked at top or bottom) |
|------------------|--|

22.207 STAMPFONTSIZE system variable

22.207.1 Font Size

Specifies the font size for the plot stamp.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.2 |

22.208 STAMPFONTSTYLE system variable

22.208.1 Font Style

Specifies the font style for the plot stamp.

BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | Arial |

22.209 STAMPFOOTER system variable

22.209.1 Footer

Specifies the footer for the plot stamp.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |



22.210 STAMPFOOTEROFFSETX system variable

22.210.1 Stamp footer X offset

Specifies the offset of the plot stamp footer from the left of the printable area.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.211 STAMPFOOTEROFFSETY system variable

22.211.1 Stamp footer Y offset

Specifies the offset of the plot stamp footer from the bottom of the printable area.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.212 STAMPHEADER system variable

22.212.1 Header

Specifies the header for the plot stamp.

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

22.213 STAMPHEADEROFFSETX system variable

22.213.1 Stamp header X offset

Specifies the offset of the plot stamp header from the left of the printable area.

BricsCAD only



| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.214 STAMPHEADEROFFSETY system variable

22.214.1 Stamp header Y offset

Specifies the offset of the plot stamp header from the top of the printable area.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.215 STAMPUNITS system variable

22.215.1 Units

Specifies units in which the font size of the plot stamp is displayed.

BricsCAD only

| | |
|------------------|-----------------------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Inches 1: Millimeters |

22.216 STANDARDOPTIONS system variable

22.216.1 Standards validation options

Options to control the procedure of checking standards. The value is stored as a bitcode using the sum of the values of all selected options.



| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible options: | 1: Fix non-standard object properties automatically 2: Show ignored problems |

22.217 STANDARDSVIOLATION system variable

22.217.1 Standards Violation Notification

Specifies how a user is notified of standards violations.

BricsCAD only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible options: | 0: Notification is off 1: An alert dialog is displayed 2: An icon is displayed in the status bar |

22.218 STARTUP system variable

22.218.1 Startup

Specifies the display of the Create New Drawing and Startup dialog boxes.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 3 |



| | |
|------------------|---|
| Possible values: | 0: Display the Select Template dialog box, or use a default drawing template file (set in the BASEFILE system variable) 1: Display the Startup and the Create New Drawing dialog boxes 2: Display the Start page 3: Display the Start page (with ribbon preloaded) |
|------------------|---|

22.219 STARTUPTODAY system variable

22.219.1 Startup today (Obsolete)

Specifies whether or not the Today window is used.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Possible values: | Off (0): Display Traditional startup dialog box On (1): Display Today window |

22.220 STATUSBAR system variable

22.220.1 Window status bar

Specifies the display of the status bar. The only reason to turn off the status bar is to gain a bit more drawing area. It is far more useful to leave it on.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't show status bar On (1): Show status bar |

22.221 STEPSIZE system variable

22.221.1 Step size

Specifies the size of each step, in drawing units, in walk or fly mode.

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|--------------|
| Saved in: | Drawing |
| Range: | 1e-6 to 1e+6 |
| Default value: | 50.0 |

22.222 STEPSERSEC system variable

22.222.1 Steps per second

Specifies the number of steps taken per second in walk or fly mode.

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Drawing |
| Range: | 1.0 to 30.0 |
| Default value: | 24.0 |

22.223 STLPOSITIVEQUADRANT system variable

22.223.1 STL export coordinates adjustment

Move coordinates to all-positive octant.

BricsCAD only

| | |
|------------------|-----------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 1 |
| Possible values: | 0: Off 1: On |

22.224 STORYBAR system variable

22.224.1 Display Story Bar

Controls the visibility and position of the **Story Bar**.

BricsCAD only



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Turns the story bar off. Right (1): Turns the story bar visible on the right side of the model space. Left (2): Turns the story bar visible on the left side of the model space. |

22.225 STRUCTURETREECONFIG system variable

22.225.1 Structure Tree Configuration

Name of the active Structure Tree configuration file. SRCHPATH is used for finding the file. Loading a different CST file than the default file changes the way that the STRUCTUREPANEL command presents drawing data.

BricsCAD only

| | |
|----------------|---------------|
| Type: | String |
| Saved in: | Workspace |
| Default value: | "default.cst" |

22.226 SURFTAB1 system variable

22.226.1 Surface tabulation 1

Specifies the number of tabulations to be created for RULESURF and TABSURF. Also defines the mesh density in the M direction for REVSURF and EDGESURF.

When extruding entities with arc segments: the SURFTAB1 system variable divides them in a number of equal length intervals.

When revolving entities: the SURFTAB1 variable controls the number of segments of the revolution surface.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 6 |



22.227 SURFTAB2 system variable

22.227.1 Surface tabulation 2

Specifies the mesh density in the N direction for REVSURF and EDGESURF. The SURFTAB2 variable controls the number of segments of each arc segment in the revolved entity.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 6 |

22.228 SURFTYPE system variable

22.228.1 Surface-fitting type

Specifies the surface-fitting type to be used when the Smooth option of the PEDIT command is executed.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 5 to 8 |
| Default value: | 6 |
| Possible values: | 5: Quadratic B-spline surface 6: Cubic B-spline surface 8: Bezier surface |

22.229 SURFU system variable

22.229.1 Surface U

Specifies the surface density in the M direction and the U isolines density on surface entities when the Smooth option of the PEDIT command is executed.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 6 |



22.230 SURFV system variable

22.230.1 Surface V

Specifies the surface density in the N direction and the V isolines density on surface entities when the Smooth option of the PEDIT command is executed.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 6 |

22.231 SVGBLENDEDGRADIENTS system variable

22.231.1 Svg Blended Gradients

Use blended gradients for complex gradient fill. The use of complex gradient fills makes the file size larger.
BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Default value: | Off |
| Possible values: | Off (0): Don't use blended gradients. On (1): Use blended gradients. |

22.232 SVGDEFAULTIMAGEEXTENSION system variable

22.232.1 Svg Default Image Extension

Specifies the default extension for images.
BricsCAD only

| | |
|----------------|------------|
| Type: | String |
| Saved in: | Preference |
| Default value: | .png |



22.233 SVGGENERICFONTFAMILY system variable

22.233.1 Svg Generic Font Family

Font to substitute if the correct one is missing.

The following generic font families are supported in SVG: **serif**, **sans-serif**, **cursive**, **fantasy**, **monospace**.

- Sans-serif - fonts without serifs, like Arial
- Serif - fonts with serifs, like Times Roman
- Cursive - fonts that look handwritten
- Fantasy - unusual fonts
- Monospace - fonts where each character takes up the same space (non-proportional spacing), such as Courier

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 0 |
| Possible values: | 0: sans-serif 1: serif 2: cursive 3: fantasy 4: monospace |

22.234 SVGIMAGEBASE system variable

22.234.1 Svg Image base path

Path where to copy images (if not set, absolute file paths are written to svg).

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

22.235 SVGIMAGEURL system variable

22.235.1 Svg Image Url

Prefix, to prepend to image name (eg: "http://www.mysite.com/images/", or "to/images/").

BricsCAD only



| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

22.236 SVGLINEWEIGHTSCALE system variable

22.236.1 Svg Line Weight Scale

Size of pixel in device units, used for scaling lineweights.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 1.0 |

22.237 SVGOUTPUTHEIGHT system variable

22.237.1 Svg Output Height (in pixels)

Output Height (in pixels). Valid only if SVGSCALEFACTOR is zero.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 768 |

22.238 SVGOUTPUTWIDTH system variable

22.238.1 Svg Output Width (in pixels)

Output Width (in pixels). Valid only if SvgScaleFactor is zero.

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 1024 |



22.239 SVGPRECISION system variable

22.239.1 Svg Floating Point Precision

Specifies the precision in terms of decimal digits in doubles (as in `printf("%.9g",...)` - 9 digits).

BricsCAD only

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Preference |
| Default value: | 6 |

22.240 SVGSCALEFACTOR system variable

22.240.1 Svg Scale Factor

1 Drawing unit = X Svg pixels.

If set to zero, it will scale the current view to fit within the page size of `SvgOutputWidth` x `SvgOutputHeight`.

If set to a positive value, the SVG page size is calculated automatically to correspond to the required scale, when one drawing unit is equal to the specified number of SVG pixels.

E.g. $96\text{dpi} / 25.4 = 3.7795$ - the corresponding scale factor for the conversion of 1 dwg unit into 1 mm Svg.

BricsCAD only

| | |
|----------------|------------|
| Type: | Real |
| Saved in: | Preference |
| Default value: | 0.0 |

22.241 SYSCODEPAGE system variable

22.241.1 System code page

Displays the system code page, determined by the operating system.

Read-only

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |



23. T

23.1 TABCONTROLHEIGHT system variable

23.1.1 Tab control height in pixels (Mac & Linux)

Sets the height of the document tab control in pixels.

BricsCAD only

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 or greater |
| Default value: | 25 |

23.2 TABMODE system variable

23.2.1 Tablet mode

Specifies the use of a tablet. Use the TABLET command for configuring a tablet.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Not saved |
| Range: | Off |
| Possible values: | Off (0): Command selection mode On (1): Digitizing mode |

23.3 TABSFIXEDWIDTH system variable

23.3.1 Tabs fixed width (Mac & Linux)

With this style, all tabs have the same width On/Off.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |



| | |
|------------------|--|
| Possible values: | Off (0): All tabs have fixed width off On (1): All tabs have fixed width on |
|------------------|--|

23.4 TANGENTLENGHTYPE system variable

23.4.1 Tangent Length Type

Defines the default flow fitting tangent length type.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | (0): Profile Width Ratio (1): Absolute Value |

23.5 TANGENTLENGTHVALUE system variable

23.5.1 Tangent Length Value

Defines the default flow fitting tangent length value.

BricsCAD only

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0 |

23.6 TARGET system variable

23.6.1 Target

Specifies the current viewport's location of the target point.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |



23.7 TDCREATE system variable

23.7.1 Time/Date create

Shows the time and date the drawing was created (in Julian Day format).

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

23.8 TDINDWG system variable

23.8.1 Time/Date in drawing

Shows the total editing time of the current drawing in days. Format: >number of days<.>decimal fraction of a day<

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

23.9 TDUCREATE system variable

23.9.1 Time/Date universal create

Shows the universal time and date the drawing was created (in Julian Day format).

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

23.10 TDUPDATE system variable

23.10.1 Time/Date update

Shows the local time and date the drawing was last saved or updated (in Julian Day format).

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |



23.11 TDUSRTIMER system variable

23.11.1 Time/Date user timer

Shows the user-elapsed timer. You can start, stop and reset the timer with the TIME command.

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

23.12 TDUUPDATE system variable

23.12.1 Time/Date universal update

Shows the universal time and date the drawing was last saved or updated (in Julian Day format).

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

23.13 TEETANGENTLENGTHTYPE system variable

23.13.1 Tee Length Type

Defines the default tee tangent length type.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |
| Possible values: | (0): Profile Width Ratio (1): Absolute Value |

23.14 TEETANGENTLENGTHVALUE system variable

23.14.1 Tee Length Value

Defines the default tee tangent length value.

BricsCAD only



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.5 |

23.15 TEMPLATEPATH system variable

23.15.1 Template path

Specifies the path to the Templates folder.

BricsCAD only

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Preference |

23.16 TEMPPREFIX system variable

23.16.1 Temporary prefix

Contains the folder name for temporary files.

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

23.17 TEXTANGLE system variable

23.17.1 Text angle

Stores the angle of the last added text entity.

BricsCAD only

| | |
|-----------|-----------|
| Type: | Real |
| Saved in: | Not saved |

23.18 TEXTED system variable

23.18.1 Text editor for single line text entities

Specifies the type of the editor to work with single line text entities.



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: in-place editor 1: pop up dialog 2: in-place editor with repeated input |

23.19 TEXTEDITMODE system variable

23.19.1 Text edit mode

Specifies whether text editing commands (DDEDIT) automatically repeat entity selection or not.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 0 |
| Possible values: | 0: Multiple edit mode (command repeats until canceled) 1: Single edit mode (command ends after editing one text entity) 2: Automatic edit mode (single if editing preselected text, multiple otherwise) |

23.20 TEXTEVAL system variable

23.20.1 Text evaluation

Specifies the method of evaluation for the Command line text strings. When the TEXTEVAL system variable is set to 1, this command evaluates LISP expressions:

Text: (* pi 2)

The result of the equation ($\pi \times 2$) is placed as text: 6.283185

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |



| | |
|------------------|---|
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: All responses to prompts for text strings and attribute values are taken literally 1: Text starting with '(' or '!' is evaluated as an lisp expression, as for nontextual input |

23.21 TEXTFILL system variable

23.21.1 Text fill

Specifies whether TrueType fonts are either filled or outlined when exporting with the PSOUT command and in renderings.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Display text as outlines 1: Display text as filled images |

Filled Text Outlined Text **Filled text**
Outlined text

23.22 TEXTQLTY system variable

23.22.1 Text quality (Mac & Linux)

Specifies the smoothness of TrueType fonts for plotting and rendering.

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 100 |



| | |
|------------------|--|
| Default value: | 50 |
| Possible values: | 0: No effort to refine the smoothness of the text 100: Maximum effort to smooth text characters |

23.23 TEXTSIZE system variable

23.23.1 Text size

Specifies the default height for new text entities. TEXTSIZE has no effect if the current text style has a fixed height.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 2.5 |

23.24 TEXTSTYLE system variable

23.24.1 Text style

Stores the name of the current text style.

| | |
|----------------|----------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | Standard |

23.25 TEXTUREMAPPATH system variable

23.25.1 Texture map path

Specifies the path(s) to the texture maps folder(s).

BricsCAD only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |



23.26 THICKNESS system variable

23.26.1 Thickness

Stores the current 3D thickness.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

23.27 THREADDISPLAY system variable

23.27.1 Thread representation

Defines the thread display for parts created with the -BMHARDWARE command.

BricsCAD only

| | |
|------------------|-----------------------------------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0) On (1): Thread Display |

23.28 THUMBSIZE system variable

23.28.1 Thumbnail preview image size

Specifies the maximum generated size for thumbnail previews in pixels.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 8 |
| Default value: | 3 |



| | |
|------------------|--|
| Possible values: | 0: 64x64 1: 128x128 2: 256x256 3: 512x512 4: 1024x1024 5: 1440x1440 6: 1600x1600 7: 1920x1920 8: 2560x2560 |
|------------------|--|

23.29 TILEMODE system variable

23.29.1 Tile mode

Activates the Model tab or the most recently used layout tab.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 1 |
| Possible values: | 0: Activate last active layout tab (paper space) 1: Activate Model tab |

23.30 TILEMODELIGHTSYNCH system variable

23.30.1 Tile mode light synch

Specifies the synchronization of lighting in all model space viewports. (Internal use only)

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't synchronize lighting On (1): Synchronize lighting |



23.31 TIMEZONE system variable

23.31.1 Timezone

Specifies the time zone for the sun in the drawing. Setting a geographic location also sets the time zone.

| | |
|----------------|-----------------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | -12000 to 13000 |
| Default value: | -8000 |



| | |
|------------------|---|
| Possible values: | <ul style="list-style-type: none">-12000: (GMT-12:00) International Date Line West-11000: (GMT-11:00) Midway Island, Samoa-10000: (GMT-10:00) Hawaii-9000: (GMT-09:00) Alaska-8000: (GMT-08:00) Pacific Time (US & Canada); Tijuana-7000: (GMT-07:00) Mountain Time (US & Canada)-7001: (GMT-07:00) Arizona-7002: (GMT-07:00) Chihuahua, La Paz, Mazatlan-6000: (GMT-06:00) Central Time (US & Canada)-6001: (GMT-06:00) Central America-6002: (GMT-06:00) Guadalajara, Mexico City, Monterrey-6003: (GMT-06:00) Saskatchewan-5000: (GMT-05:00) Eastern Time (US & Canada)-5001: (GMT-05:00) Indiana (East)-5002: (GMT-05:00) Bogota, Lima, Quito-4000: (GMT-04:00) Atlantic Time (Canada)-4001: (GMT-04:00) Caracas, La Paz-4002: (GMT-04:00) Santiago-3300: (GMT-03:30) Newfoundland-3000: (GMT-03:00) Brasilia-3001: (GMT-03:00) Buenos Aires, Georgetown-3002: (GMT-03:00) Greenland-2000: (GMT-02:00) Mid-Atlantic-1000: (GMT-01:00) Azores-1001: (GMT-01:00) Cape Verde Is.0: (UTC) Universal Coordinated Time1: (GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London2: (GMT) Casablanca, Monrovia1000: (GMT+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna1001: (GMT+01:00) Brussels, Copenhagen, Madrid, Paris1002: (GMT+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague1003: (GMT+01:00) Sarajevo, Skopje, Warsaw, Zagreb1004: (GMT+01:00) West Central Africa2000: (GMT+02:00) Athens, Beirut, Istanbul, Minsk2001: (GMT+02:00) Bucharest2002: (GMT+02:00) Cairo2003: (GMT+02:00) Harare, Pretoria2004: (GMT+02:00) Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius2005: (GMT+02:00) Jerusalem3000: (GMT+03:00) Moscow, St. Petersburg, Volgograd3001: (GMT+03:00) Kuwait, Riyadh3002: (GMT+03:00) Baghdad3003: (GMT+03:00) Nairobi3300: (GMT+03:30) Tehran4000: (GMT+04:00) Abu Dhabi, Muscat4001: (GMT+04:00) Baku, Tbilisi, Yerevan4300: (GMT+04:30) Kabul5000: (GMT+05:00) Ekaterinburg5001: (GMT+05:00) Islamabad, Karachi, Tashkent5300: (GMT+05:30) Chennai, Kolkata, Mumbai, New Delhi5450: (GMT+05:45) Kathmandu6000: (GMT+06:00) Almaty, Novosibirsk6001: (GMT+06:00) Astana, Dhaka6002: (GMT+06:00) Sri Jayawardenepura6300: (GMT+06:30) Rangoon |
|------------------|---|



23.32 TOOLBARMARGIN system variable

23.32.1 Toolbar margin

Margin, in pixels, separating rows of toolbar buttons.

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 63 |
| Default value: | 0 |

23.33 TOOLBUTTONSIZE system variable

23.33.1 Tool button size

Specifies the size of the toolbar buttons.

Small



Large



Extra Large



BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 2 |
| Default value: | 0 |



| | |
|------------------|--|
| Possible values: | 0: Small buttons 1: Large buttons 2: Extra-large buttons |
|------------------|--|

23.34 TOOLICONPADDING system variable

23.34.1 Tool icon padding

Size, in pixels, of blank space around toolbar icons

BricsCAD only

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Workspace |
| Range: | 0 to 15 |
| Default value: | 0 |

23.35 TOOLPALETTEPATH system variable

23.35.1 Tool palettes path

Specify the path(s) to the Tool Palettes folder(s).

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

23.36 TOOLTIPDELAY system variable

23.36.1 Tooltip delay

Specifies the delay after which tooltips appear (in milliseconds).

BricsCAD only

| | |
|----------------|--------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 or greater |
| Default value: | 500 |



23.37 TOOLTIPS system variable

23.37.1 Tooltips

Toggles the display of tooltips for toolbars, ribbon, quad and properties.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display tooltips On (1): Display tooltips |

23.38 TPSTATE system variable

23.38.1 Tool Palettes bar state

Specifies whether the tool palettes bar is visible or not.

Read-only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Not saved |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | 0: Tool Palettes bar is invisible 1: Tool Palettes bar is visible |

23.39 TRACEWID system variable

23.39.1 Trace width

Specifies the default width for new traces.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 1.0 |



23.40 TRACKPATH system variable

23.40.1 Track path

Specifies the display of polar and entity snap tracking paths.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible values: | 0: Display full-screen entity snap tracking path 1: Display entity snap tracking path only between the alignment point and the From point to the cursor location 2: Do not display polar tracking path 3: Do not display polar or entity snap tracking paths |

23.41 TRANSPARENCYDISPLAY system variable

23.41.1 Transparency display

Specifies whether entity transparencies are displayed on-screen.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |

23.42 TRAYICONS system variable

23.42.1 Tray icons

Toggles the display of notification icons in the status bar.

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't display tray On (1): Display tray |
|------------------|---|

23.43 TRAYNOTIFY system variable

23.43.1 Tray notify

Toggles the display of notification balloons for the running services in the status bar tray.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't display notifications On (1): Display notifications |

23.44 TRAYTIMEOUT system variable

23.44.1 Tray timeout

Specifies the display time (in seconds) for service notifications.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 60 |
| Default value: | 0 |

23.45 TREEDEPTH system variable

23.45.1 Tree depth

Specifies the maximum number of times the index can be divided into branches to enhance performance. When set to zero, entities are always processed in database order, with no performance benefit from spatial indexing.

When set to a positive value, spatial indexing is applied and supports up to five digits. The first three digits are for model space and the remaining digits are for paper space.



When set to a negative value, the Z coordinates of all entities are ignored, whether in model space or paper space. Because z coordinates are ignored, a negative value is most appropriate and efficient for 2D drawings.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 3020 |
| Possible values: | 0: Suppress spatial indexing >0: Apply spatial indexing <0: Ignore Z coordinates |

23.46 TREEMAX system variable

23.46.1 Tree maximum

When regenerating a drawing TREEMAX limits the use of memory by limiting the number of nodes in the spatial index (oct-tree). By imposing a fixed limit with TREEMAX, you can load drawings created on systems with more memory than your system and with a larger TREEDEPTH than your system can handle. These drawings, if left unchecked, have an oct-tree large enough to eventually consume more memory than is available to your computer. TREEMAX also provides a safeguard against experimentation with inappropriately high TREEDEPTH values.

| | |
|----------------|----------|
| Type: | Long |
| Saved in: | Registry |
| Default value: | 10000000 |

23.47 TRIMMODE system variable


23.47.1 Trim mode

Specifies whether the length of the selected entities or polyline segments for chamfers and fillets are adjusted (trimmed or lengthened).

| | |
|----------------|----------|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |



| | |
|------------------|---|
| Possible values: | Off (0): Don't trim selected edges to the endpoints of chamfer lines and fillet arcs On (1): Trim selected edges to the endpoints of chamfer lines and fillet arcs |
|------------------|---|

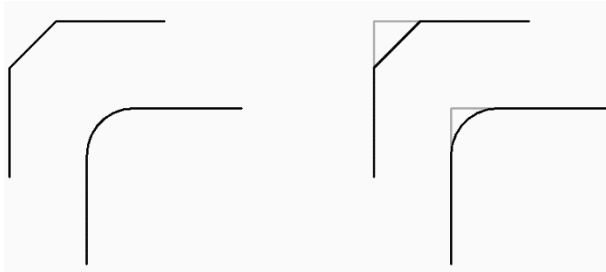

23.48 TRUSTEDPATHS system variable

23.48.1 Trusted executable file locations

Folders from which executable files may be loaded.

Read-only

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | |

23.49 TSPACEFAC system variable

23.49.1 Text space factor

Specifies the line spacing distance of multiline text measured as a factor of text height. Values between 0.25 and 4 are accepted.

| | |
|----------------|-------------|
| Type: | Real |
| Saved in: | Not saved |
| Range: | 0.25 to 4.0 |
| Default value: | 1.0 |



23.50 TSPACETYPE system variable

23.50.1 Text space type

Specifies the type of line spacing used for multiline text.

- At least: adjusts line spacing based on the tallest character(s) in a line.
- Exactly: uses the specified line spacing, regardless of individual character sizes.

Note: The mtexts created with the MLEADER command are also influenced by this system variable's value.

| | |
|------------------|---------------------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 2 |
| Default value: | 1 |
| Possible values: | 1: At least 2: Exactly |

23.51 TSTACKALIGN system variable

23.51.1 Text stack align

Specifies the vertical alignment of stacked text: bottom, center or top.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Align bottom 1: Align center 2: Align top |



23.52 TSTACKSIZE system variable

23.52.1 Text stack size

Specifies the percentage at which the stacked text fraction height is relative to the current height of the selected text. Values between 25 and 125 are accepted.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 25 to 125 |
| Default value: | 70 |

23.53 TTFASTTEXT system variable

23.53.1 TrueType Text displaying mode

Flags controlling whether TrueType text is drawn as vectorized graphics or as text.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Displays text as vectorized graphics On (1): Displays text as text |



24. U

24.1 UCSAXISANG system variable

24.1.1 UCS axis angle

Specifies the default angle, in degrees, for rotating the UCS around its X, Y, or Z axis, using the UCS command.

| | |
|----------------|----------|
| Type: | Real |
| Saved in: | Registry |
| Range: | 5 to 180 |
| Default value: | 90 |

24.2 UCSBASE system variable

24.2.1 UCS base

Specifies the name of the UCS which defines the orthographic UCS.

| | |
|----------------|---------|
| Type: | String |
| Saved in: | Drawing |
| Default value: | "WORLD" |

24.3 UCSDETECT system variable

24.3.1 UCS detect

Specifies the dynamic UCS. The dynamic UCS is a temporary UCS that is automatically activated when the cursor hovers over a 3D solid's face or 2D entity. A negative value is the same as 0, but helps in storing the earlier value. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -3 to 3 |
| Default value: | 1 |



| | |
|-------------------|--|
| Possible options: | negative: Disable dynamic UCS 1: Enable for faces of 3D solid and regions. 2: Enable for 2D entities |
|-------------------|--|

24.4 UCSFOLLOW system variable

24.4.1 UCS follow

Specifies whether a plan view (A top view zoomed to extents) is generated automatically whenever the UCS changes. It is recommended to switch UCSDETECT off in this case.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't show plan view when changing UCS On (1): Show plan view when changing UCS |

24.5 UCSICON system variable

24.5.1 UCS icon

Specifies the display and position of the UCS icon for the current viewport. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 3 |
| Possible options: | 0: No icon 1: Show icon 2: at origin |

24.6 UCSICONPOS system variable

24.6.1 UCS icon position

Specifies the non-origin location of the UCS Icon.

BricsCAD only



| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 1 |
| Possible values: | 0: Lower right 1: Lower left 2: Upper right 3: Upper left |

24.7 UCSNAME system variable

24.7.1 UCS name

Specifies the name of the UCS for the current viewport in the current working space.

Read-only

| | |
|-----------|---------|
| Type: | String |
| Saved in: | Drawing |

24.8 UCSORG system variable

24.8.1 UCS origin

Stores the current coordinate system's origin point for the current viewport.

Read-only

| | |
|----------------|----------|
| Type: | 3D point |
| Saved in: | Drawing |
| Default value: | 0,0,0 |



24.9 UCSORTHO system variable

24.9.1 UCS orthographic

Specifies whether or not the related orthographic UCS setting is activated automatically when selecting an orthographic view with the -VIEW command or the LookFrom widget (unless NAVVCUBEORIENT is set to UCS).

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | Off |
| Possible values: | Off (0): When an orthographic view is selected, don't automatically activate the related orthographic UCS On (1): When an orthographic view is selected, automatically activate the related orthographic UCS |

24.10 UCSVIEW system variable

24.10.1 UCS view

Specifies whether or not the current UCS will be saved with a named view.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't save current UCS with named view On (1): Save current UCS with named view |

24.11 UCSVP system variable

24.11.1 UCS viewports

Specifies whether the UCS in all viewports is fixed or changes to reflect the currently active viewport's UCS.

| | |
|-----------|---------|
| Type: | Boolean |
| Saved in: | Drawing |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Not locked (UCS stored in viewport) On (1): Locked (UCS stored in viewport) |

24.12 UCSXDIR system variable

24.12.1 UCS X direction

Stores the current coordinate system's X direction for the current viewport.

Read-only

| | |
|----------------|----------|
| Type: | 3D point |
| Saved in: | Drawing |
| Default value: | 1,0,0 |

24.13 UCSYDIR system variable

24.13.1 UCS Y direction

Stores the current coordinate system's Y direction for the current viewport.

Read-only

| | |
|----------------|----------|
| Type: | 3D point |
| Saved in: | Drawing |
| Default value: | 0,1,0 |

24.14 UNDOCTL system variable

24.14.1 Undo control

Specifies the state of the UNDO command. The value is stored as a bitcode using the sum of the values of all selected options.

Read-only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |



| | |
|-------------------|--|
| Default value: | 5 |
| Possible options: | 0: Undo off 1: Undo on 2: Only one command can be undone 4: Auto is turned on 8: A group is currently active |

24.15 UNDOMARKS system variable

24.15.1 Undo marks

Shows the current number of marks placed in the Undo control using the MARK option. The MARK and BACK options are not available if a group is currently active.

Read-only

| | |
|-----------|-----------|
| Type: | Short |
| Saved in: | Not saved |

24.16 UNITESURFACES system variable

Unite adjacent surfaces.

Determines whether adjacent extruded/revolved surfaces are united or not.

The UNITESURFACES system variable is one of the four system variables found under the **Extrude mode** group.

BricsCAD only

| | |
|-------------------|---|
| Type: | Short |
| Saved in: | Workspace |
| Default value: | 0 - for Workspaces Drafting and Modeling 1 - for Workspaces Mechanical and BIM |
| Possible options: | Off (0): Unite adjacent surfaces On (1): Do not unite adjacent surfaces |

24.17 UNITMODE system variable

24.17.1 Unit mode

Specifies how Imperial units are displayed.



| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | Off |
| Possible values: | Off (0): Don't remove spaces when converting distances or angles to text On (1): Remove spaces when converting distances or angles to text |

24.18 USECOMMUNICATOR system variable

24.18.1 Use Communicator

Indicates that a Communicator license was activated. If the license is changed, the new level comes into effect after restarting the program.

- 0: no license, Communicator import and export formats are not available.
- 1: trial, runs Communicator in trial mode, expiring after 30 days.
- 2: full, runs the full communicator import-export set.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Preference |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Not using Communicator 1: Using Communicator Trial 2: Using Communicator |

24.19 USENEWRIBBON system variable

24.19.1 Use the new Ribbon

Controls whether the new Ribbon is used.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|------------------|--|
| Default value: | Off |
| Possible values: | Off (0): Disable the new Ribbon On (1): Enable the new Ribbon after restart |

24.20 USERI1 system variable

24.20.1 User integer 1

First of 5 variables that can be used by the user to store integer values.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |

24.21 USERI2 system variable

24.21.1 User integer 2

Second of 5 variables that can be used by the user to store integer values.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |

24.22 USERI3 system variable

24.22.1 User integer 3

Third of 5 variables that can be used by the user to store integer values.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |



24.23 USERI4 system variable

24.23.1 User integer 4

Fourth of 5 variables that can be used by the user to store integer values.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |

24.24 USERI5 system variable

24.24.1 User integer 5

Fifth of 5 variables that can be used by the user to store integer values.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Default value: | 0 |

24.25 USERR1 system variable

24.25.1 User real 1

First of 5 variables that can be used by the user to store real numerical values.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

24.26 USERR2 system variable

24.26.1 User real 2

Second of 5 variables that can be used by the user to store real numerical values.

| | |
|-------|------|
| Type: | Real |
|-------|------|



| | |
|----------------|---------|
| Saved in: | Drawing |
| Default value: | 0.0 |

24.27 USERR3 system variable

24.27.1 User real 3

Third of 5 variables that can be used by the user to store real numerical values.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

24.28 USERR4 system variable

24.28.1 User real 4

Fourth of 5 variables that can be used by the user to store real numerical values.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

24.29 USERR5 system variable

24.29.1 User real 5

Fifth of 5 variables that can be used by the user to store real numerical values.

| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |



24.30 USERS1 system variable

24.30.1 User string 1

First of 5 variables that can be used by the user to store string values.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

24.31 USERS2 system variable

24.31.1 User string 2

Second of 5 variables that can be used by the user to store string values.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

24.32 USERS3 system variable

24.32.1 User string 3

Third of 5 variables that can be used by the user to store string values.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

24.33 USERS4 system variable

24.33.1 User string 4

Fourth of 5 variables that can be used by the user to store string values.

| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

24.34 USERS5 system variable

24.34.1 User string 5

Fifth of 5 variables that can be used by the user to store string values.



| | |
|-----------|-----------|
| Type: | String |
| Saved in: | Not saved |

24.35 USESTANDARDOPENFILEDIALOG system variable

24.35.1 Use standard open file dialog (Windows)

Specifies whether to show an additional folder in the file dialog for the open, save as and insert commands.

BricsCAD only

| | |
|----------------|------------|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | Off |



25. V

25.1 VBAMACROS system variable

25.1.1 Enable macros

Specifies whether macros are enabled when loading a VBA-project.

BricsCAD only

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Preference |
| Default value: | On |
| Possible values: | Off (0): Disable macros on loading VBA-project On (1): Enable macros on loading VBA-project |

25.2 VENDORNAME system variable

25.2.1 Vendor name

Shows the vendor name.

BricsCAD only

Read-only

| | |
|----------------|-----------|
| Type: | String |
| Saved in: | Not saved |
| Default value: | "Bricsys" |

25.3 VERBOSEBIMSECTIONUPDATE system variable

25.3.1 Additional diagnostics while section update

Defines whether BIMSECTIONUPDATE prints additional diagnostics.

BricsCAD only

| | |
|-----------|----------|
| Type: | Boolean |
| Saved in: | Registry |



| | |
|----------------|---|
| Default value: | 1 |
|----------------|---|

25.4 VERSIONCONTROLCONFIGPATH system variable

25.4.1 Version Control config path

Specifies the folder where version control settings are configured.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

25.5 VERSIONCONTROLDOWNLOADPATH system variable

25.5.1 Version Control download path

Specifies the folder where version control projects should be saved by default.

BricsCAD only

| | |
|-----------|----------|
| Type: | String |
| Saved in: | Registry |

25.6 VERSIONCUSTOMIZABLEFILES system variable

25.6.1 Version customizable files

Current version of the CUI and PGP files.

Read-only

| | |
|-----------|------------|
| Type: | String |
| Saved in: | Preference |

25.7 VIEWCTR system variable

25.7.1 View center

Specifies the current viewport's center of view, expressed in UCS coordinates.

Read-only

| | |
|-------|----------|
| Type: | 3D point |
|-------|----------|



| | |
|-----------|---------|
| Saved in: | Drawing |
|-----------|---------|

25.8 VIEWDIR system variable

25.8.1 View direction

Specifies the current viewport's viewing direction, expressed in UCS coordinates.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |

25.9 VIEWMODE system variable

25.9.1 View mode

Specifies the current viewport's View mode. The value is stored as a bitcode using the sum of the values of all selected options. If 'Front clip not at eye' (16) is on, the front clip distance (FRONTZ) sets the front clipping plane. If off, the front clipping plane passes through the camera point (vectors behind the camera are not displayed). This flag is ignored if the front-clipping bit (2) is off.

Read-only

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 31 |
| Possible options: | 0: Turned off 1: Perspective view active 2: Front clipping on 4: Back clipping on 8: UCS Follow mode on 16: Front clip not at eye |

25.10 VIEWSIZE system variable

25.10.1 View size

Specifies the view height, measured in drawing units, for the current viewport.

Read-only



| | |
|----------------|---------|
| Type: | Real |
| Saved in: | Drawing |
| Default value: | 0.0 |

25.11 VIEWTWIST system variable

25.11.1 View twist

Specifies the view twist angle, measured relative to the WCS, for the current viewport.

Read-only

| | |
|-----------|---------|
| Type: | Real |
| Saved in: | Drawing |

25.12 VIEWUPDATEAUTO system variable

25.12.1 Automatically update drawing views

Specifies whether model documentation drawing views are updated automatically when the source model changes. When turned off, the **ViewUpdate** command manually updates the drawing views created by **ViewBase** and **ViewSection** commands. This only works in paper space.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Drawing |
| Default value: | On |
| Possible values: | Off (0): Don't update drawing views automatically On (1): Update drawing views automatically |

25.13 VISRETAIN system variable

25.13.1 Visibility retain

Specifies the visibility, color, linetype, lineweight, and, if PSTYLEPOLICY is set to OFF (0), plotstyles of xref-dependent layers. It also specifies whether nested xref path changes are saved.

If Off (0): Changes made to xref-dependent layers in the current drawing are valid in the current session only and are Not saved with the drawing. When the current drawing is reopened, the layer table is reloaded



from the reference drawing and the current drawing reflects those settings. The layer settings affected are: On, Off, Freeze, Thaw, Color, Ltype, LWeight, and PStyle (if PSTYLEPOLICY is set to 0).

If On (1): Layer settings are saved with the current drawing's layer table and persist from session to session.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Off, the layer table, as stored in the reference drawing (Xref) takes precedence 1: On, Xref-dependent layer changes made in the current drawing take precedence |

25.14 VOLUMEPREC system variable

25.14.1 Volume precision

Specifies the number of decimal places displayed for volumes when the volume bit of PROPUNITS is on. If negative, LUPREC (Linear Unit Precision) is used.

BricsCAD only

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -1 to 8 |
| Default value: | -1 |



| | |
|------------------|---|
| Possible values: | -1: Use LUPREC 0 1: 0.0 2: 0.00 3: 0.000 4: 0.0000 5: 0.00000 6: 0.000000 7: 0.0000000 8: 0.00000000 |
|------------------|---|

25.15 VOLUMEUNITS system variable

25.15.1 Volume units

Specifies a list of units used for displaying volumes when the volume bit of PROPUNITS is on. If empty, all volumes are displayed in the current drawing unit. When one or more units are selected in the VolumeUnits dialog box, the program uses the unit that is the best fit. The Format Volume Properties bit of the Property Units variable must be turned on.

BricsCAD only

| | |
|----------------|--------------------------|
| Type: | String |
| Saved in: | Registry |
| Default value: | "in ft mi μm mm cm m km" |

25.16 VPMAXIMIZEDSTATE system variable

25.16.1 Viewport maximized

Displays a value to indicate whether the viewport is maximized. You cannot plot or publish when the viewport is maximized.

AutoCAD only

Read-only

| | |
|----------------|-----------|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | Off |



| | |
|------------------|---|
| Possible values: | Off (0): Viewport is not maximized On (1): Viewport is maximized |
|------------------|---|

25.17 VPROTATEASSOC system variable

25.17.1 Rotate view

Allow rotation of a view within a viewport when a viewport is rotated.

| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Rotate view off On (1): Rotate view on |

25.18 VSMAX system variable

25.18.1 Virtual screen maximum

Shows the coordinates of the upper-right corner of the current viewport's virtual screen.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |

25.19 VSMIN system variable

25.19.1 Virtual screen minimum

Shows the coordinates of the lower-left corner of the current viewport's virtual screen.

Read-only

| | |
|-----------|----------|
| Type: | 3D point |
| Saved in: | Drawing |



25.20 VTDURATION system variable

25.20.1 View transition duration

Specifies the duration of animated view transitions in milliseconds.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 5000 |
| Default value: | 750 |

25.21 VTENABLE system variable

25.21.1 Enable view transitions

Specifies whether animated view transitions are enabled for zoom/pan and/or for view rotation operations. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 7 |
| Default value: | 3 |
| Possible options: | 1: For zoom/pan 2: For rotation 4: For unattended mode |

25.22 VTFPS system variable

25.22.1 View transition minimum FPS

Specifies the minimum FPS (frames per second) required for enabling animated view transitions. That is 7 by default, which means that the redraw time should take less than 143 ($=1000/7$) milliseconds. If the computer is not capable to redraw the view fast enough, no animation will be available.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |



| | |
|----------------|---------|
| Range: | 1 to 30 |
| Default value: | 7 |



26. W

26.1 WARNINGMESSAGES system variable

26.1.1 Warning messages

Specifies whether warning messages are displayed in certain situations. The value is stored as a bitcode using the sum of the values of all selected options.

BricsCAD only

| | |
|-------------------|---|
| Type: | Long |
| Saved in: | Preference |
| Default value: | 1048575 |
| Possible options: | <ul style="list-style-type: none">1: Selecting 3D context with hardware rendering off2: Modifying tool property in Customize dialog4: Deleting sheet custom property8: Moving entities to frozen or off layer16: Saving to previous version not supporting some entities32: Detecting modified attachments when opening the parent drawing64: Creating new layer not matching the current layer filter128: Render: Tile sizes between 4 and 127 are processed as 128256: Expanding category mass in properties panel512: Deleting an item in Customize dialog1024: Publish: Save sheet list2048: Delete layouts in Page Setup Explorer4096: Mass properties calculation takes long time8192: Array editing state16384: Incompatible units32768: Modified block definition will cause all related block references update65536: A Data Link has changed, Any tables using this link may need to be updated131072: VIEWBASE usage for architectural drawings262144: Expanding a closed category in properties panel524288: Empty category in properties panel is removed |

26.2 WHIPARC system variable

26.2.1 Whip arcs

Specifies whether circles and circular arcs display as true circles or as a series of vectors.



| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 1 |
| Default value: | 1 |
| Possible values: | 0: Display circles and arcs as a series of vectors 1: Display as true circles and arcs |

26.3 WHIPTHREAD system variable

26.3.1 Whip thread

Specifies whether regen and redraw will be done multithreaded, if the machine has multiple processors. Not supported yet. When multithreaded processing is used for redraw operations (value 2 or 3), the order of entities specified with the DRAWORDER command is not guaranteed to be preserved for display but is preserved for plotting. The value is stored as a bitcode using the sum of the values of all selected options.

| | |
|-------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 3 |
| Default value: | 0 |
| Possible options: | 0: No multithreaded processing 1: Regeneration multithreaded processing 2: Redraw multithreaded processing |

26.4 WINDOWAREACOLOR system variable

26.4.1 Window area color

Specifies the color for window selection areas. In effect only when SELECTIONAREA setting is on.

| | |
|-----------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 1 to 255 |



| | |
|----------------|-----|
| Default value: | 150 |
|----------------|-----|

26.5 WIPEOUTFRAME system variable

26.5.1 Wipeout frame

Specifies the display of frames for wipeout entities. If 0: frames are temporarily displayed for entity selection and selection preview.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Hide wipeout frames 1: Display and plot wipeout frames 2: Display but do not plot wipeout frames |

26.6 WMFBKGND system variable

26.6.1 Windows Meta File background

Specifies how the background of a WMF (Windows Meta File) or Copy Clip is created and displayed in other applications.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Transparent background; foreground depends on WMFFOREGND On (1): Current background color; foreground remains unchanged |

26.7 WMFFOREGND system variable

26.7.1 Windows Meta File foreground

Specifies how the foreground of a WMF (Windows Meta File) or Copy Clip is created and displayed in other applications. WMFFOREGND applies only when WMFBKGND is set to 0.



| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | Off (0): Ensure foreground color is darker than background color On (1): Ensure foreground color is lighter than background color |

26.8 WNDLMAIN system variable

26.8.1 Main window state

Stores the state of the main graphics window.

BricsCAD only

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Normal 1: Minimized 2: Maximized |

26.9 WNDLSCRL system variable

26.9.1 Window scrollbars (Windows)

Specifies the display of scrollbars on the main graphics window.

BricsCAD only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Workspace |
| Default value: | Off |
| Possible values: | Off (0): Don't show scrollbars On (1): Show scrollbars |



26.10 WNDLTEXT system variable

26.10.1 Text window state

Stores the state of the text window.

BricsCAD only

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Possible values: | 0: Hidden 1: Normal 2: Minimized 3: Maximized |

26.11 WNDPMAIN system variable

26.11.1 Main window top left

Stores the top left position of the main graphics window.

BricsCAD only

| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Registry |

26.12 WNDPTEXT system variable

26.12.1 Text window top left

Stores the top left position of the text window.

BricsCAD only

| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Registry |

26.13 WNDMAIN system variable

26.13.1 Main window size

Stores the size of the main graphics window.

BricsCAD only



| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Registry |

26.14 WNDSTEXT system variable

26.14.1 Text window size

Stores the size of the text window.

BricsCAD only

| | |
|-----------|----------|
| Type: | 2D point |
| Saved in: | Registry |

26.15 WORLDUCS system variable

26.15.1 World UCS

Specifies whether or not the UCS is the same as the WCS.

Read-only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Possible values: | Off (0): UCS doesn't match the WCS On (1): UCS matches the WCS |

26.16 WORLDVIEW system variable

26.16.1 World view

Specifies whether the current UCS changes to the WCS during DVIEW or VPOINT commands.

| | |
|----------------|---------|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 1 |



| | |
|------------------|---|
| Possible values: | 0: UCS remains unchanged 1: UCS changes to the WCS for the duration of the command; the command input is relative to the current UCS |
|------------------|---|

26.17 WRITESTAT system variable

26.17.1 Write status

Shows the state in which a drawing is opened: read-only or that it can be written to. This variable is used in lisp to determine the write status of drawing.

Read-only

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Not saved |
| Default value: | On |
| Possible values: | Off (0): Can't write to the drawing On (1): Can write to the drawing |

26.18 WSAUTOSAVE system variable

26.18.1 Workspace autosave

Specifies whether changes made to a workspace are automatically saved.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Default value: | On |
| Possible values: | Off (0): Don't save automatically On (1): Save automatically |

26.19 WSCURRENT system variable

26.19.1 Current workspace

The name of the current workspace.

| | |
|-------|--------|
| Type: | String |
|-------|--------|



| | |
|-----------|----------|
| Saved in: | Registry |
|-----------|----------|



27. X

27.1 XCLIPFRAME system variable

27.1.1 Xref clipping frame

Specifies the display of xref clipping boundaries. The FRAME system variable overrides the XCLIPFRAME setting.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 2 |
| Default value: | 2 |
| Possible values: | 0: Hide clipping boundaries 1: Display and plot clipping boundaries 2: Display but do not plot clipping boundaries |

27.2 XDWGFADECTL system variable

27.2.1 Xref database fade control

Specifies the fading level for XREF inserts. Non-positive values disable fading.

| | |
|----------------|-----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | -90 to 90 |
| Default value: | 70 |

27.3 XEDIT system variable

27.3.1 Xref editable

Specifies the in-place editing of the current drawing if referenced by another drawing.

| | |
|-----------|---------|
| Type: | Boolean |
| Saved in: | Drawing |



| | |
|------------------|---|
| Default value: | On |
| Possible values: | Off (0): Can't use in-place reference editing On (1): Can use in-place reference editing |

27.4 XFADECTL system variable

27.4.1 Reference editing fade control

Specifies the fading level for references which are edited in-place. This setting affects only the entities that are not being edited in the reference. Values between 0 and 90 are accepted.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 90 |
| Default value: | 50 |

27.5 XLOADCTL system variable

27.5.1 Xref load control

Not supported yet. Specifies xref demand-loading and determines whether a copy or the original drawing is opened.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 2 |
| Default value: | 1 |
| Possible values: | 0: Turn off demand-loading; the entire drawing is loaded 1: Turn on demand-loading; referenced drawings are kept open and locked 2: Turn on demand-loading; copies of referenced drawings are opened and locked; referenced drawings are not locked |



27.6 XLOADPATH system variable

27.6.1 Xref load path

Specifies a path to store temporary copies of demand-loaded xrefs (see also Xref load control).

| | |
|-----------|-----------------|
| Type: | String Standard |
| Saved in: | Registry |

27.7 XNOTIFYTIME system variable

27.7.1 Xnotify time

Specifies a number of minutes between checking for modified xrefs, images and PDF documents. This is if XREFNOTIFY, IMAGENOTIFY and/or PDFNOTIFY is ON.

| | |
|----------------|------------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 0 to 10080 |
| Default value: | 5 |

27.8 XREFCTL system variable

27.8.1 Xref control

Toggles the creation of external reference log files (XLG) on/off.

| | |
|------------------|---|
| Type: | Boolean |
| Saved in: | Registry |
| Range: | Off |
| Possible values: | Off (0): Don't write log files On (1): Write log files |

27.9 XREFNOTIFY system variable

27.9.1 Xref notify

Enables/disables the notification about missing xrefs when opening the parent drawing.



| | |
|------------------|--|
| Type: | Boolean |
| Saved in: | Registry |
| Possible values: | Off (0): Disable xref notification On (1): Enable xref notification |

27.10 XREFOVERRIDE system variable

27.10.1 Xref override

Specifies the display of entity visual properties (such as color, linetype, linewidth, transparency, or plot style) on referenced layers.

If Off (0): When the properties of the entities on the XREF drawing are set to ByLayer, any changes to the xref layer properties are displayed in the current drawing.

If On (1): When the properties of the entities on the XREF drawing are not set to ByLayer, entities on xref layers are treated as if their properties are set to ByLayer. And every external reference layer can have its own set of layer overrides.

| | |
|------------------|---|
| Type: | Short |
| Saved in: | Drawing |
| Range: | 0 to 1 |
| Default value: | 0 |
| Possible values: | Off (0): Only ByLayer properties of the entities in the XREF drawing can be changed On (1): All properties of entities in the XREF drawing can be changed by its original layer property |



28. Y



29. Z

29.1 ZOOMFACTOR system variable

29.1.1 Zoom factor

Specifies the incremental change in zoom with each mouse-wheel action, whether forward or backward. When zooming in, the incremental step decreases gradually allowing to focus on a particularly detail easily. Values between 3 and 100 are accepted. The higher the number, the more the change.

| | |
|----------------|----------|
| Type: | Short |
| Saved in: | Registry |
| Range: | 3 to 100 |
| Default value: | 40 |

29.2 ZOOMWHEEL system variable

29.2.1 Mouse wheel zoom direction

Toggles mouse wheel zoom direction.

| | |
|------------------|--|
| Type: | Short |
| Saved in: | Registry |
| Default value: | 0 |
| Possible values: | 0: Move wheel forward zooms in; move wheel back zooms out 1: Move wheel forward zooms out; move wheel back zooms in |